



DROCON Ninja Propeller Replacement

This guide will help you replace the propellers of the DROCON Ninja DC-014 Drone.

Written By: Taylor Ullmann




INTRODUCTION

This guide is a replacement guide for the propellers on the DROCON Ninja DC-014 drone. The propellers are the part of the device that spins, which allows the drone to fly. If the blades are chipped or bent they may need to be replaced. To determine if the propeller needs replacement check out the troubleshooting guide linked [here](#). You will not need any tools for this guide and there are no difficult steps required.


Step 1 — Battery



 Make sure the drone is powered off before beginning the battery replacement.

- To turn the drone off, press and hold the black button on the top of the drone until all lights are off.
- Firmly grasp the battery tab between your thumb and index finger.
- Pull the battery away from the drone's body

Step 2 — Propeller

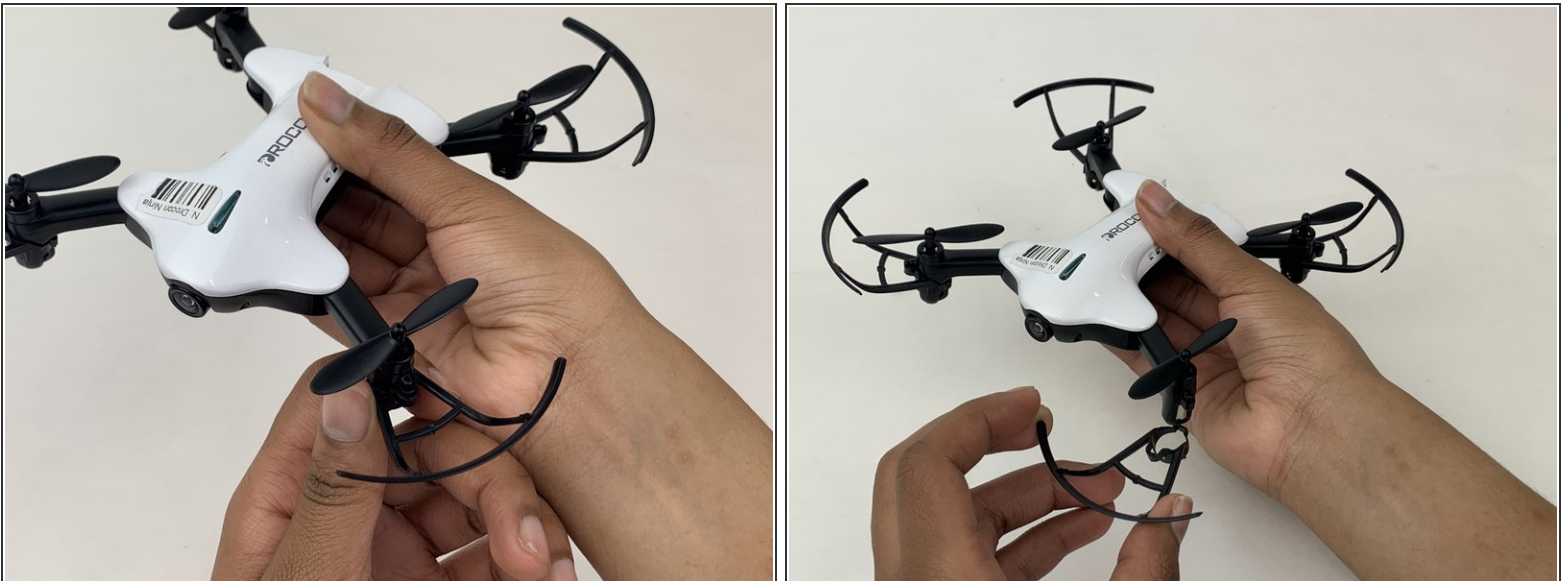

- Firmly grasp the blade guard from the bottom of the drone
- Pull the blade guard straight down away from motor.

Step 3



- i** Take note of the letter printed on the bottom of the propeller. Make sure the replacement propeller has the same letter.
- Grasp the center of the propeller that needs to be replaced.
 - Pull the propeller directly up and away from the motor.

To reassemble your device, follow these instructions in reverse order.