



Classen Sod Cutter SC18AHDCA 2019 Blade Replacement

How to remove and replace the blade for the Classen Sod Cutter SC18AHDCA.

Written By: Arthur Shi



INTRODUCTION

Follow this guide to remove and replace the cutting blade for the Classen Sod Cutter SC18AHDCA.



TOOLS:


- [Wheel Chocks](#) (1)
- [1/2" Socket](#) (1)
- [Socket Wrench](#) (1)
- [1/2" Combination Wrench](#) (1)





PARTS:

- [Classen Blade, 18" Sod Cutter 1 C100016.7](#) (1)

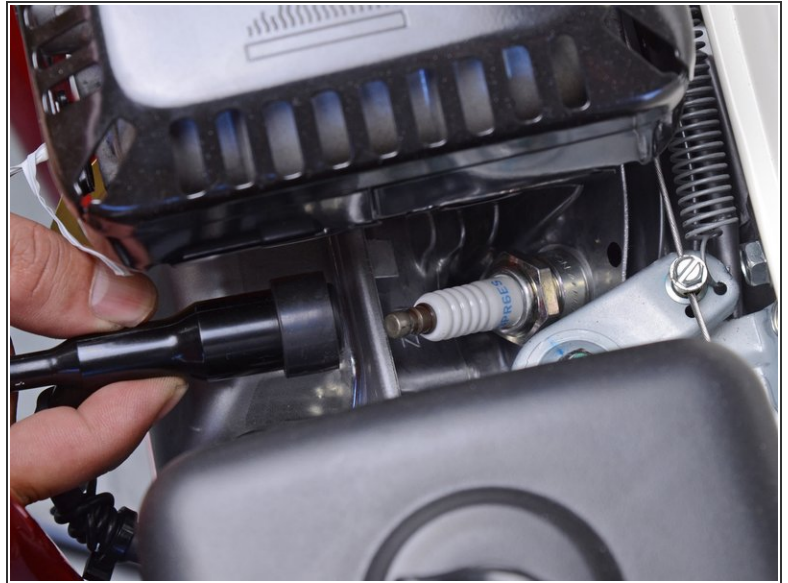Step 1 — Safety precautions



 Before you begin, make sure that the machine is turned off.

 For safety purposes, disconnect the spark plug.


- Grab the plastic housing at the end of the spark plug wire.
- Pull firmly to disconnect the wire from the spark plug.

Step 2




- Place wheel chocks against the roller and rear wheel to prevent the machine from moving.


Step 3 — Unscrew the blade

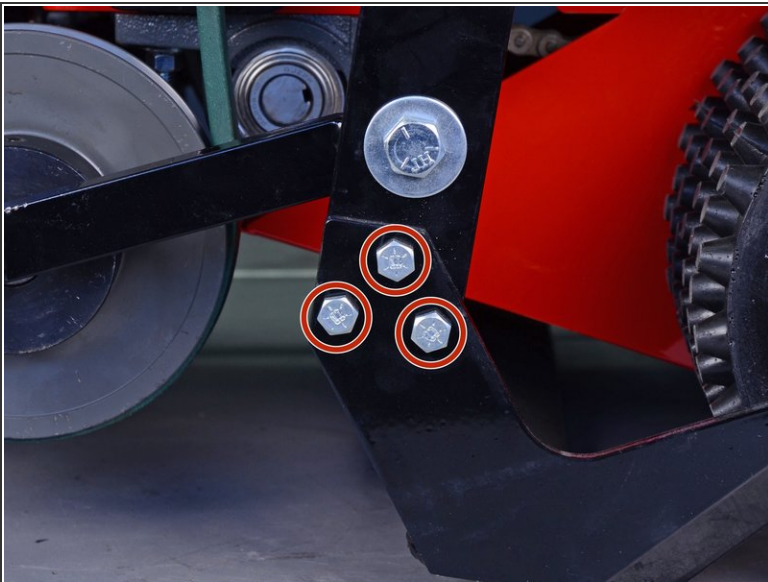

- Use a 1/2" socket wrench to remove the six 1 inch-long bolts securing both ends of the blade. You may need to use a 1/2" combination wrench to hold the nuts in place.

Step 4 — Remove the blade

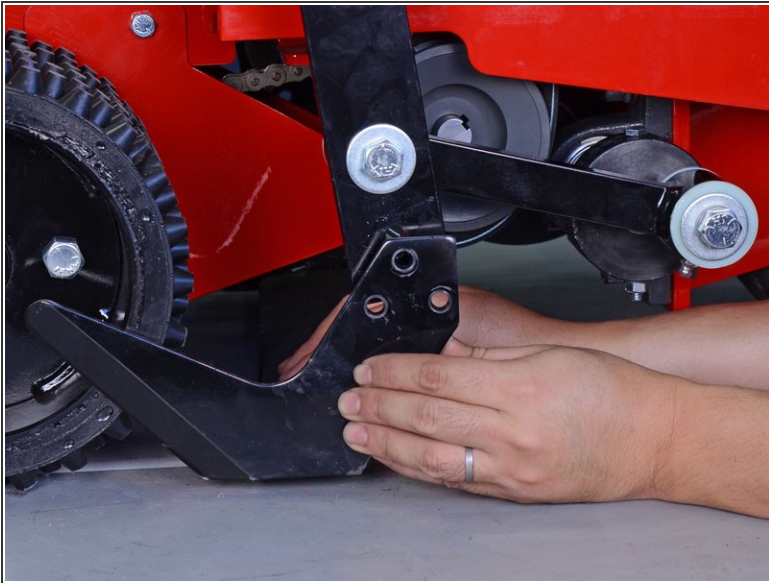

 The blade can be very sharp! Do not handle the blade from the cutting edge.

- Grasp the back of the blade and slide it away from the mount.
- Remove the blade.

To reassemble your device, follow these instructions in reverse order.