



# ASUS ROG Strix GL503VD-DB71 Keyboard Keys Replacement

In this guide we will show you how to replace the keyboard keys on your ASUS ROG Strix GL503VD-DB71 laptop by following these steps.

Written By: Cameron Inman



## INTRODUCTION

If having problems with your laptop keyboard keys such as sticky keys, mistyping, or just keys not working at all, this guide will help. These symptoms can be found in our [troubleshooting](#) page. In this guide we will show you how to fix this issue by replacing the keyboard keys in your ASUS ROG Strix GL503VD-DB71 laptop. The keys are what you press on the keyboard in order to type anything. Keys can also make your laptop do commands such as open a new tab or go to a different window. When replacing any keys, make sure your laptop is powered off and disconnected from any external power source.



### TOOLS:

- [iFixit Opening Tools](#) (1)



### PARTS:


- [ASUS ROG Strix GL503VD-DB71 Replacement Key](#) (1)

## Step 1 — Keyboard Keys



- Find which key is missing/broken from the keyboard.

## Step 2

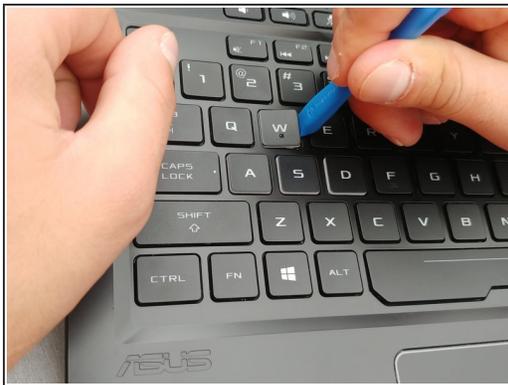

- Use the plastic opening tool to lift up on the side of the key until it pops out.

To reassemble your device, follow these instructions in reverse order.