



ASUS ROG Strix GL503VD-DB71 Display Replacement

This guide will show you how to replace the display on the ASUS ROG Strix GL503VD-DB71 laptop in a few simple steps.

Written By: Bryce Davis




INTRODUCTION

If having problems with your ASUS ROG Strix GL503VD-DB71 laptop display screen staying solid black when turning on, screen flickering, or even a cracked display screen you may need to replace the screen. Display symptoms can be found in our [\[\[ASUS ROG Strix GL503VD-DB71 Troubleshooting#troubleshooting\]\]](#) page. In this guide we will show you how to fix these issues by replacing the display in your ASUS ROG Strix GL503VD-DB71 laptop. The display of a laptop shows all the images and content on your screen of your laptop. When replacing the display make sure the laptop is turned off and unplugged from any power source. When handling the display use caution if there is any cracks in the screen and handle with care.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Display

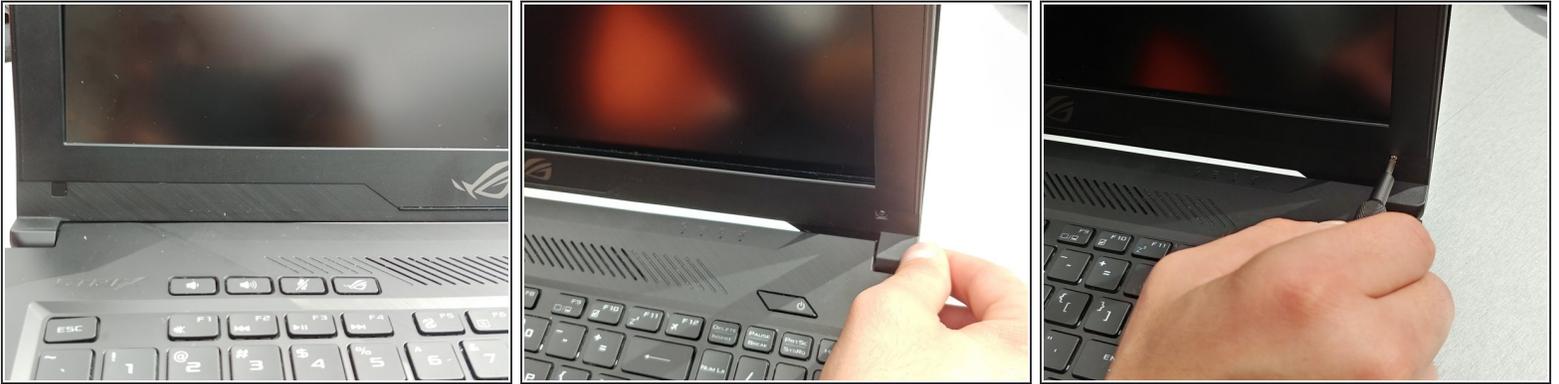

- Open the laptop where the screen is now showing
- Find the two stickers on the bottom of the display and remove them
- Use the Phillips #1 screwdriver to take out the two screws at the bottom of the display.

Step 2



- Use the plastic opening tool to remove the plastic bezel around the screen.
- Pry the remainder of the cover off of the hinges at the bottom of the sides of the display.

Step 3



- Using a Phillips #1 screwdriver, remove the four screws at the top and bottom of the display.
- Unplug the display from the rest of the laptop at the back bottom of the display.
- Remove the display.

To reassemble your device, follow these instructions in reverse order.