



Expansion Teardown

Teardown of the Seagate Expansion.

Written By: Dan





TOOLS:


- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Open the cover




- Using a flat head screwdriver or plastic tool

Step 2

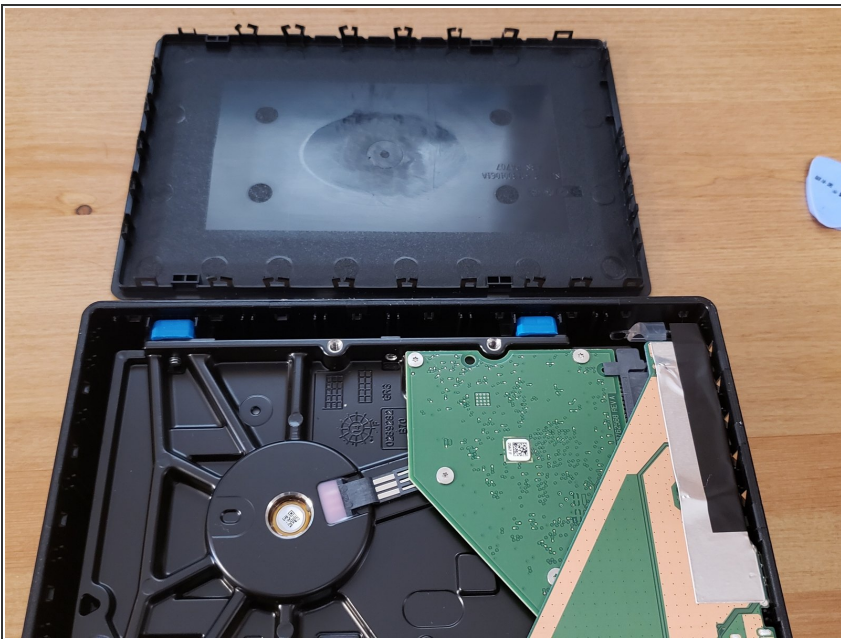


- Remove the cover

Step 3

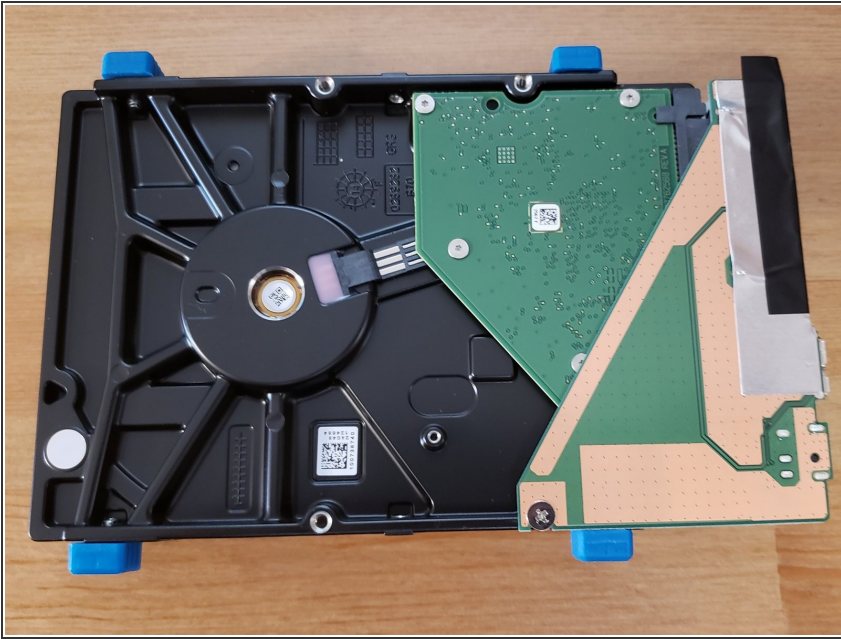


- Remove the drive from the case

Step 4

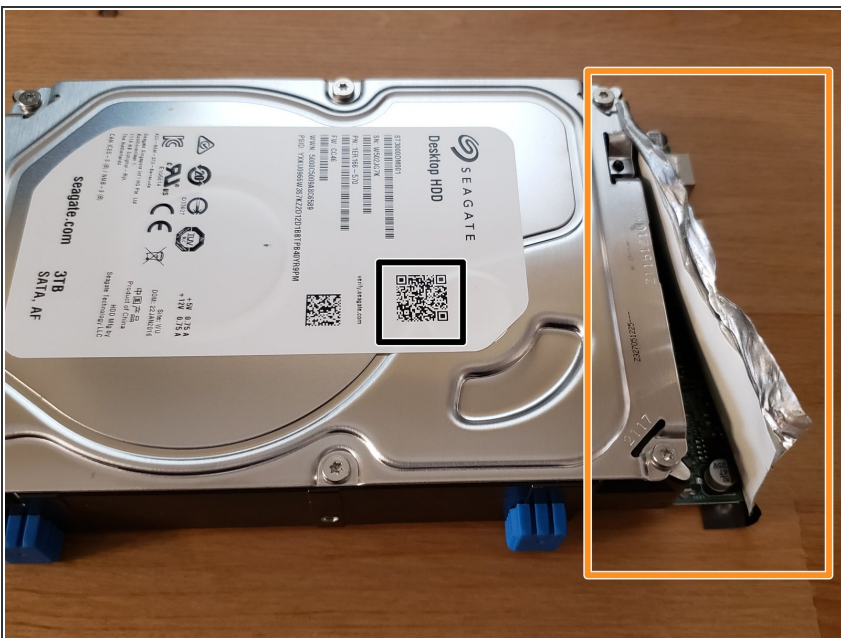

- Peel back the shielding

Step 5

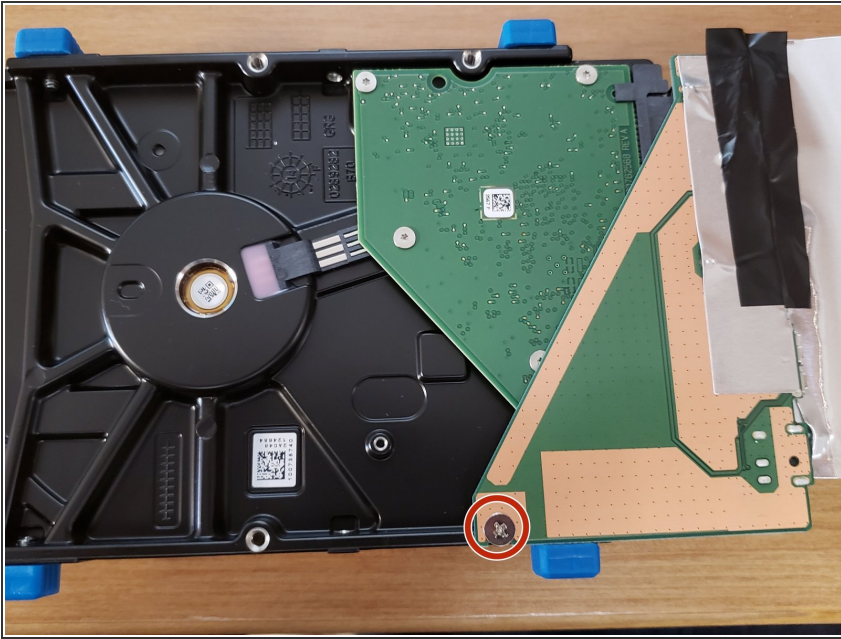

- Remove the Screw with the #02 screw driver

Step 6



- Separate the adapter form the sata port