

Viasys Avea UIM and Plastic Cover Disassembly

This guide aims to remove the UIM and in turn access the plastic cover attached to the Viasys Avea ventilator.

Written By: Anthony Hernandez



This document was generated on 2020-11-28 08:05:35 AM (MST).

INTRODUCTION

This guide aims to remove the UIM and in turn access the plastic cover attached.

Removing the UIM and plastic cover is discussed in service manual revision D:

Chapter 4: Assembly and Disassembly, Pg 50-51

PLEASE NOTE: This repair guide was developed by a student iFixit team based on Viasys/CareFusion's own service manual. Neither iFixit nor this repair guide is endorsed by or affiliated with Viasys or CareFusion.



TOOLS:


- Phillips #2 Screwdriver (1)
- 11/32" Nut driver (1)
- 3/8" Nut Driver (1)

Step 1 — Viasys Avea UIM and Plastic Cover Disassembly




 Remove the 'rubber collar' located at the UIM rear neck, by grasping one of the two rubber tabs at the bottom.
 Pull firmly in an "arcing" motion.

Step 2

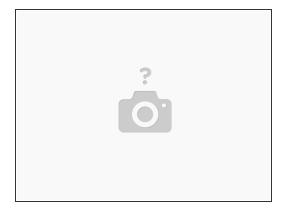

 Pull UIM forward and look for the Phillips Screw on the front arm cover. Remove (1) Phillips screw from the front arm cover. Remove the front arm cover.

Step 3

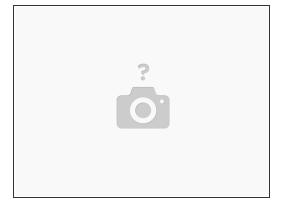


 Remove the two mounting screws now visible inside the 'back arm cover'. Tilt the UIM down and remove the 'back arm cover'.

Step 4




- Remove the (4) 11/32 KEP nuts that secure the 'plastic top cover' opening onto the chassis.
- Remove (2) Phillips screws that secure the 'plastic top cover' to the rear chassis.
- Slide the top 'plastic top cover' upward and forward away from the chassis.

Step 5

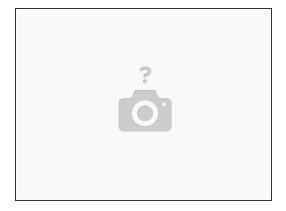

- Remove the (2) Phillips screws and washers that secure the HSSC Cable on the GDE. Unplug the HSSC Cable.
- Carefully feed the HSSC Cable through the 'plastic top cover' opening.

Step 6

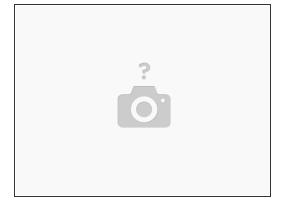

- While continuously supporting the UIM, remove (4) 3/8 nuts that fasten the UIM support arm onto the pneumatics.
- Lift UIM off of pneumatics and set aside.
- Remove plastic cover and set aside.

To reassemble your device, follow these instructions in reverse order.