



Honda EU2200IT A2 Air Filters Replacement

Remove and replace the air filters for the Honda EU2200IT generator.

Written By: Arthur Shi



INTRODUCTION

This guide shows how to remove and replace the air filters on the Honda EU2200IT generator.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)




PARTS:

- [Honda FILTER \(OUTER\) 17218-Z07-000](#) (1)
- [Honda ELEMENT, AIR CLEANER 17211-Z07-000](#) (1)

Step 1 — Honda EU2200IT A2 Safety Precautions



 Before you begin, make sure the generator is switched off and the generator is cool to the touch.

Step 2 — Disconnect the spark plug



- Lift and remove the spark plug cover.

Step 3



- Grab the plastic housing at the end of the spark plug wire.
- Pull firmly to disconnect the wire from the spark plug.

Step 4 — Remove the maintenance cover




- Use a Phillips #2 screwdriver to loosen the screw holding the maintenance cover in place.

Step 5



- Swing the top of the maintenance cover out.
- Remove the maintenance cover.

Step 6 — Remove the air filters

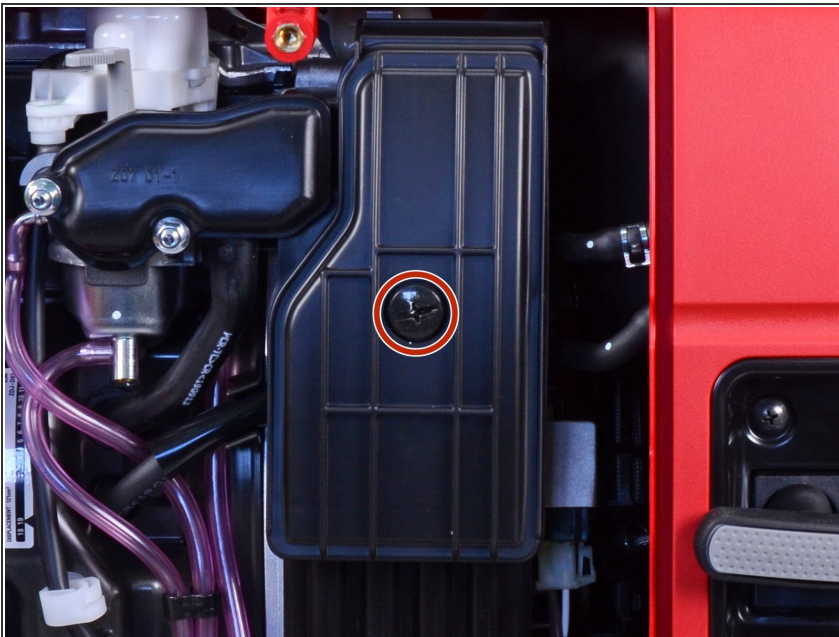


- Remove the Phillips screw securing the filter cover.
- ☑ During reassembly, be sure to tighten the screw to at least **1.7 ft-lb** to prevent it from loosening during operation.

Step 7



- Remove the filter cover.

Step 8

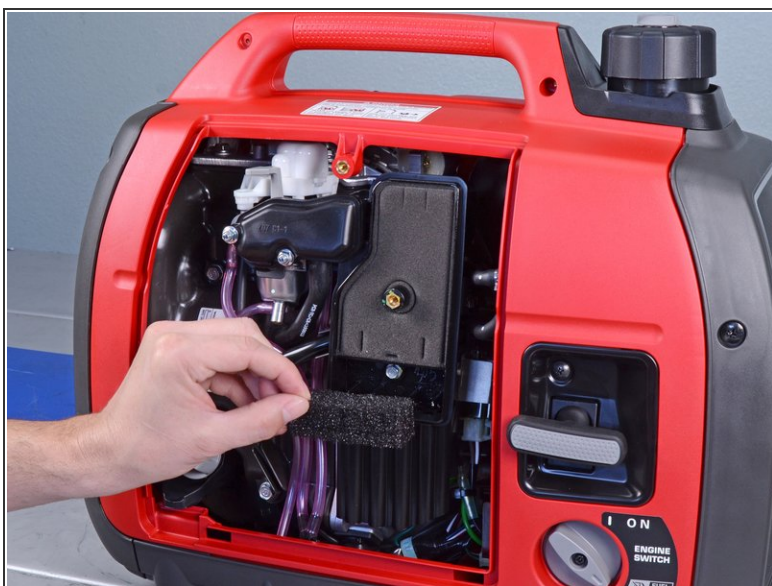

- Remove the air filters from the filter box.
- ⓘ To clean the filters:
 - Clean the filters in warm soapy water.
 - Allow the filters to dry thoroughly.
 - Dip the filters in clean engine oil, and squeeze out any excess oil.

To reassemble your device, follow these instructions in reverse order.