



# How to Change the Oil for the Honda EU2200IT A2

How to drain and refill the oil for the Honda EU2200IT generator.

Written By: Arthur Shi



## INTRODUCTION

This guide shows how to change the engine oil for the Honda EU2200IT generator. This procedure is a prerequisite for many other repairs.

Oil specifications:

SAE 10W-30

0.46 US quarts (0.44 L)



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [Oil Drain Pan](#) (1)




### PARTS:

- [Motor Oil 1qt 10W-30](#) (1)

## Step 1 — Honda EU2200iT A2 Safety Precautions



 Before you begin, make sure the generator is switched off and the generator is cool to the touch.

## Step 2 — Disconnect the spark plug



- Lift and remove the spark plug cover.



### Step 3



- Grab the plastic housing at the end of the spark plug wire.
- Pull firmly to disconnect the wire from the spark plug.

### Step 4 — Remove the maintenance cover



- Use a Phillips #2 screwdriver to loosen the screw holding the maintenance cover in place.

## Step 5



- Swing the top of the maintenance cover out.
- Remove the maintenance cover.



## Step 6 — Drain the engine oil



- Unscrew and remove the oil filler cap.



## Step 7

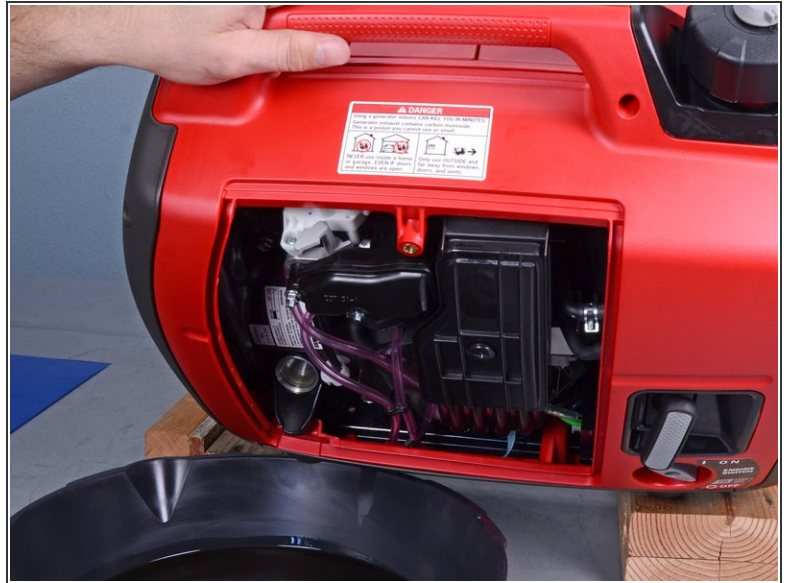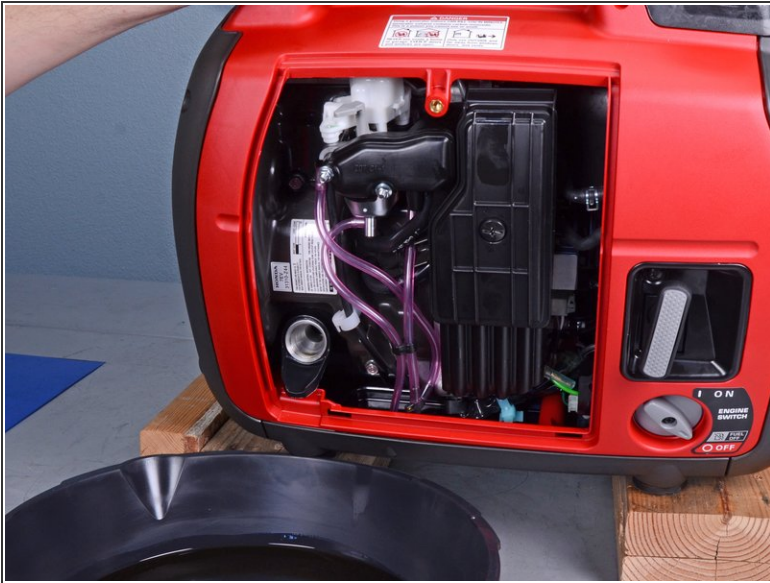

- Place an oil pan below the fill port to catch the engine oil.
- Carefully tilt the generator towards the oil pan to drain the oil.

## Step 8



- ⚠ During reassembly, be sure to refill the engine oil:
- ⚠ If you recently resealed the crankcase cover with liquid sealant, wait at least 20 minutes before adding oil.
- ⓘ Use SAE 10W-30 oil, up to 0.46 US quarts.
- Add oil until the dipstick is almost completely submerged.

To reassemble your device, follow these instructions in reverse order.