



# How to remove the 2010-2017 Suzuki Swift air intake box

To perform maintenance on for instance the...

Written By: knipwim



---

## INTRODUCTION



To perform maintenance on for instance the spark plugs, engine, or fuel rail, the air intake box needs to be removed.



### TOOLS:


- [Small Chain Nose Pliers](#) (1)
  - [10mm Socket](#) (1)
  - [3/8" Drive Ratchet](#) (1)
  - [Flathead 4 mm Screwdriver](#) (1)
-

## Step 1 — Loosen the air intake box

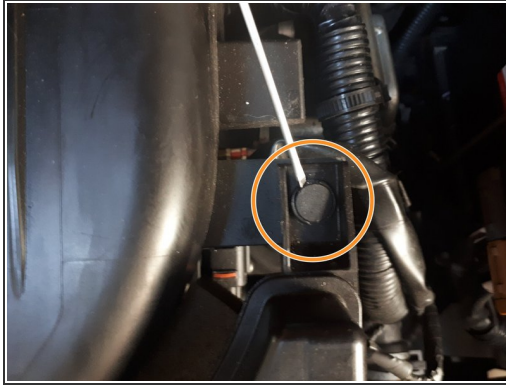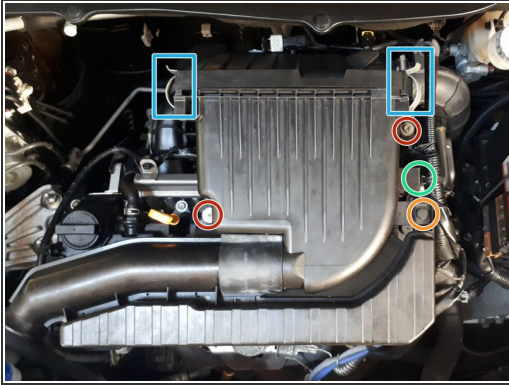

- Unscrew the 10mm bolts.
- Remove the push rivet with the flathead.
- Unclip the cable from the bracket. Use the pliers to press the lock from beneath and pull the clip loose.
- Pull back the clasps connecting the air intake box to the rest of the intake system.

## Step 2 — Remove the air intake box

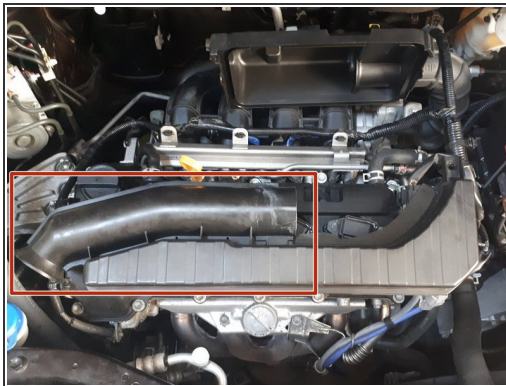

- Grab the box at the left side and pull up and towards the right to pull the top part of air intake box out.
- Pull the intake pipe up and out.

To reassemble, follow these instructions in reverse order.

