



# HP Prime Graphing Calculator G8X92A Battery Replacement

This guide will provide instructions to replace a battery for a HP Prime Graphing Calculator G8X92A.

Written By: Eric A Bidema



## INTRODUCTION

This guide provides detailed instruction on battery replacement for the HP Prime Graphing Calculator G8X92AA. The battery is considered hazardous material as it is lithium ion. If the device fails to power on or if the device fails to maintain a charge battery replacement may be required.



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:

- [Lithium ion battery 3.7V](#) (1)

## Step 1 — Battery

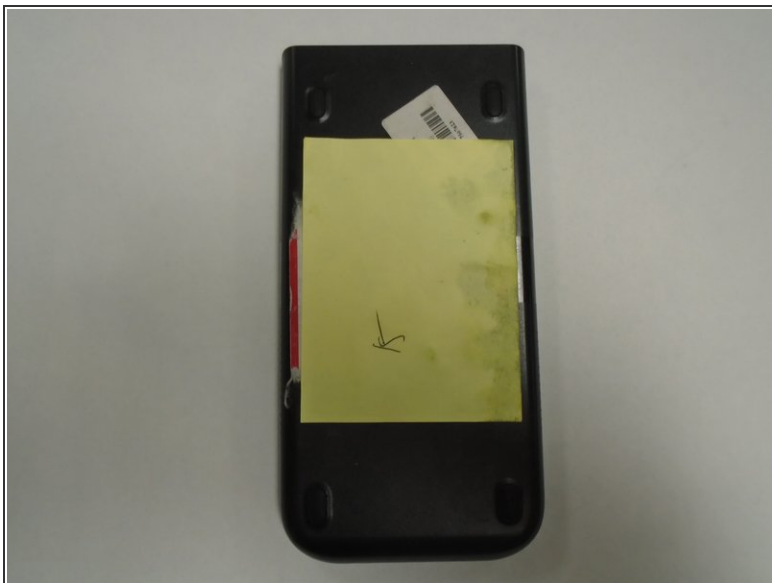

- Power down the device.
- Flip the device face side down so the back of the device is facing up.

## Step 2



- Using a Phillips #00 screwdriver, remove the two 4.5 mm screws securing the battery cover located at the bottom center of the device.
- Remove the cover.

## Step 3



- Remove the battery.

To reassemble your device, follow these instructions in reverse order.