

Battery Disconnect

How to disconnect the battery in your Galaxy A10e.

Written By: Thomas Boland



INTRODUCTION

Prereq for disconnecting the battery of your Samsung Galaxy A10e.



TOOLS:


- Spudger (1)
- Phillips #00 Screwdriver (1)
- SIM Card Eject Tool (1)
- 1 x Opening Picks (1)




PARTS:

- Galaxy A10e Motherboard Cover (1)
- Galaxy A10e SIM Card Tray (1)
- Galaxy A10e Rear Cover (1)


Step 1 — SIM Card

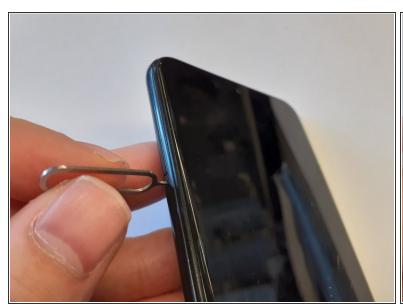

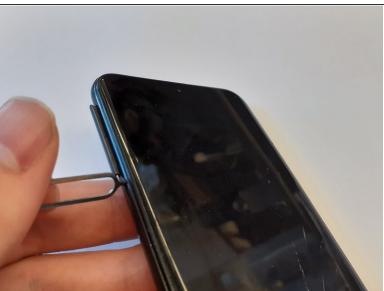

- Insert a SIM card eject tool, bit, or a straightened paperclip into the small hole in the SIM card tray.
- Press to eject the tray.



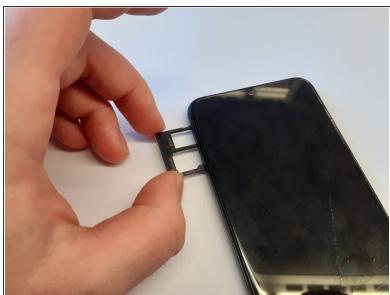

- Remove the SIM card tray from the phone.
 - (i) The SIM card(s) and SD card will fall out of the tray easily.
- When reinserting the tray, ensure the SIM card and SD card are in the correct slots and oriented correctly.
- For dual-SIM versions of this phone, there may be two SIM cards. Ensure the SIM cards are placed in the slots corresponding to the correct phone lines.

Step 3 — Back Cover




- The back cover is held in place by plastic clips.
- Insert an opening pick between the screen and the back cover on the bottom of the phone where the charging port is located.

Step 4



 Slide the opening pick to the bottom left corner to release the clips.

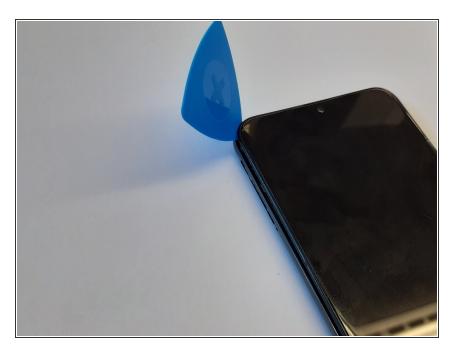

 Slide the opening pick along the left edge to the top left corner of the phone, to release the clips.

Step 6



 Slide the opening pick from the top left corner to the top right corner to release the plastic clips.



 Slide the opening pick from the top right corner to the bottom right corner to release the remaining clips.

Step 8



Remove the back cover.

Step 9 — **Motherboard Cover**




- Remove screws from the motherboard antenna cover.
 - 3 Phillips #00, 3mm length.

Step 10



 Use the tip of a spudger or tweezers to remove the antenna cover.

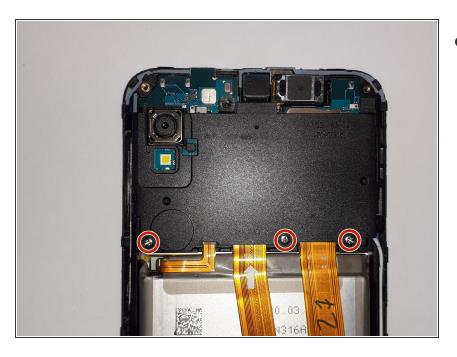

- Remove screws from the motherboard cover.
 - 3 Phillips #00, 3mm length

Step 12



 Use the tip of a spudger or tweezers to remove the motherboard cover.

Step 13 — Battery Disconnect





Use a spudger to disconnect the battery by prying the connector straight up from its socket.

Step 14



 Gently flex the battery connector away from its socket.

To reassemble your device, follow these instructions in reverse order.