



Nokia 5130 XpressMusic Front Bezel Replacement

Written By: iSzymon



Step 1 — Sliding off the rear panel



- Slide the rear panel in the indicated direction to unlock it.

Step 2 — Lifting up the rear panel



- After unlocking it, the rear panel can now be lifted up.

Step 3 — Rear screws



- Remove the two T6 screws near the camera

Step 4 — Unclip the bezel



- Unclip the several clips holding the front bezel in place
- ⚠ Be sure not to break off or damage the clips, otherwise the front bezel might no longer stay in place!

To reassemble your device, follow these instructions in reverse order.