



Nokia 5130 XpressMusic Logic Board / Casing Replacement

Written By: iSzymon



Step 1 — Sliding off the rear panel



- Slide the rear panel in the indicated direction to unlock it.

Step 2 — Lifting up the rear panel



- After unlocking it, the rear panel can now be lifted up.

Step 3 — Rear screws




- Remove the two T6 screws near the camera

Step 4 — Unclip the bezel



- Unclip the several clips holding the front bezel in place
- ⚠ Be sure not to break off or damage the clips, otherwise the front bezel might no longer stay in place!

Step 5 — Keypad

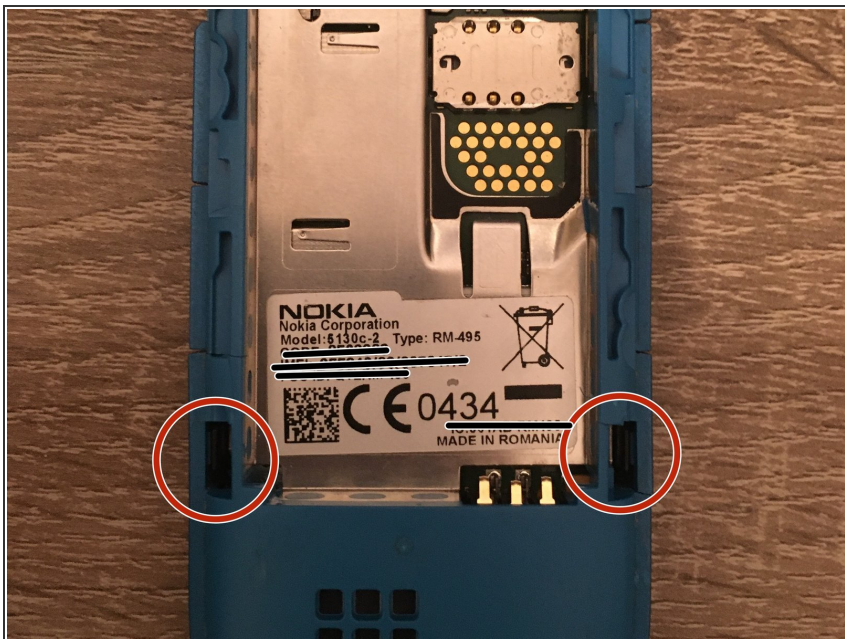

- Push in the pins holding in the keypad

Step 6 — Remove the keypad



- The keypad can now be removed.

Step 7 — Remove the remaining parts



- Lift up the logic board / display and remove it from the case.

To reassemble your device, follow these instructions in reverse order.