




Lenovo IdeaPad 330S Battery Replacement

This guide will show you how to replace the battery in your laptop.

Written By: Ilia Tocheny

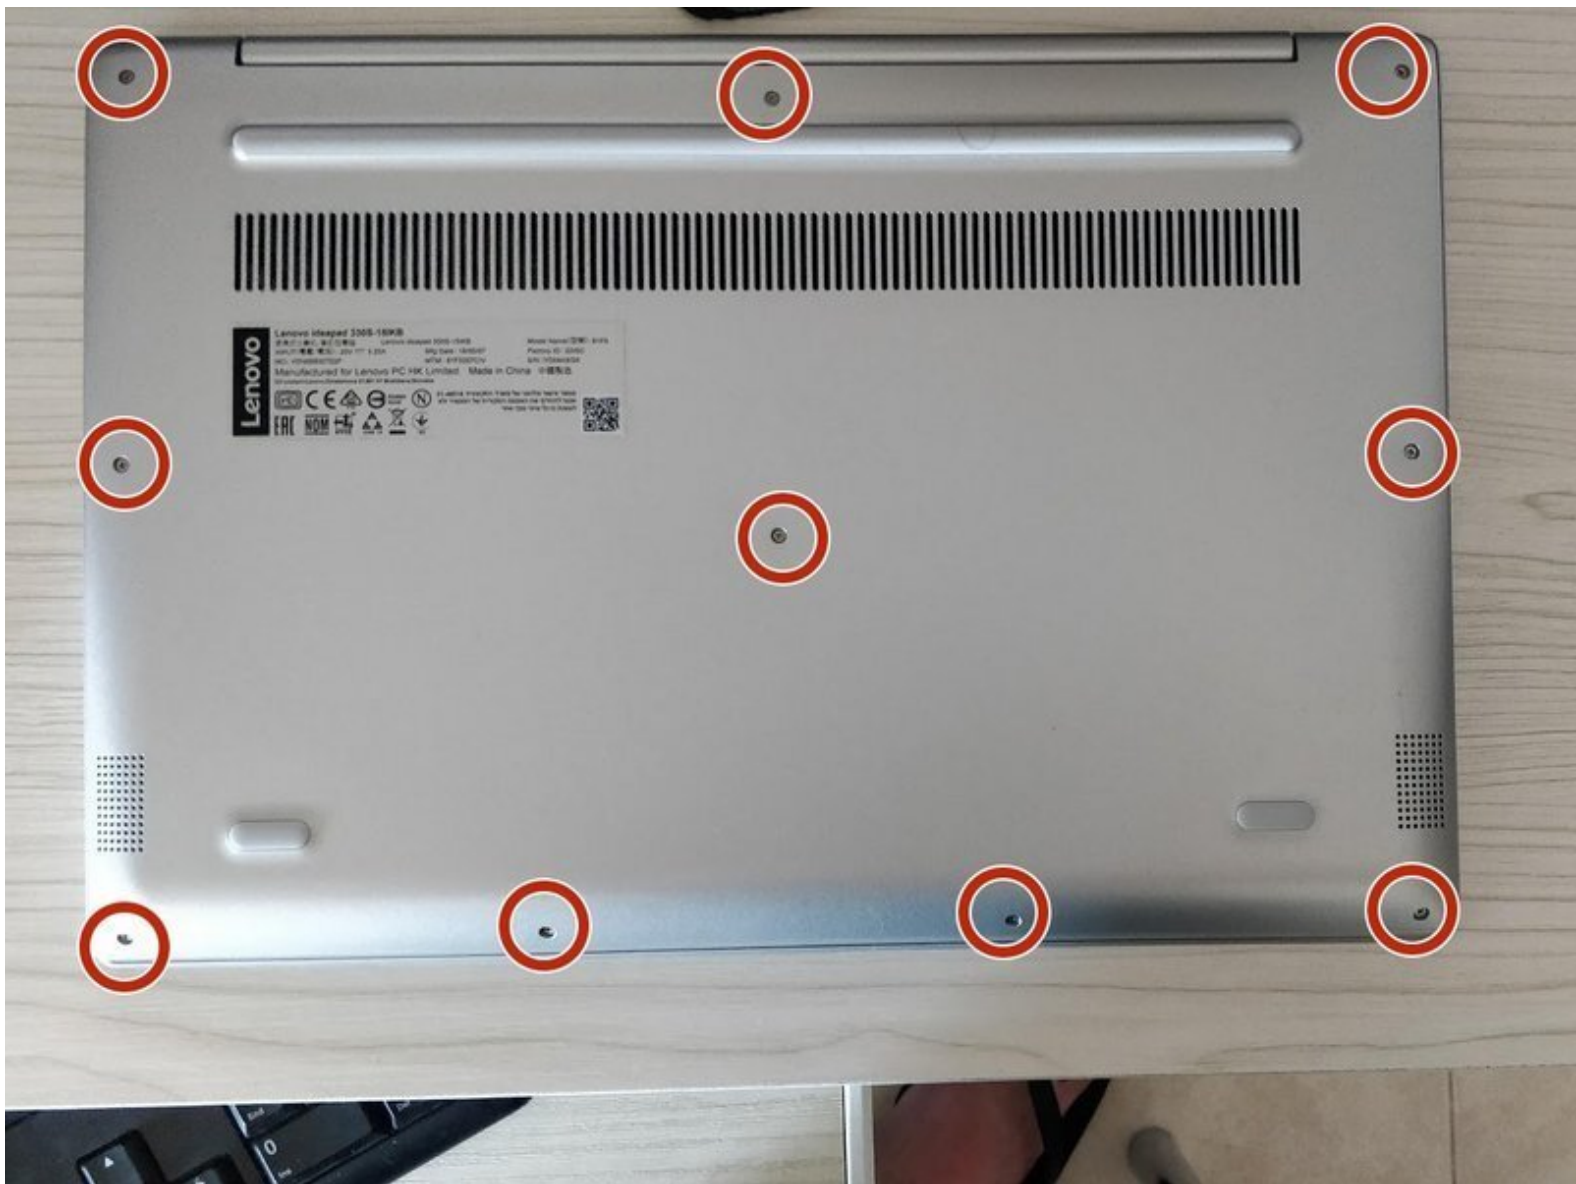

INTRODUCTION

After a long time of using your laptop the battery will degrade and will be need to be replaced. This guide will show you how to change it.

Before ordering a new battery make sure you have the correct battery.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Phillips PH000 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:


- [Lenovo IdeaPad 330S 12.25V Battery](#) (1)

Step 1 — Removing bottom panel

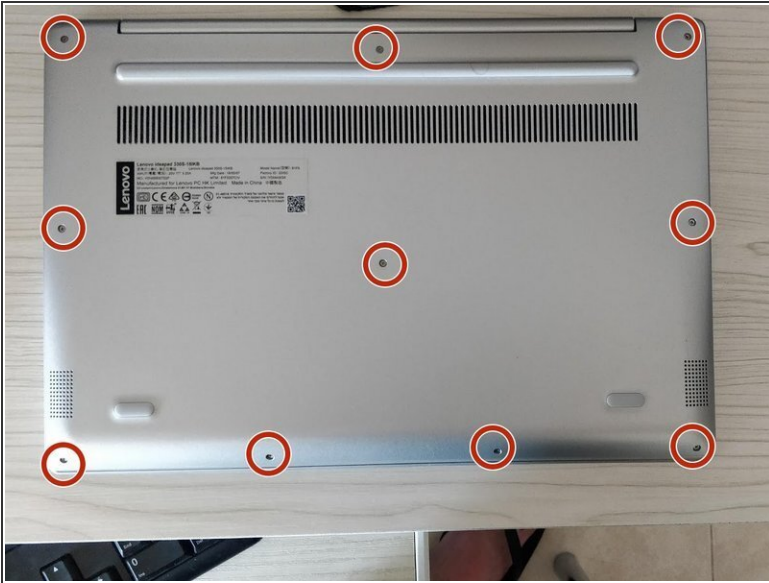

- Turn off the device and disconnect it from the power supply.
- Remove the 10 screws as shown in picture.
- Using an opening tool pry off the bottom case.

Step 2

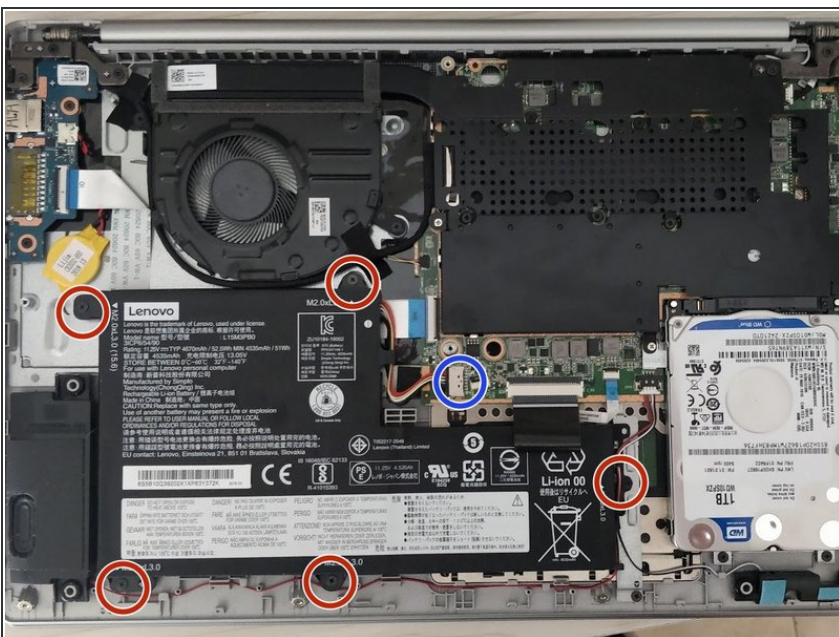

- Disconnect the battery by gently pushing the black connector to the left. (Marked in blue).
- Remove the 5 screws that are marked in red.
- Install the new battery.

To reassemble your device, follow these instructions in reverse order.