



# SONY Ericsson W890i Keypad and Front Cover Replacement

The following guide details steps used to replace the keypad on the SONY Ericsson W890i device.

Written By: Bob



---

## INTRODUCTION

This guide will allow you to detach the faceplate in order to replace existing buttons or screen on your Sony Ericsson W890i

---

### TOOLS:

- [Tweezers](#) (1)
  - [T6 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Flick the two lock tabs into the unlocked positions by pushing each button forward.

## Step 2



- Pop the back cover up using the groove on the top of the phone.

### Step 3



- You can now access the phone's battery.
- Using a spudger, remove the battery and set it aside.

### Step 4 — Keypad and Front Cover



- Remove the two small rubber pieces that cover the lower screws.
- Using a T-6 Torx wrench or screwdriver, remove all four of the small screws at the top and bottom corners on the back of the phones.

## Step 5



- Gently pry off the faceplate using a plastic opening tool.
- Insert the plastic opening tool into the middle of the front and back panels of the phone.

## Step 6



- Separate the front and back panels that were pryed open with the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.