



MiTM Air Compressors AM1PH6508HD 2012

Belt Guard Replacement

This is a prerequisite-only guide. Use this guide to remove or replace the belt guard in a Mi-T-M Air Compressor AM1-PH65-08HD 2012.

Written By: Kyle Smith



This document was generated on 2021-04-15 12:55:15 PM (MST).

INTRODUCTION

Use this guide to remove or replace the belt guard in a Mi-T-M Air Compressor AM1-PH65-08HD 2012.

This is a prerequisite-only guide. This guide is part of another procedure and is not meant to be used alone.



TOOLS:

- [10mm Socket](#) (1)
-

Step 1 — Remove the belt guard cover bolt



- Use a 10 mm socket to remove the bolt securing the belt guard.

Step 2 — Remove the belt guard cover



- Tilt the belt guard away from the device and lift it out to remove it.

To reassemble your device, follow these instructions in reverse order.