



Sennheiser HD 4.50 Ear Pad Replacement

This step-by-step repair guide will teach you...

Written By: Grace Singley



INTRODUCTION

This step-by-step repair guide will teach you how to carefully remove and replace a broken ear pad for the Sennheiser HD 4.50. The ear pads are key to keeping your headphones comfortable on your ears, so if they are broken or ripped, you may experience discomfort while using them. If your ear cups are misshapen, follow this guide to return your headphones to full functionality. For the sake of safety, remove the power cord from the Sennheiser HD 4.50 before beginning the process of ear pad removal.

⚙️ PARTS:

[Sennheiser HD 4.4/4.5 Headphone Earpad Cushions \(1\)](#)

[Sennheiser HD 4.4/4.5 Ear Pads \(1\)](#)

Step 1 — Ear Pad



- Grasp the ear pad with your fingers and pull gently away from the ear cups of Sennheiser HD 4.50.

Step 2



- To reinsert the ear pad, start by working the edge of the material back into the grooves of the ear cup.
- Work the material back in all the way around until the ear pad is secure.

You have correctly replaced your Sennheiser HD 4.50 ear pads.