


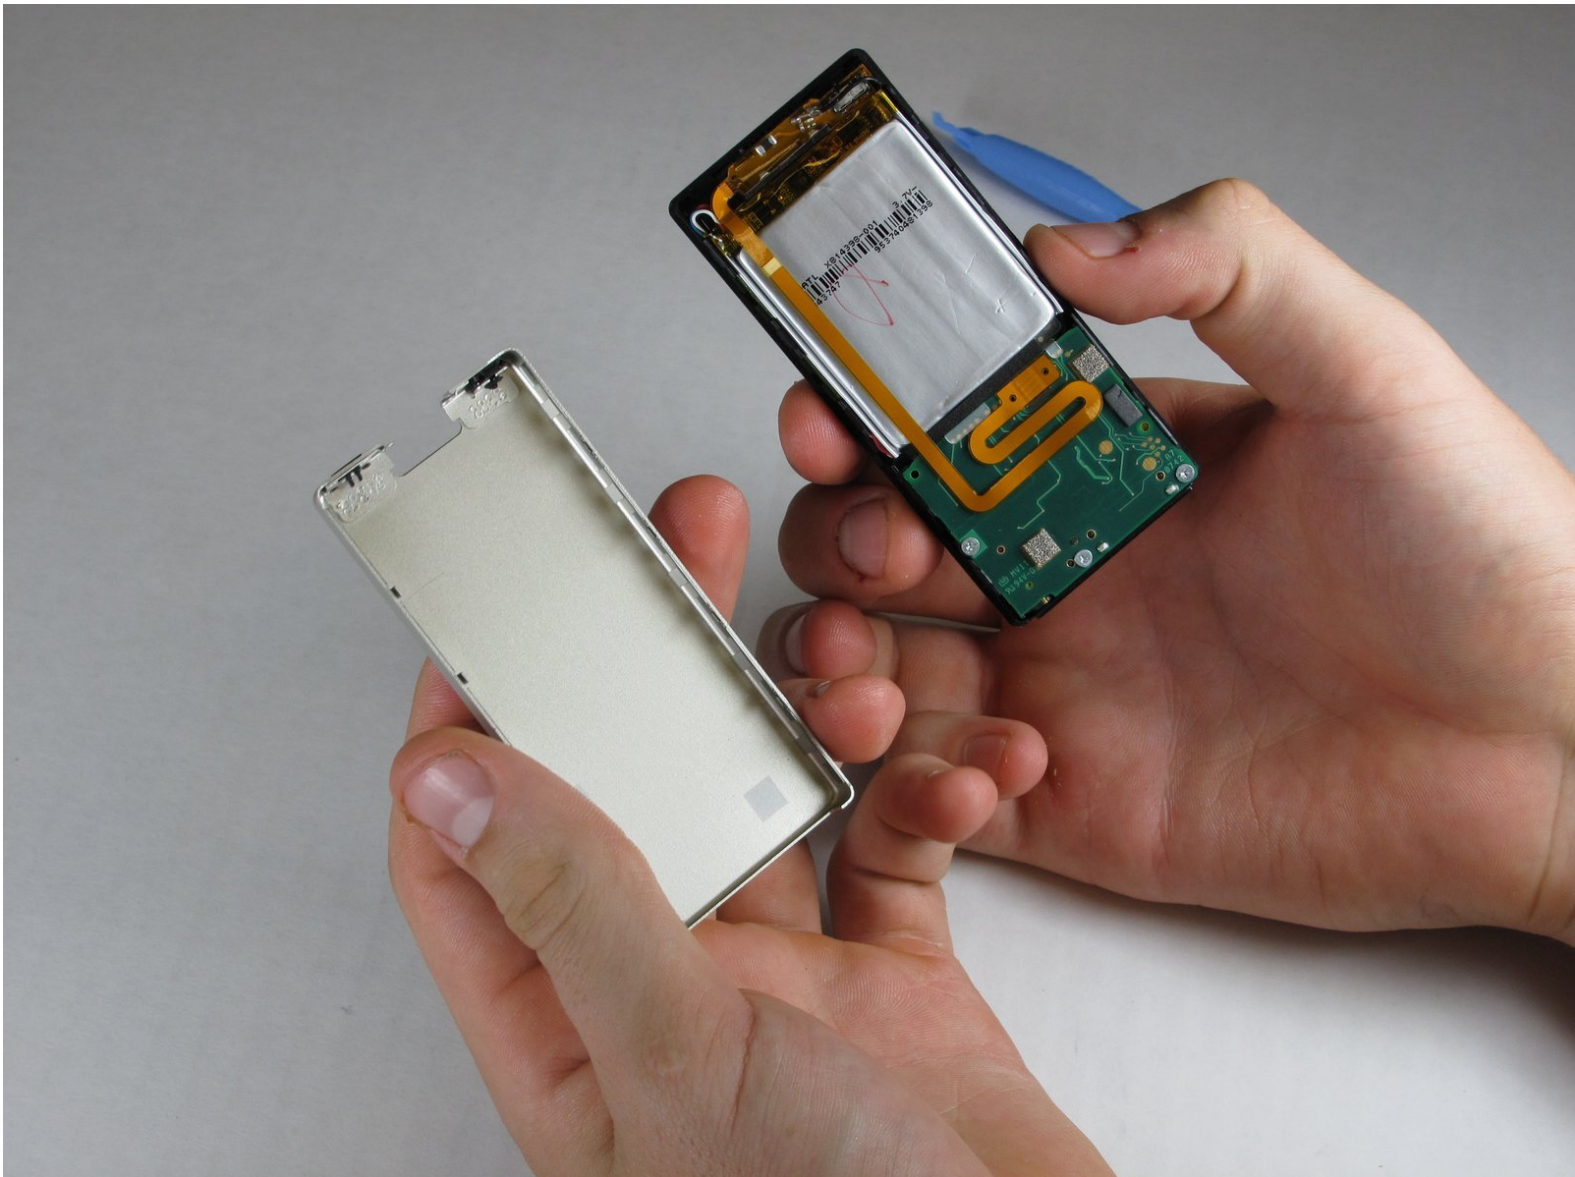

Zune Flash 2nd Generation Back Cover Replacement

This is a guide to replacing the Back Cover on...

Written By: ybahman



INTRODUCTION

This is a guide to replacing the Back Cover on the Zune Flash 2nd Generation.



TOOLS:


- [iFixit Opening Tool](#) (1)
 - [Tri-point Y1 Screwdriver](#) (1)
-

Step 1 — Back Cover




- Prior to disassembly, verify the hold switch is engaged to ensure the device will not turn on during the procedure.
 - If the device turns on while it is being disassembled it could cause irreversible damage to the device.
- i PICS MAKE NO SENSE.**

Step 2

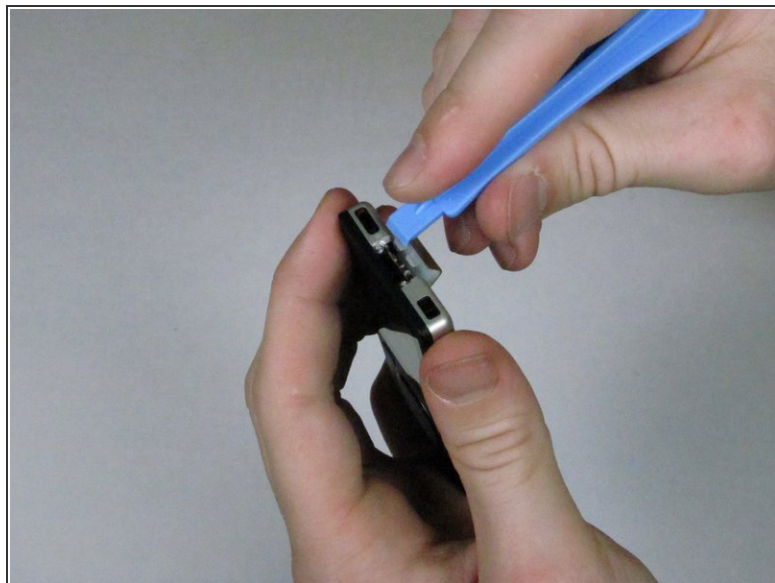




- Remove the top metal clip by inserting a Zune opening tool in between the faceplate and back cover and pulling gently back as shown in the images.
- You should hear a 'click' as the clip detaches from the device.

Step 3

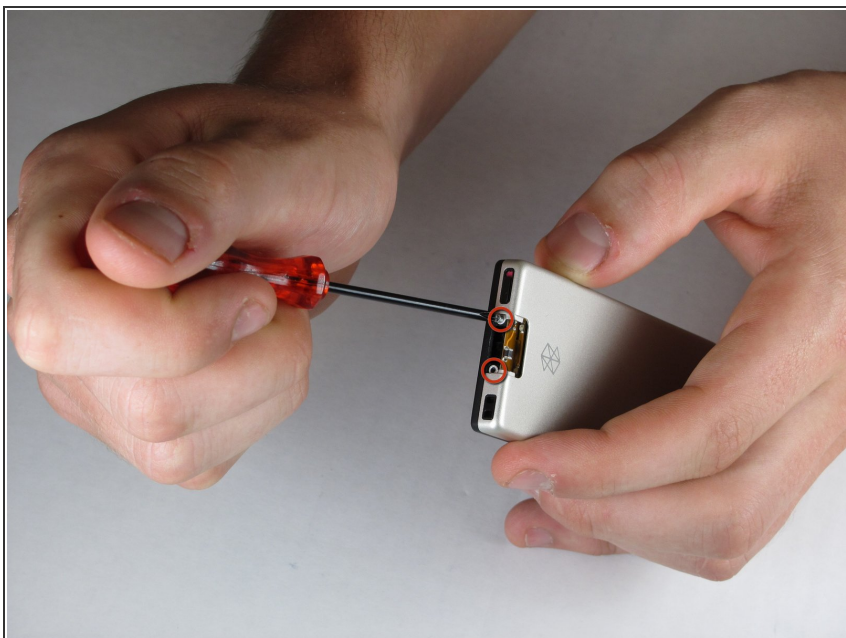


- Remove the two screws shown using a Y00 Tri-Wing screwdriver.

Step 4

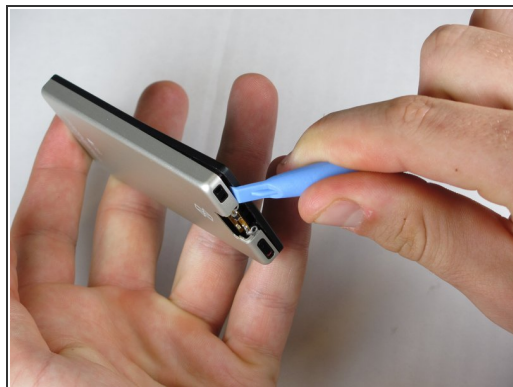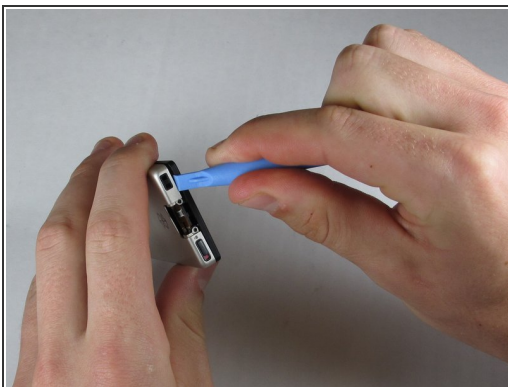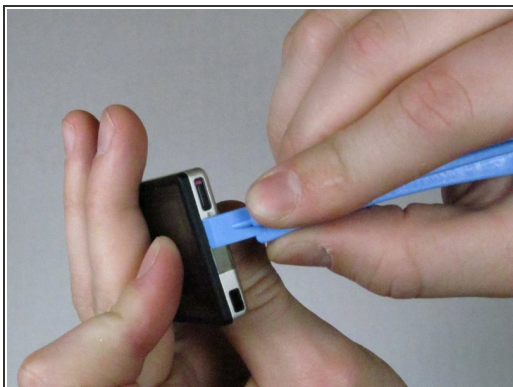

- Insert the Zune opening tool between the faceplate and the back cover, starting from the top and slowly work your way around the device.

Step 5

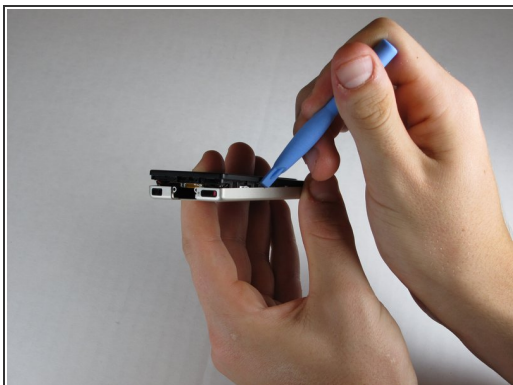

- Work your way around the Zune until the back cover comes free. Remove the back plate and set it aside.

To reassemble your device, follow these instructions in reverse order.