



Sennheiser HD 4.50 Headband Pad Replacement

This guide will show you how to remove and replace a broken headband pad on the Sennheiser HD 4.50 headphones.

Written By: Grace Singley



INTRODUCTION

If the headband pad or cushion on your Sennheiser HD 4.50 headphones are worn down or damaged, use this guide for instructions on replacing it. In order to complete this repair, you will need to buy a new headband pad to replace the defective one you are removing.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)



PARTS:

- [Super Glue](#) (1)

Step 1 — Headband Pad



- Extend the headphones by pulling the headband away from the base of the headphones.
 - ⓘ Do this to both the right and left sides of the headphones.

Step 2



- Use a Phillips #000 screwdriver to remove the two screws on the silver piece on either edge of the headband.
 - ⓘ Make sure to do this to both the right and left sides of the headphones.
- After removing the screws, slide both silver pieces down.

Step 3



- Grasp the headband pad firmly with your pointer finger and thumb and gently pull the pad away from the headband until the pad is fully removed.
- ☑ You may need to apply adhesive when sticking the replacement headband pad back to the headband.

To reassemble your device, follow these instructions in reverse order.