



# LG Incite Touch Screen Replacement

If your phone's touch screen breaks or...

Written By: Kimberly Kha



---

## INTRODUCTION

If your phone's touch screen breaks or malfunctions, this guide will show you how to easily remove and replace it.



### TOOLS:

- [iFixit Opening Tool](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)



### PARTS:

- [LG Incite touch screen](#) (1)
-

## Step 1 — Battery



- Hold the phone camera-side up and locate the rear cover.

## Step 2




- Place a thumb below the camera, apply a little pressure, and slide the cover toward the bottom of the phone.

### Step 3



- Place the plastic opening tool in the small slot below and to the left of the battery.
- Pry the battery upward to remove it.

### Step 4 — Back Panel

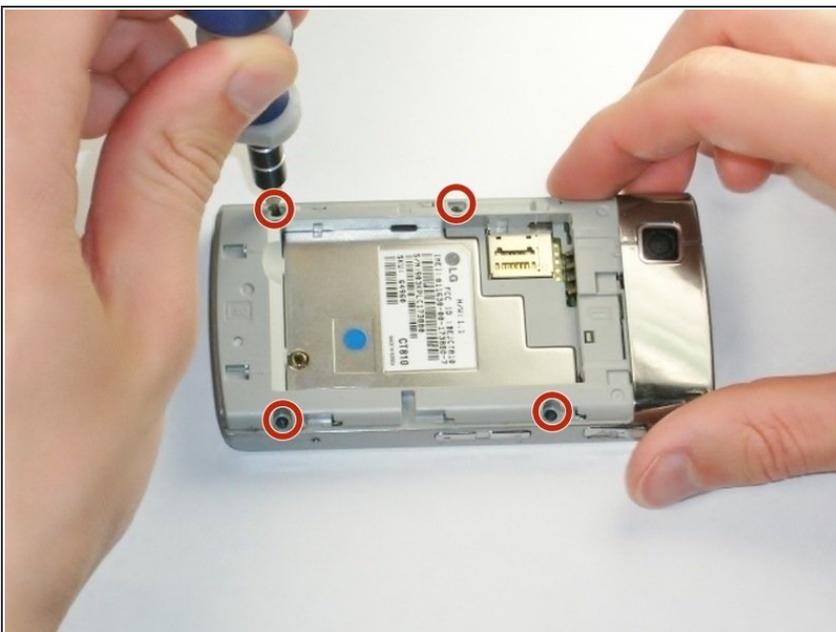

- Using the #00 Philips screw driver, unscrew the four 4.5mm screws located around the battery compartment.

## Step 5



- Wedge the plastic opening tool between the screen and the body of the device, using care to avoid damaging internal components.
- Gently move the tool around the perimeter of the screen to separate it from the body.
- ⓘ You should not completely separate the screen from the device in this step.

## Step 6



- Flip the device over so the battery compartment faces up.
- Press the scroll wheel, located in the upper-left corner, into the device to avoid damage.
- Gently insert the plastic opening tool into the seam between the frame and front cover to separate the back panel from the device.

**⚠ The volume, lock, and camera buttons are loose, so be careful not to misplace them.**

## Step 7 — Motherboard




- Use the metal tweezers to gently peel the yellow tab from the left edge of the phone at the two plastic bases.
- ⚠ Do not completely remove the tab from the body, it should still be connected to the phone by the orange plastic.
- Repeat this for the white tab on the opposite side of the phone.
- ⓘ This tab also has two plastic bases adhering it to the edge of the phone.

## Step 8



- Insert your plastic opening tool underneath the speaker/camera panel, and gently pry it upwards.
- ⚠ Do not fully remove the panel! It should still be attached to the motherboard by a red and black wire.

## Step 9

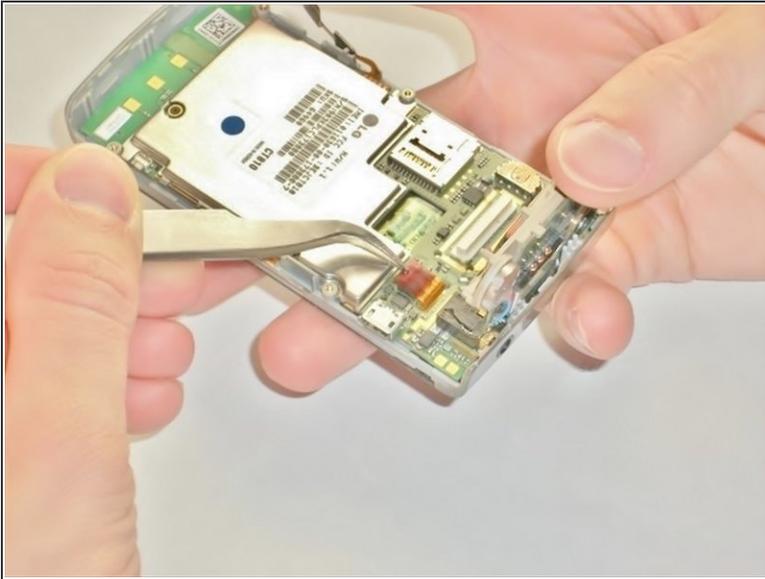

- Use the metal tweezers to gently lift the edge of the maroon tab, it should pop up easily.

**⚠ Do not remove the tab completely, it should still be connected to the phone.**


## Step 10



- Insert the plastic opening tool underneath the motherboard towards the bottom edge of the phone and gently pry it from its case.
- Lift the motherboard and slide it towards you by hand to free it from the phone.


**⚠ The call and end buttons may fall out when the motherboard is removed!  
Don't lose the buttons.**

## Step 11 — Touch Screen

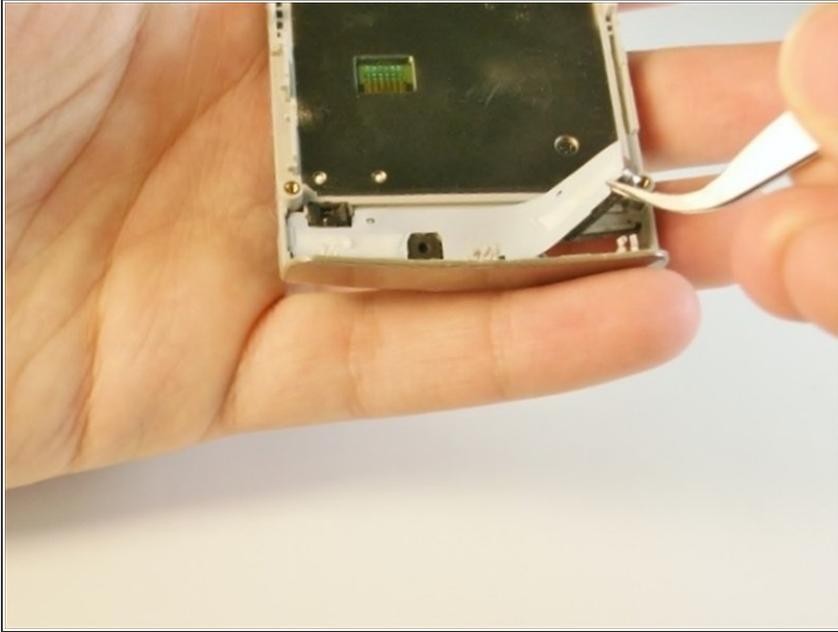

- Remove the call and end buttons using the metal tweezers.

## Step 12

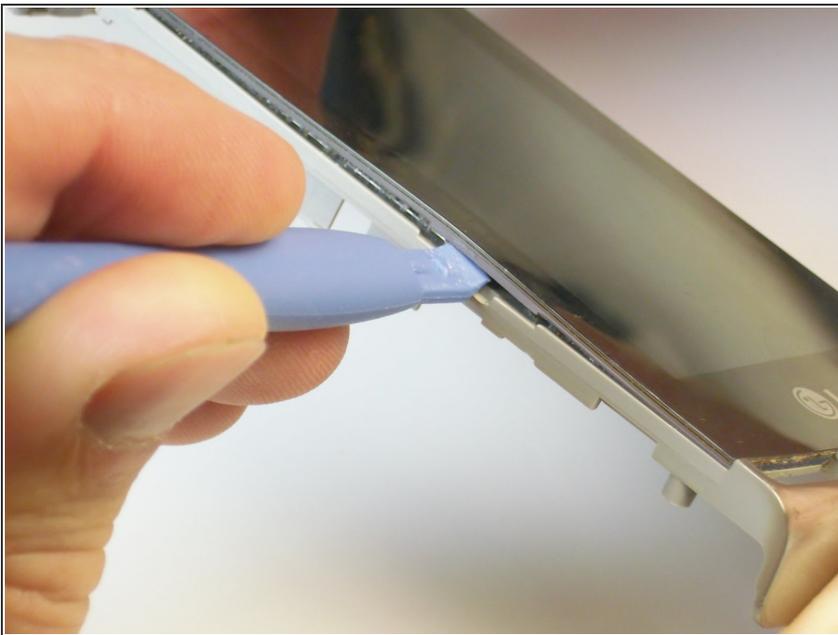



- Wedge the plastic opening tool between the screen and sides of the phone.
  - Slide the tool along the edge to loosen the screen.
  - Repeat for the opposite side.
- ⚠ Don't completely remove the screen yet to avoid damaging the screen.**

## Step 13



- Wedge the plastic opening tool under the screen where the buttons were to loosen it.

## Step 14

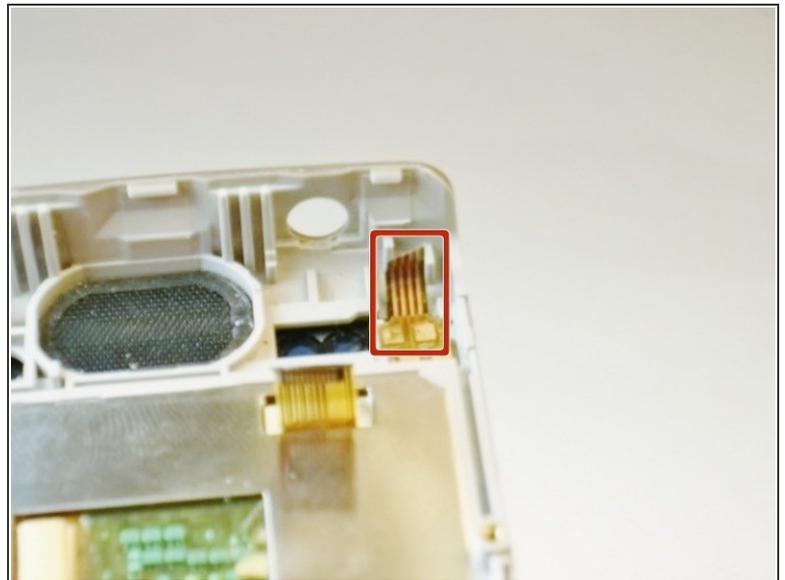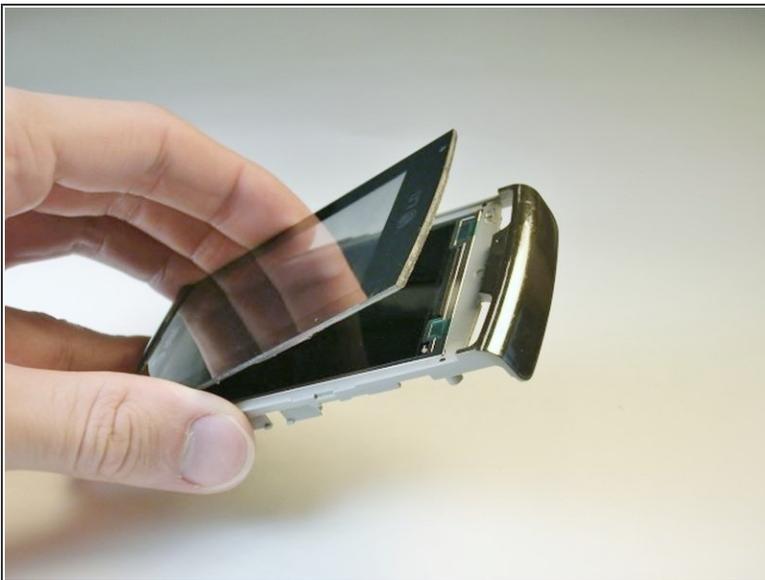

- Gently peel the touch screen off from the bottom of the phone.  
**⚠ Do not damage the yellow tab in the upper right corner of the phone.**

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2023-02-20 06:19:56 PM (MST).

