



# Lenovo IdeaPad 330-15IKB Battery Replacement

How to replace the battery.

Written By: Marian Anghel





## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Picks \(Set of 6\)](#) (1)



## PARTS:

- [Lenovo 5B10W67163 Battery](#) (1)

## Step 1 — Turn the laptop over.

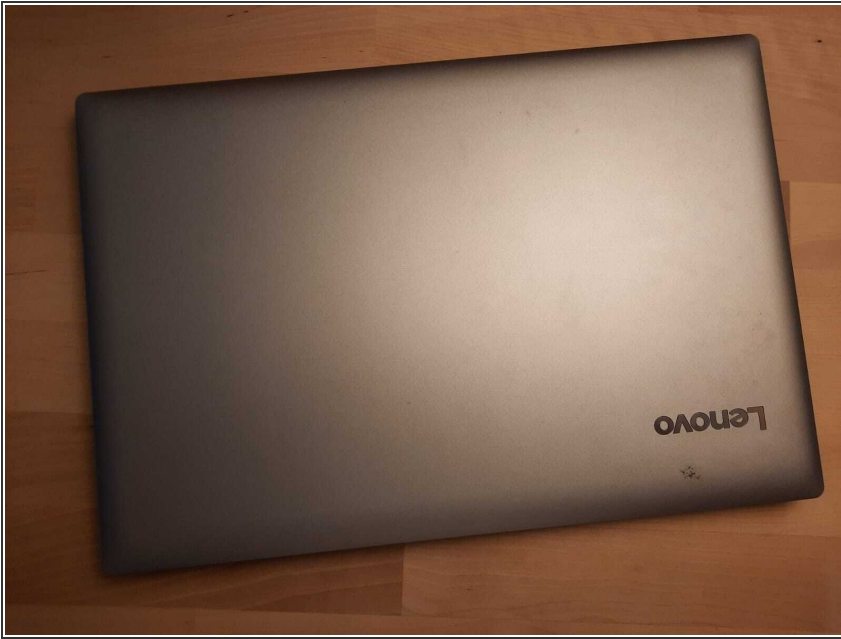

- Turn the laptop off and over.

## Step 2 — The backpanel screws.




- Remove the 13 Phillips-head screws.

### Step 3 — Remove the HDD caddy.



- Pull the HDD caddy.


### Step 4 — Pry the back panel.

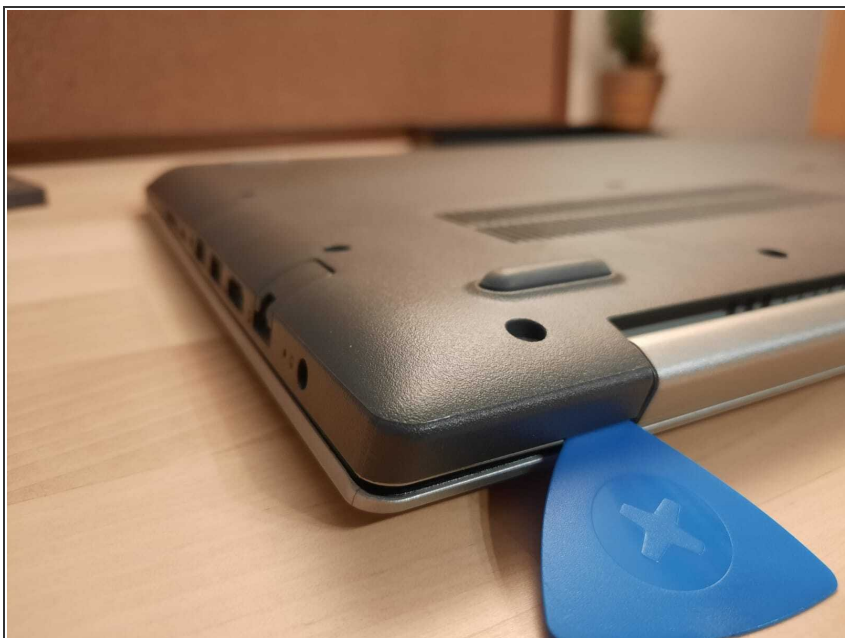

- Use a spudger or picks to lift open the back panel.
- There are clips on every side.




## Step 5 — Locate the battery.

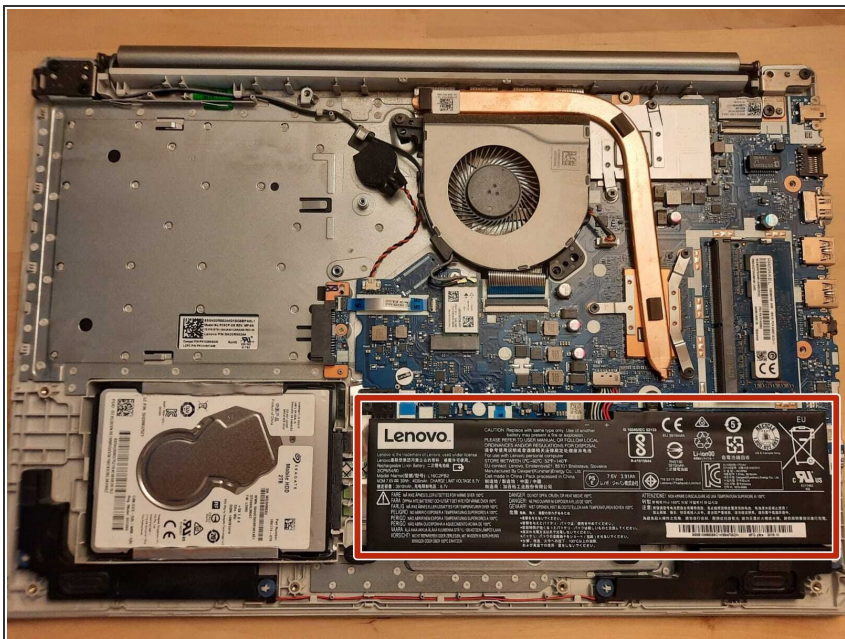


- The battery is in the lower right corner.

## Step 6 — Unplug the battery.

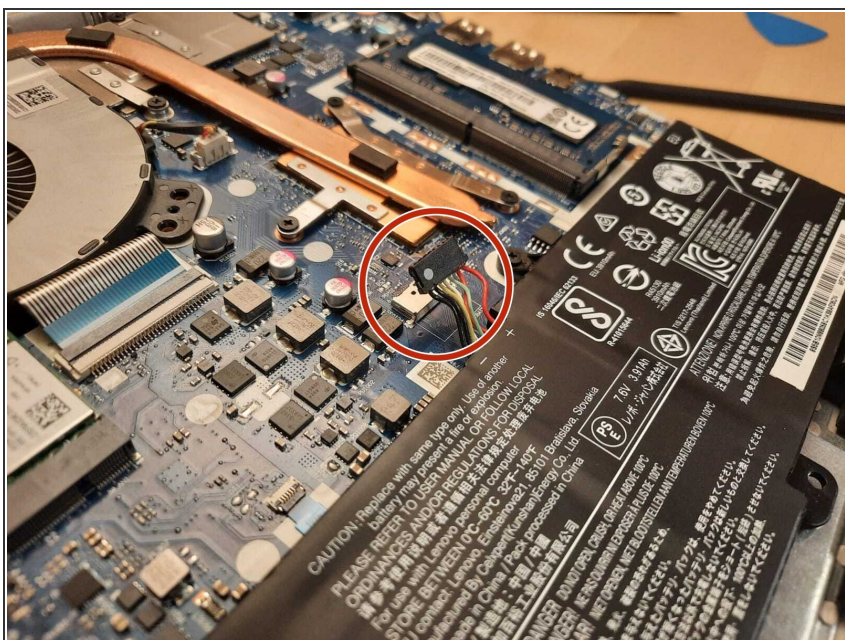

- Unplug the battery connector.

## Step 7 — Unscrew the battery.

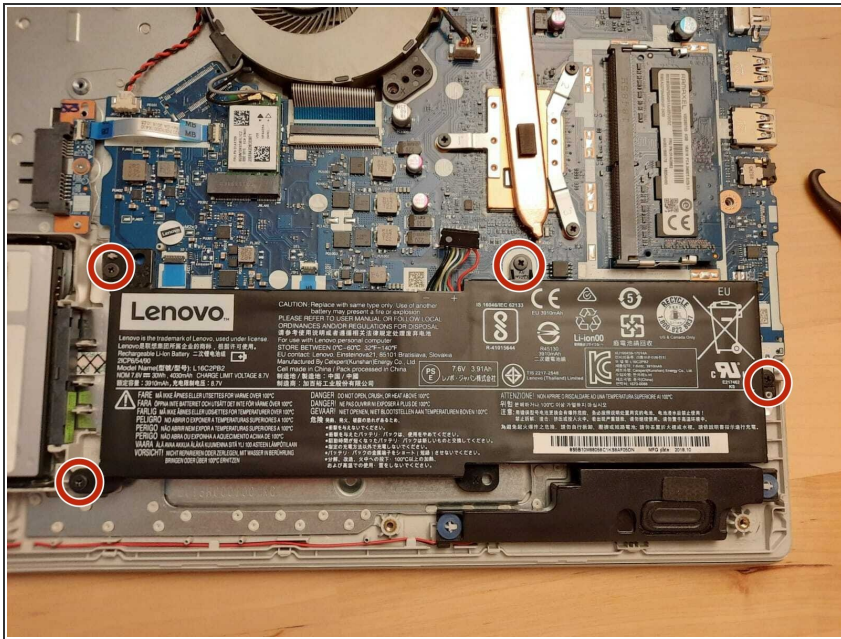

- There are 4 Phillips Head Screws.

## Step 8 — Lift the battery and replace it.



- Lift the battery and place in the new one.

To reassemble your device, follow these instructions in reverse order.