




# Motorola Q700 Sidekick Speaker and Camera Replacement

enable user to remove speaker and/or camera and replace

Written By: Rich

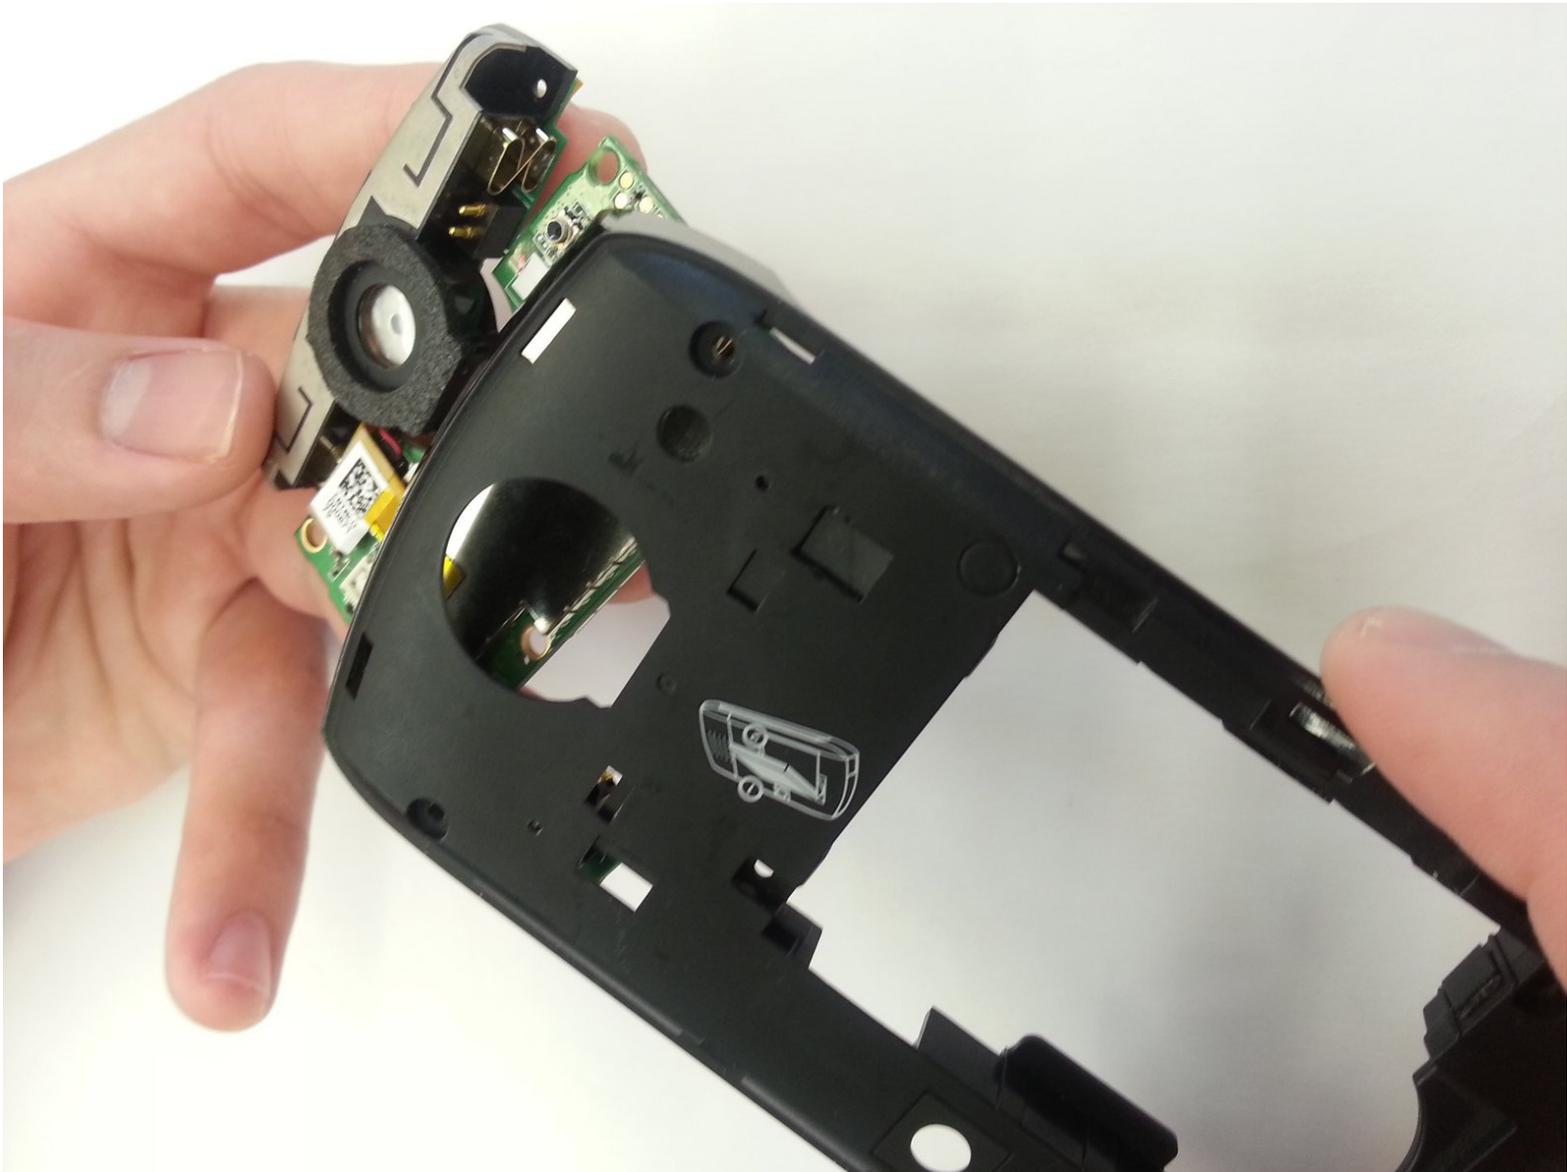

 **TOOLS:**


- [Phillips #1 Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Phone



- When looking at the front of the phone, use the Plastic Opening Tool to pry off the four buttons located in each of the corners on the front.

## Step 2

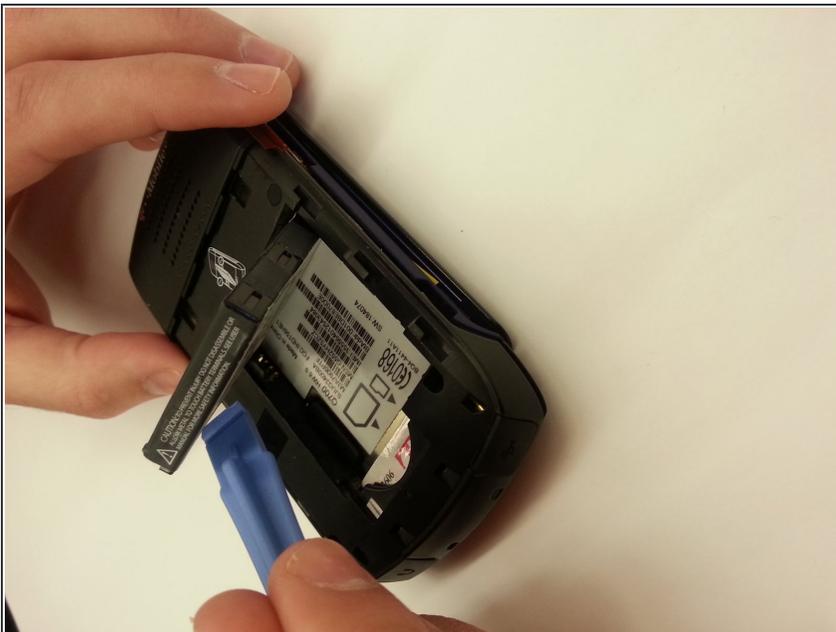


- Turn the phone face-down. Remove the back cover, exposing the battery.
- Use the Plastic Opening Tool to pry the battery out of the phone.

### Step 3



- Using the appropriate size Phillips screwdriver, unscrew the four screws located in each of the corners on the back of the device.
- Although the battery is shown in this picture, please remember to make sure that it is removed in order to proceed with disassembly.

### Step 4

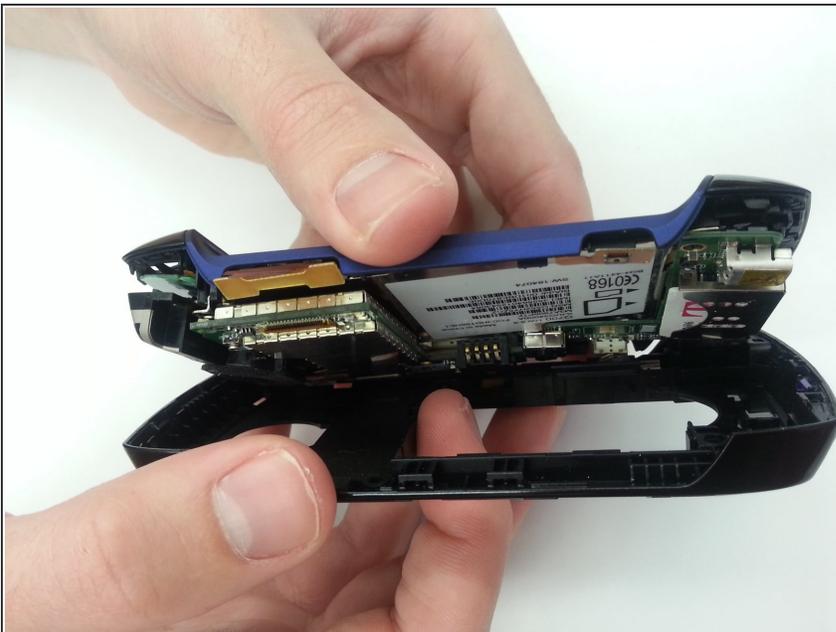


- After removal of the back screws, use the Plastic Opening Tool to carefully separate the top and bottom halves of the device.

## Step 5



- Using the appropriate size Phillips screwdriver, remove any screws that are attached or associated with the keypad and carefully remove keypad from the device.

## Step 6

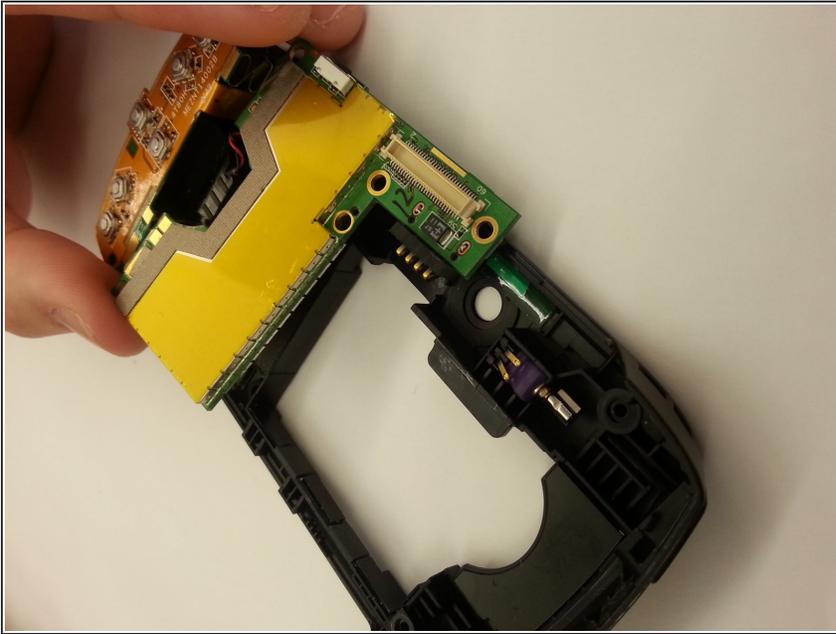


- On the back of the device, you will see individual green and yellow technical pieces. Remove those two pieces from the phone with your fingers and set aside.

## Step 7



- You should now have all of the pieces separated and disassembled for your device.

## Step 8 — Speaker and Camera

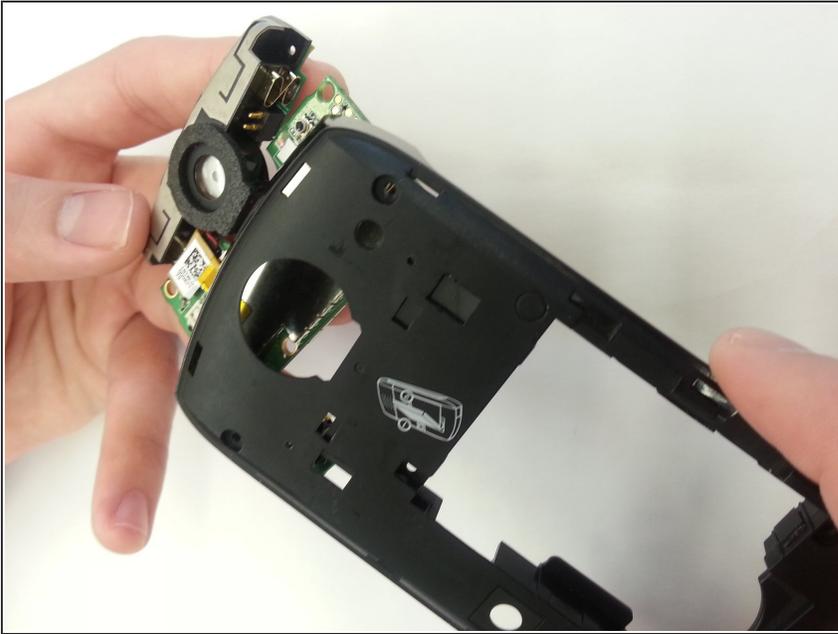

- complete disassembly as instructed by guide

## Step 9



- Remove camera piece from casing

## Step 10



- replace with new camera piece into casing and reassemble by reversing disassemble procedure

To reassemble your device, follow these instructions in reverse order.