




Sony Clie PEG-NR70 Audio Module Replacement

This guide will show you how to disassemble the device in order to install a new audio module.

Written By: Daniel Soski

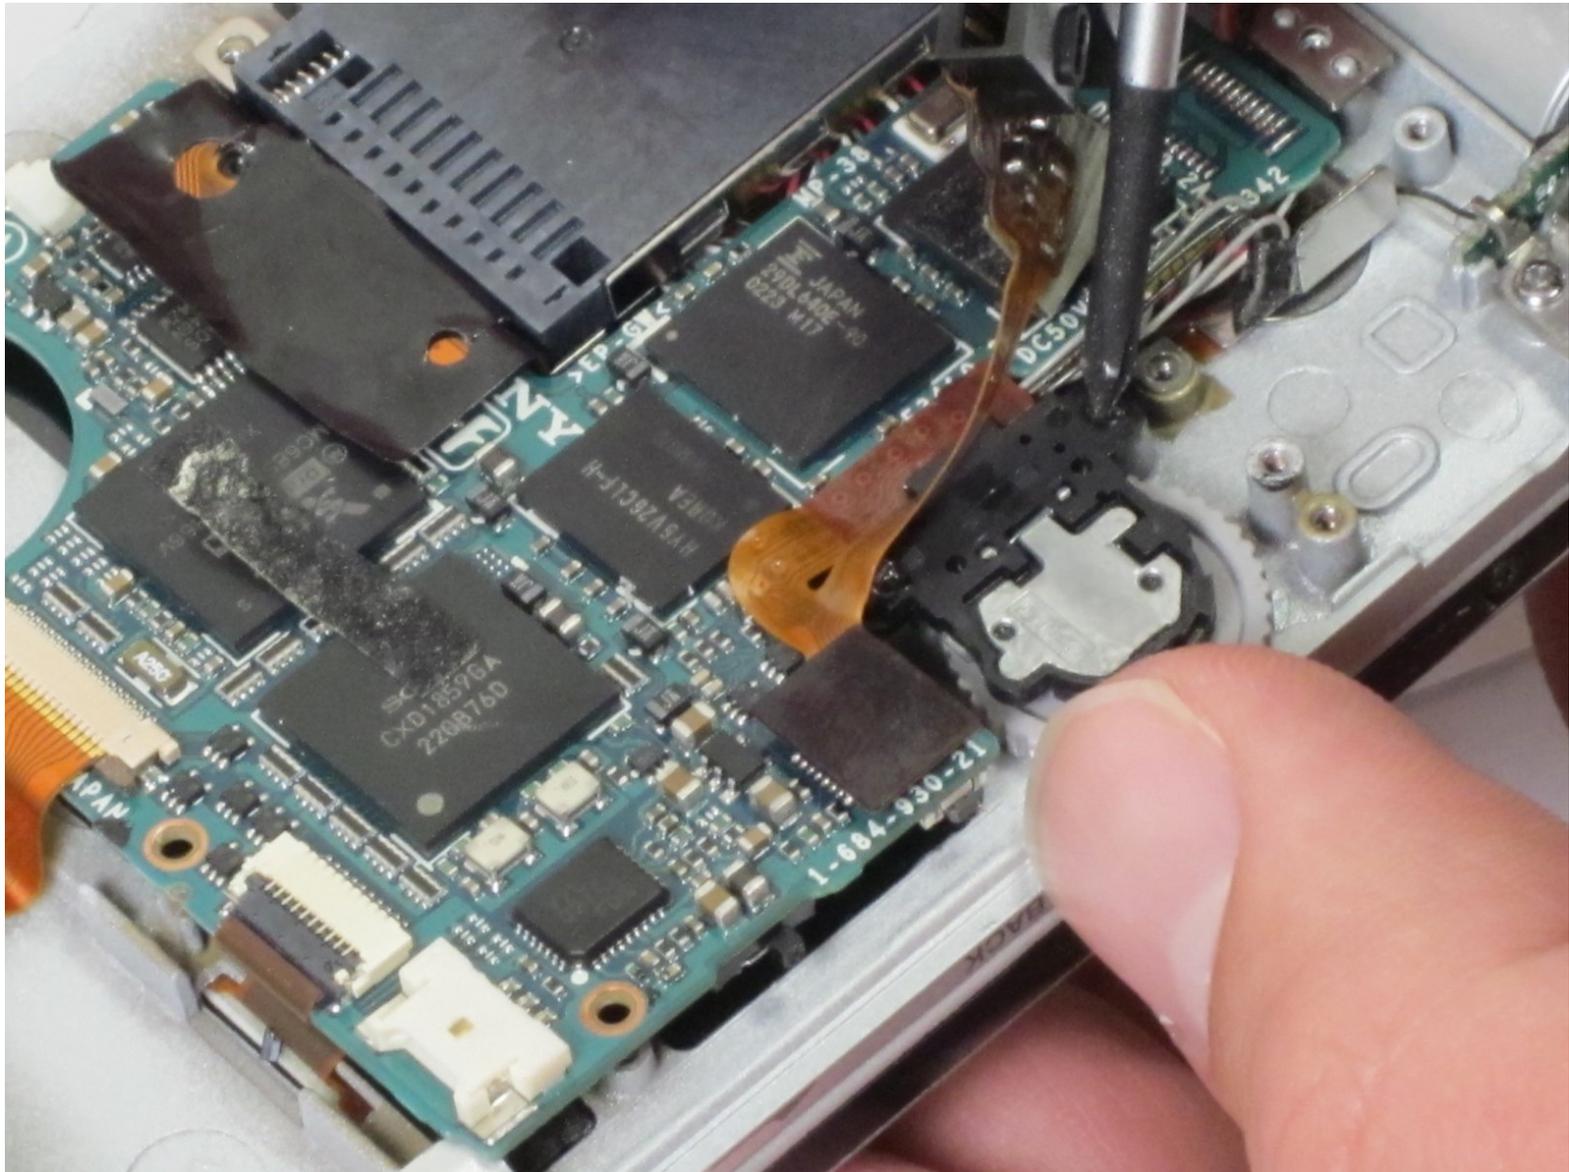

INTRODUCTION

If the audio in your device is not working, you may need to replace the audio module. This easy step-by-step guide will walk you through the necessary steps to do so.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — The Case





- Unscrew the 1.9mm screw located at the top of the device with a Phillips #00 screwdriver.
- ⓘ It may be helpful to set up a piece of paper to keep track of where removed screws came from.

Step 2

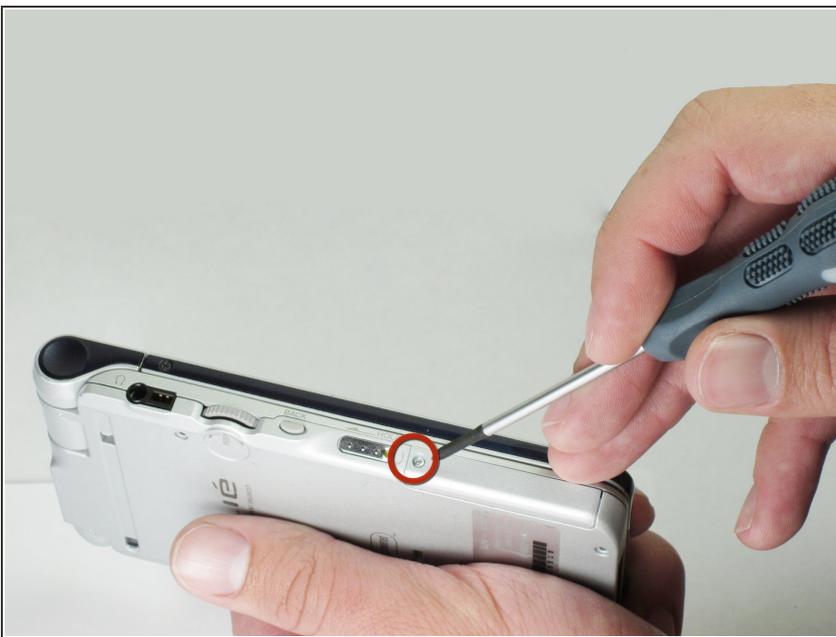


- Unscrew the 2.5mm screw located on the left side of the device with a Phillips #00 screwdriver.

Step 3

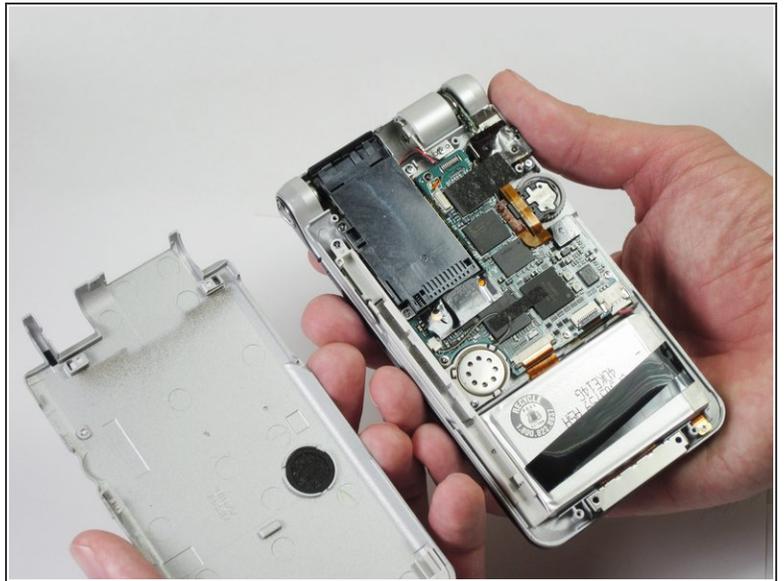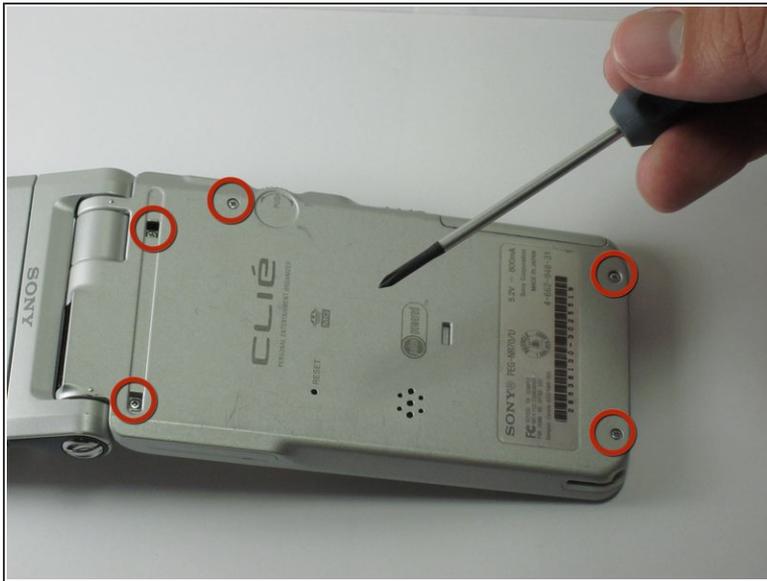


- Unscrew the five 2.5mm screws on the back panel with a Phillips #00 screwdriver.
- Remove the back panel by lifting it away with your hands.

Step 4 — Audio Module

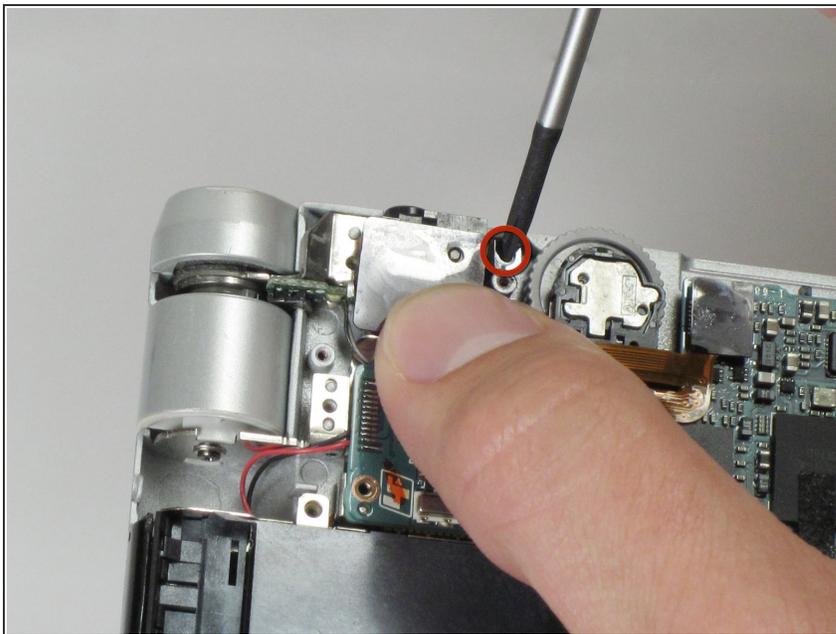

- Unscrew the 2.5mm screw on the top portion of the audio module with a Phillips #00 screwdriver.

Step 5

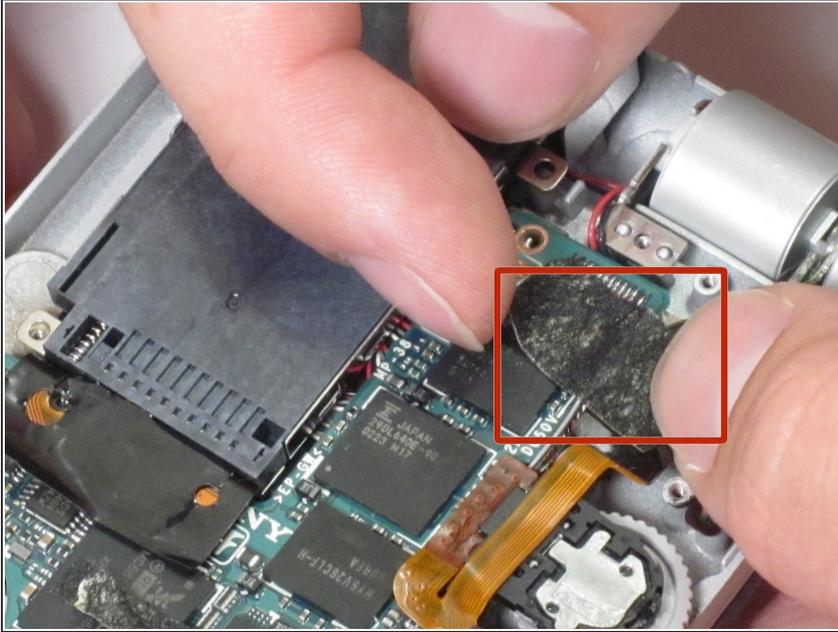


- Remove the tape that is holding the module down.

Step 6



- Lift up the orange ribbon cable and unscrew the two 2.5mm screws located at the corners of the audio module with a Phillips #00 screwdriver.

Step 7

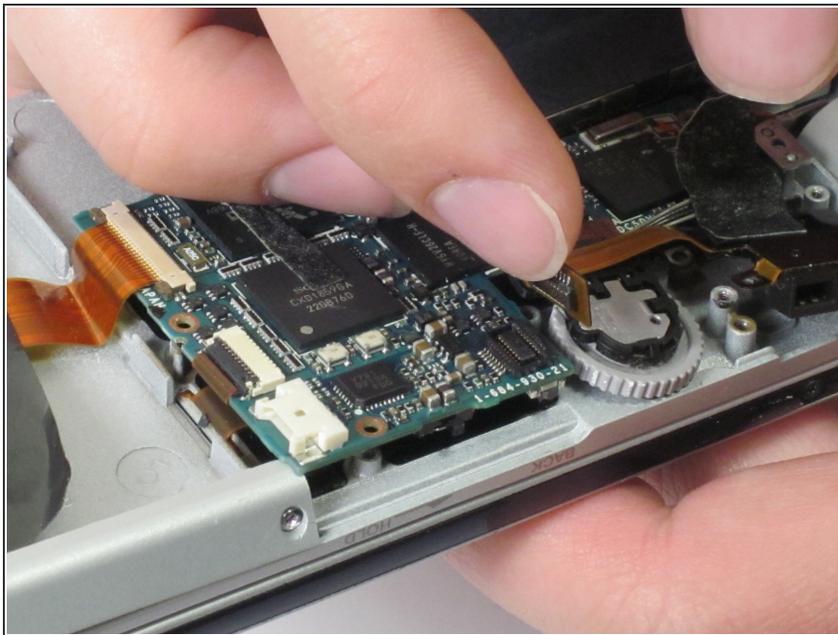

- Unplug the audio module from the motherboard by disconnecting the wires by lifting the orange wire up.

To reassemble your device, follow these instructions in reverse order.