



Insignia Sport NS-4V17 Front Case Cover Replacement

These instructions will guide you through installing the Insignia Sport front case cover.

Written By: Wesley Ballar



INTRODUCTION

Does your case have a crack? Want to clean out some dust or dirt trapped underneath the screen? This guide will help you take the front cover off.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the 3mm Phillips #00 screw on the back of the Insignia NS-4v17.

Step 2

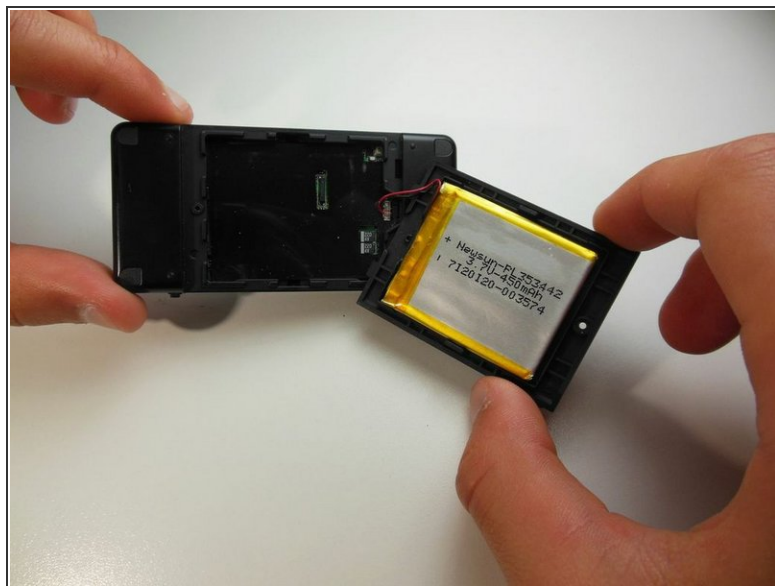

- Detach the back cover by carefully pulling up and out on the back plastic casing.

⚠ Do not pull apart the red wire connecting the battery to the device.


Step 3



- Use the plastic opening tool to reach underneath the battery, opposite from the side with the red wire, and remove it from its plastic case.

⚠ Be careful to not tear the wires while opening the case.

Step 4

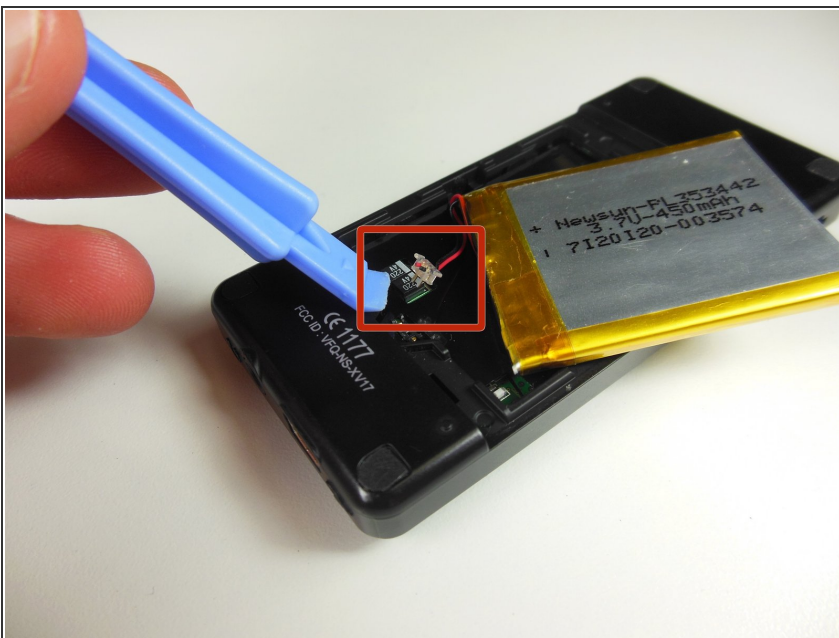

- Reach under the white plastic wire connector using the plastic opening tool and disconnect it from the socket.

⚠ Do not disconnect wires from plastic connector.

Step 5 — Front Case Cover




- Remove the four corner plastic covers on the back of the device using the plastic opening tool.

Step 6



- Using a Philips #00 screwdriver remove all four 4.5mm corner screws located underneath the corner pads.

Step 7

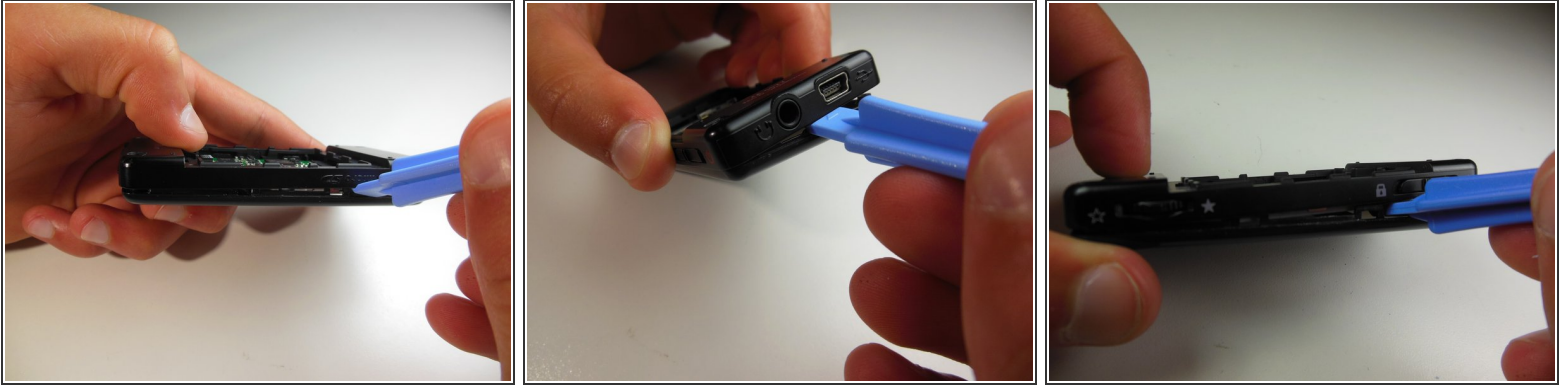

- Carefully wedge the plastic opening tool into either long side of the device.
- Slowly move the plastic opening tool along the side of the device, separating the front and back case covers.
- Repeat these steps on the other side of the device.

Step 8



- Once the front cover is loose, use your fingers to remove the front case cover for a new installation.

To reassemble your device, follow these instructions in reverse order.