



# Removing Nikon Coolpix S630 Memory Card

Written By: Edlin Garcia



## Step 1 — Memory Card



- Press the memory card down into the camera.
- The memory card should pop out.
- Remove the memory card.

To reassemble your device, follow these instructions in reverse order.