



Scuf Impact Controller Back Button Replacement

If the back button on your Scuf Impact...

Written By: Asad Ahmed



INTRODUCTION

If the back button on your Scuf Impact Controller isn't clicking properly or isn't performing in the way it's intended, use this guide to replace it. Before doing so, you must first inspect the back button of the controller to see if there are any pieces or solid objects preventing it from moving properly.

Step 1 — Back Button



- Place the controller so the back buttons are facing you.

Step 2



- Place an index finger behind the back button.
- Place your thumb on the front of the back button.

Step 3



- Slightly lift up your index finger and thumb at the same time.

Step 4



- Push the back button upward until the top piece slides out.

Step 5



- Turn the back button towards the closest controller handle and take it out.

Step 6



- To remove the rest of the buttons, follow these steps again.

After completing the steps, the controller and back button should be intact. If there are any further problems/inquiries feel free to contact [Scuf Gaming Support](#)