



Lenovo IdeaPad Flex 5-1470 RAM Replacement

Written By: Gavin B




TOOLS:

iFixit Opening Tool (1)
Phillips #00 Screwdriver (1)
Spudger (1)

PARTS:

01AG836 - Lenovo Laptop Memory - Genuine (1)
01AG843 - Lenovo Laptop Memory - Genuine (1)

Step 1 — Back Panel

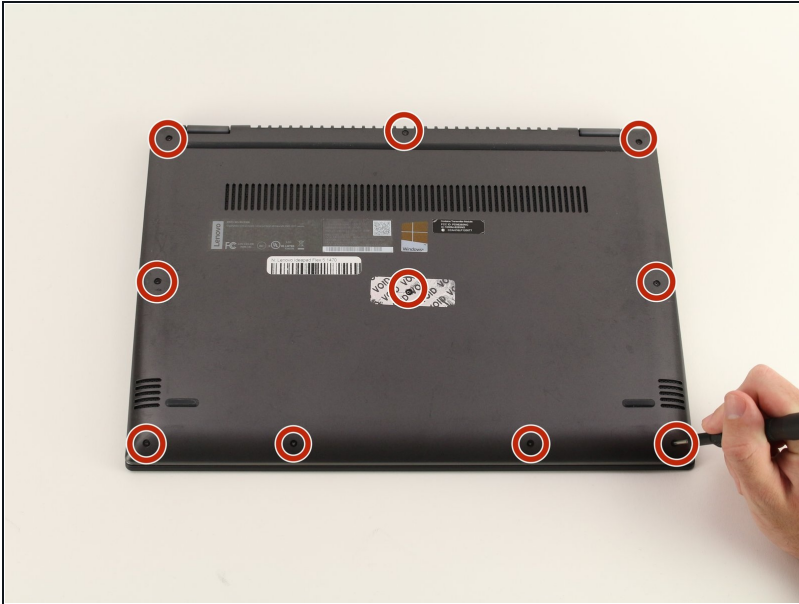


- Remove all ten 6.6 mm screws with a Phillips #00 screwdriver.

Step 2



- Use the plastic opening tool to lift up and remove the casing.

Step 3 — RAM

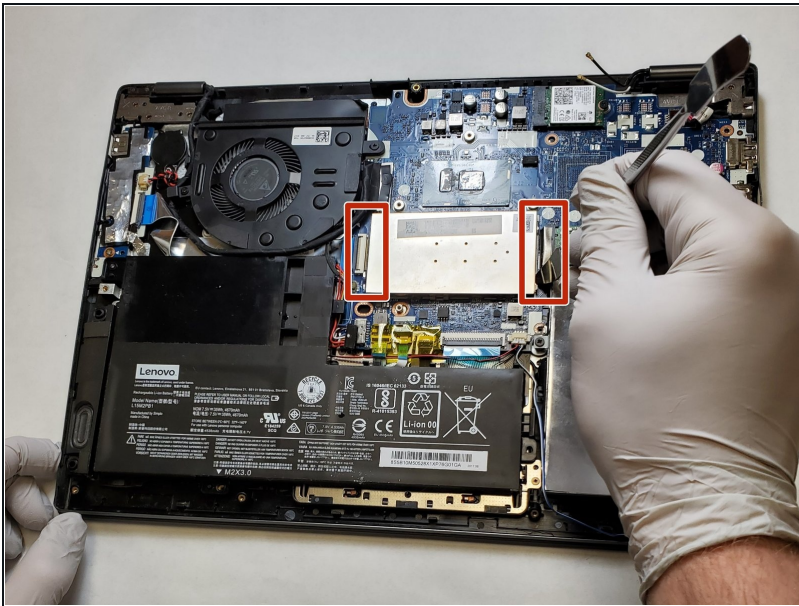

- Use a spudger to gently bend down the locking tabs on the RAM casing.

Step 4



- Use a spudger to gently lift the RAM casing, then lift it up and off.

Step 5



- Gently take hold of the RAM card and lift slightly.
- Pull the RAM card directly out of its port.

To reassemble your device, follow these instructions in reverse order.