




Acer Chromebook C732 Screen Replacement

Written By: Jacob Mehnert

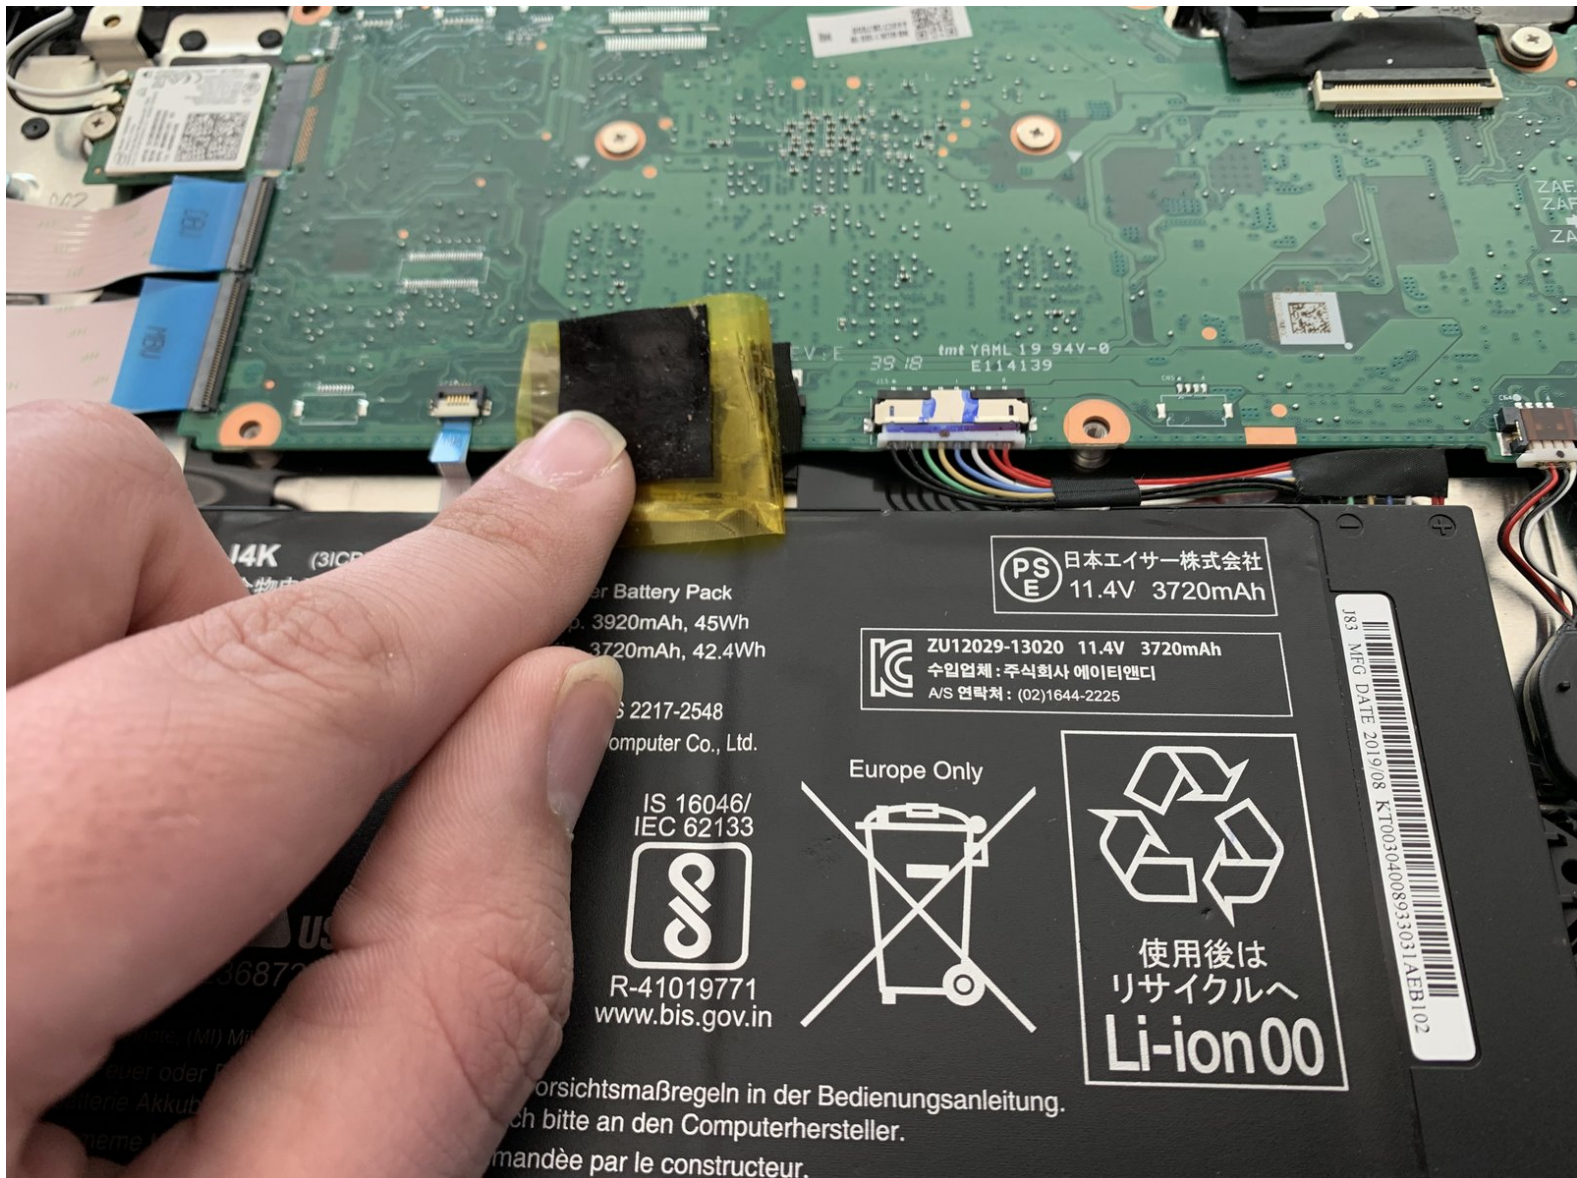



TOOLS:


- [Spudger](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)



PARTS:

- [C732 LCD Panel](#) (1)

Step 1 — Safety First

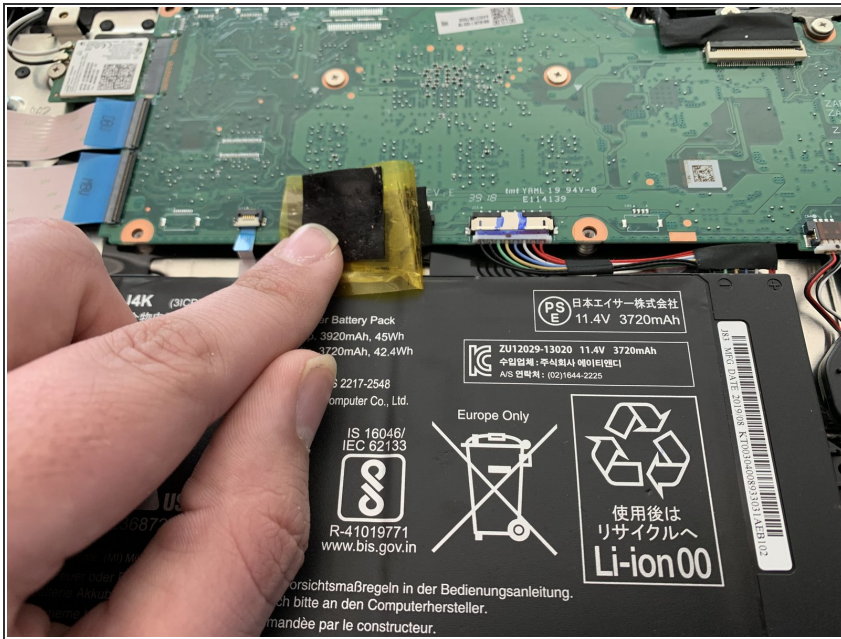

⚠ Make sure your device is turned off and disconnect your battery from the motherboard.



i You can find a detailed guide for getting to and replacing this device's battery [here](#)

Step 2



- Open the Chromebook so the display is facing towards you.

Step 3

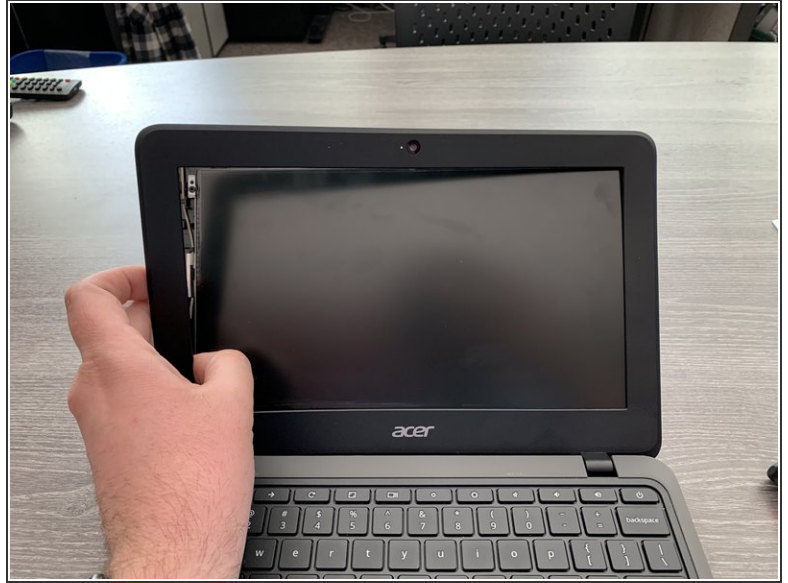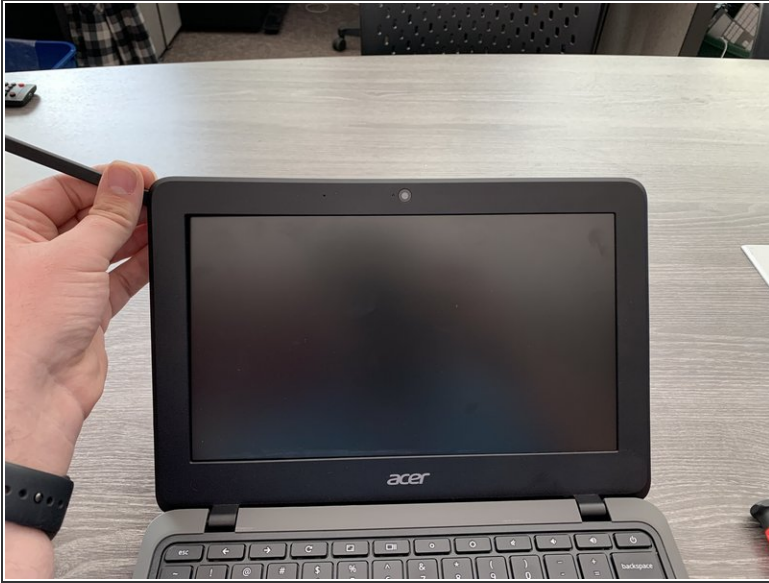

- Using a plastic opening tool or a spudger, carefully pry the plastic bezel around the screen.
- ❗ If you start in the corner, you should be able to release the tabs there. Once those tabs have been released, you can release the rest by hand.

Step 4



- Remove the four screws holding the display in place with a Phillips #1 screwdriver.
- Carefully lower the display to rest on the keyboard.

Step 5



- The display connector is located on the back and is covered by some adhesive tape.
- Carefully peel the tape back
- Once the tape is peeled back, you can lift the bar to disconnect the display cable.

To reassemble your device, follow these instructions in reverse order.