




# Revlon One-Step Hair Dryer Lint Filter Replacement

This replacement guide will help users to replace the mesh filter in the Revlon One-Step Hair Dryer

Written By: Emma Grace Bender

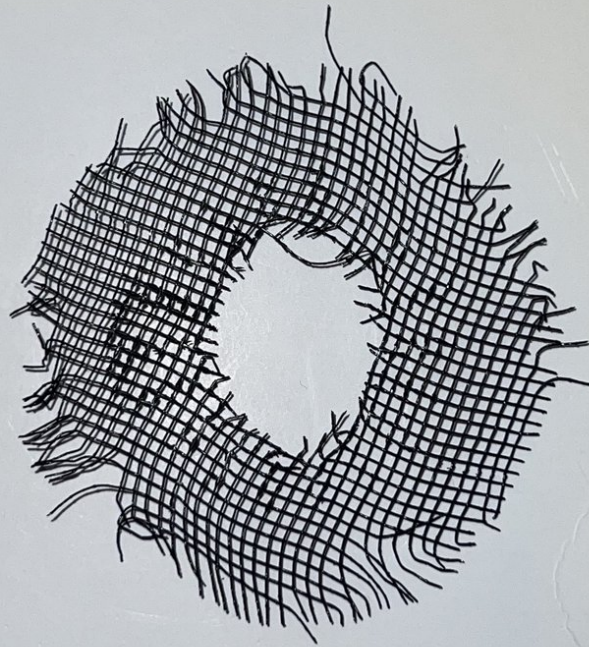

---

## INTRODUCTION

After long term use of the Revlon One-Step Hair dryer, the filter may become blocked with debris which could result in limited airflow. Therefore, this guide will help users to replace the lint filter.

---

### TOOLS:

- [iFixit Opening Tool](#) (1)
  - [Heat Gun](#) (1)
  - [Tri-point Y000 Screwdriver](#) (1)
-

## Step 1 — Barrel



- First, remove the pink panels on each side of the handle in order to access the screws.
- ⓘ Use the iFixit opening tool to remove the pink panels.

## Step 2



- After removing the pink panels, there will be one visible screw on each side of the dryer handle measuring at 11mm.
- Carefully unscrew both of these screws with a tri-point Y000 screwdriver.
- Next, completely remove the screws out of the dryer handle.



### Step 3



- Remove the barrel by twisting and pulling it away from the handle of the dryer.

**⚠ Before attempting to take the barrel off, make sure the dryer powered completely off and is cool to the touch.**

### Step 4 — Cord and Plug



- Next, slide down the air inlet and the setting dial to reveal the 11mm screws on each side of the handle at the bottom of the hair dryer.

## Step 5



- There will be one visible screw on each side of the dryer at the bottom of the handle, measuring at 11mm.
- Carefully unscrew both of these screws with a tri-point Y000 screwdriver.
- ☑ Store screws in a safe place, you will need them to reassemble the device later.

## Step 6



- Place the iFixit opening tool along the seams of the handle and pry the two pieces apart.

## Step 7



- Once you have exposed the inside of the dryer, you will see a clear port at the very end where the cord is connected and plugged into.
- Now, with your thumb and pointer finger gently pinch the top and bottom of the clear port.
- Next with your free hand carefully pull the cord out of the port of the dryer handle.

## Step 8 — Setting Dial



- Once the cord is disconnected from the handle, you should be able to slide the dial setting off completely and free it from the cord.






## Step 9 — Lint Filter



- Remove the air inlet by sliding it completely off of the wire.

## Step 10

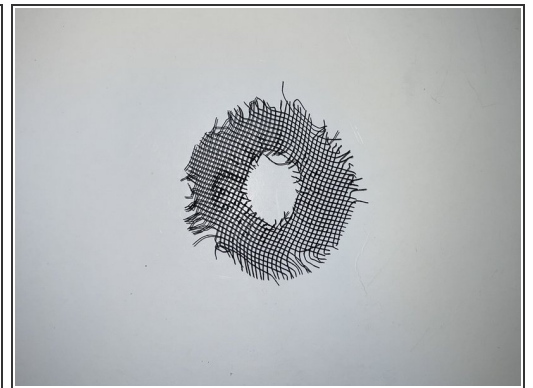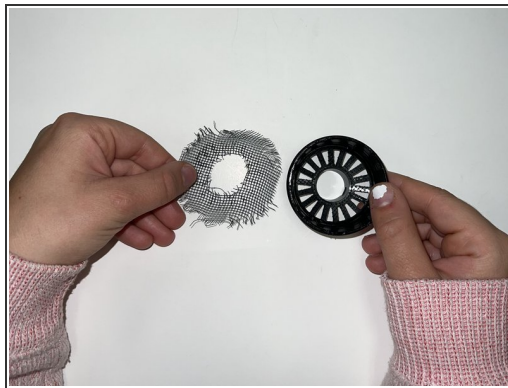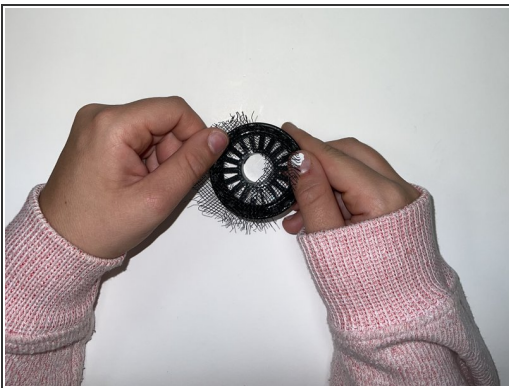

- Take the lint filter out from the air inlet by peeling it from the sides.

To reassemble your device, follow these instructions in reverse order.