



India Mark III Access Door Replacement

Remove the pump head access door to access components within the pump head, or to clean inside the pump head.

Written By: Andrew Optimus Goldheart



INTRODUCTION

Follow this guide to remove and replace, repair, or clean the access door.

TOOLS:

- [24mm Wrench](#) (1)
-

Step 1 — Access Door



- ☑ Before performing any repairs, perform a water test on the pump by raising and lowering the handle a full 40 strokes. A properly performing pump will yield greater than 10 liters.
- Remove the hex head bolt from the top of the access door on the pump head.
- ☑ On reassembly, this bolt should be hand-tight.

Step 2



- Pull the access door straight up off the pump head.
- ⓘ Store the access door in a sanitary place to prevent contamination.

Step 3



- ✦ The access door has a tongue that fits into the base of the pump head.
- ⓘ The access door makes a convenient tray to hold nuts and bolts during the disassembly.

To reassemble your device, follow these instructions in reverse order.