



Afridev Head Replacement

Replace the head of an Afridev water pump

Written By: Jake Devincenzi



INTRODUCTION

Use this guide to remove the head of an Afridev pump. Then follow the instructions in reverse order to install a replacement head.

TOOLS:

- [Socket Wrench](#) (1)
 - [24mm Wrench](#) (1)
 - [19 mm crescent wrench](#) (1)
-

Step 1 — Head



- Assemble the required tools, including the Afridev tool and crescent wrenches.

Step 2



- Perform a water test on the pump, by raising and lowering the handle a full 40 strokes. A properly performing pump will yield greater than 10 liters.

Step 3



- Loosen the bolt on front of the face plate with the Afridev tool.
- Remove the plate from the pump by lifting it straight up.

To reassemble your device, follow these instructions in reverse order.