




# Alienware M14xR2 Battery Replacement

This guide will show you how to replace the battery in your Alienware M14x R2 laptop.

Written By: Connor Bovee

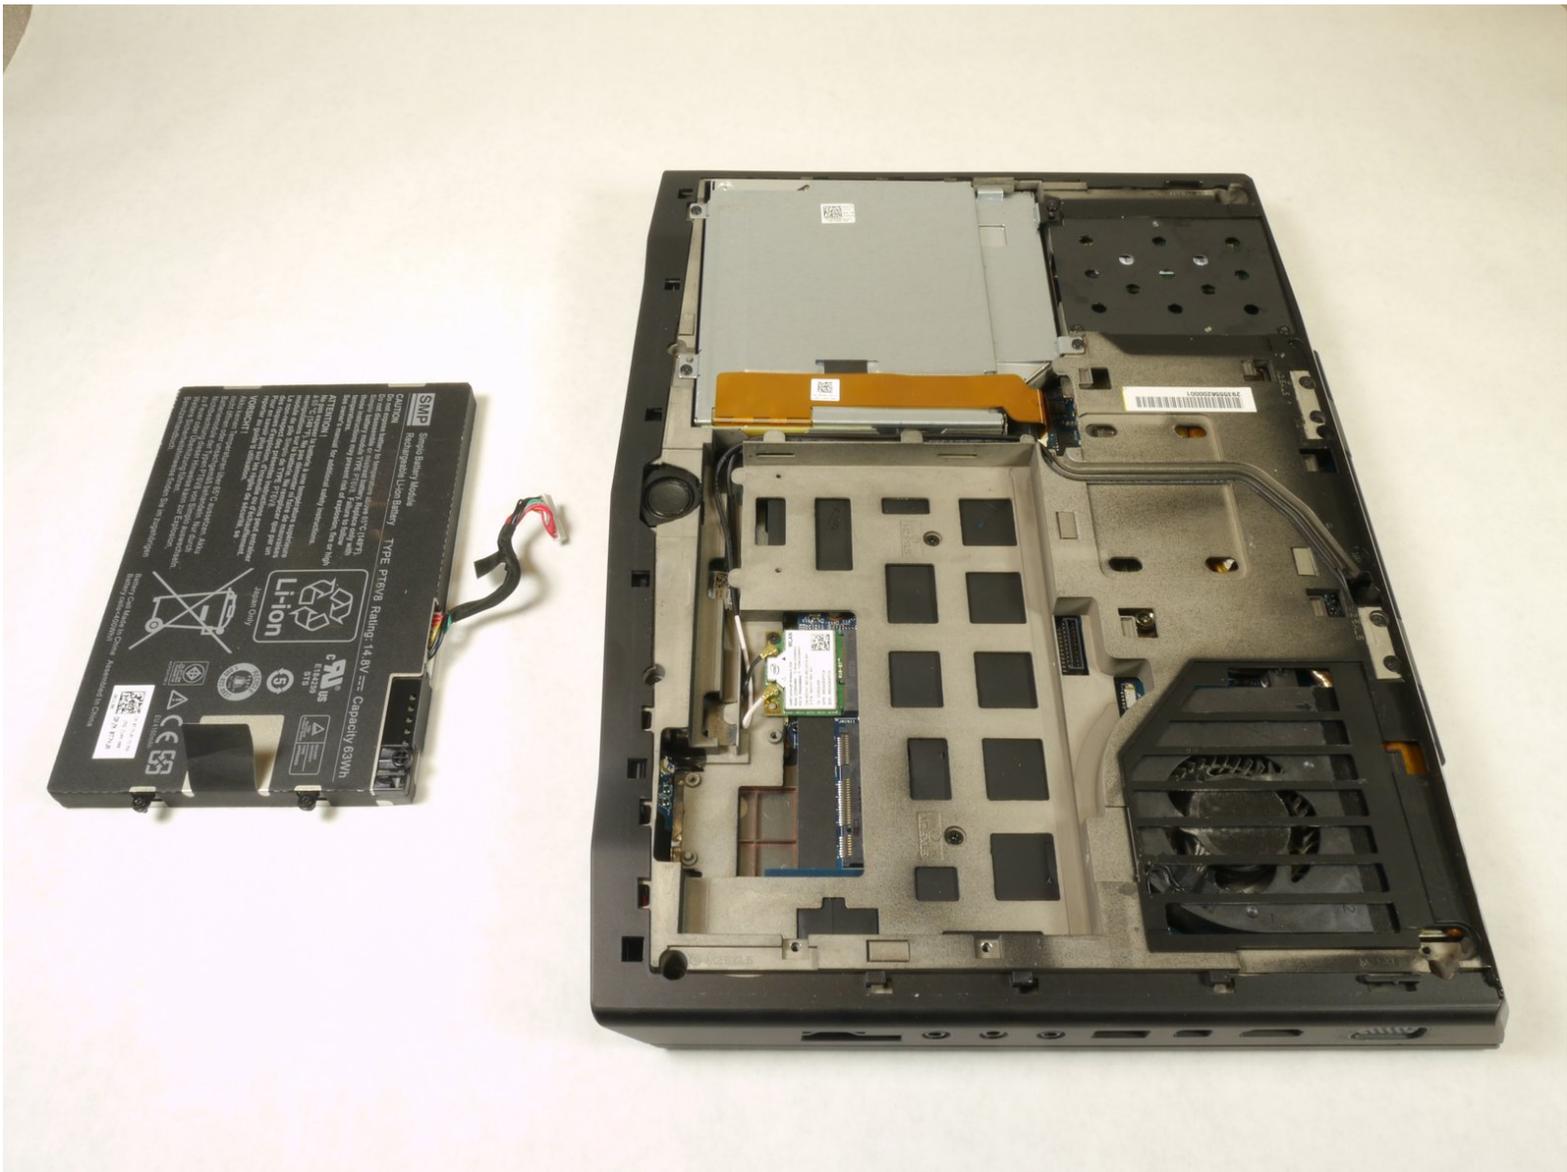

## INTRODUCTION

This guide will show you how to safely remove your laptop battery without damaging the laptop or battery.

---

### **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)

### **PARTS:**

- [Alienware M14x-R2 \(P18G\) Battery](#) (1)
-

## Step 1 — Battery



- Turn the computer off.
- Disconnect the charging cable from the computer.
- ⚠ Failure to unplug the charging cable could result in electric shock and serious injury.
- Flip the computer upside down.

## Step 2




- Loosen the two 6.35 mm size 1 Phillips screws on the back cover.
  - ⓘ The two screws are spring loaded and will not separate from the cover.
- Slide the back cover towards you and then lift upwards to remove.

## Step 3



- Loosen the two 6.35 mm size 1 Philips screws attaching the battery to the laptop.
- ⓘ The two screws are clipped into the battery and will not detach.

## Step 4

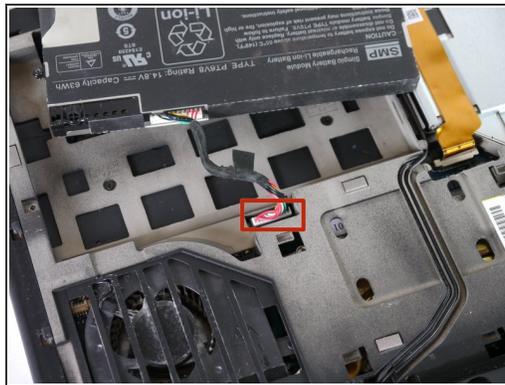

- Pull up on the black tab on the battery to reveal the connection between the battery and laptop.
- Pull up on the white connector to disconnect it from the laptop.
- The battery is now free to remove from the laptop and can be set aside.

To reassemble your device, follow these instructions in reverse order.