



# Palm IIIx Battery Replacement

Explains how to replace old or damaged...

Written By: David Haskell



# INTRODUCTION

Explains how to replace old or damaged batteries with new ones.

## Step 1 — Battery



- Place the Palm IIIx face down on a flat surface.

## Step 2



- Push down and lift up the battery cover to remove it.

## Step 3



- Remove the old batteries one at a time.

---

To reassemble your device, follow these instructions in reverse order.