



Les Paul Wireless Guitar Peripheral Fret Buttons Replacement

This guide will demonstrate how to open the neck of the guitar and replace the fret buttons.

Written By: Chris




INTRODUCTION

This guide will demonstrate how to open the neck of the guitar and replace the fret buttons, the colored buttons on the neck that correspond to the notes in the game.

TOOLS:


- [TR10 Torx Security Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [5x Different Fret Buttons to replace them](#) (1)
 - [Hand to unlock the neck.](#) (1)
-

Step 1 — Fret Buttons

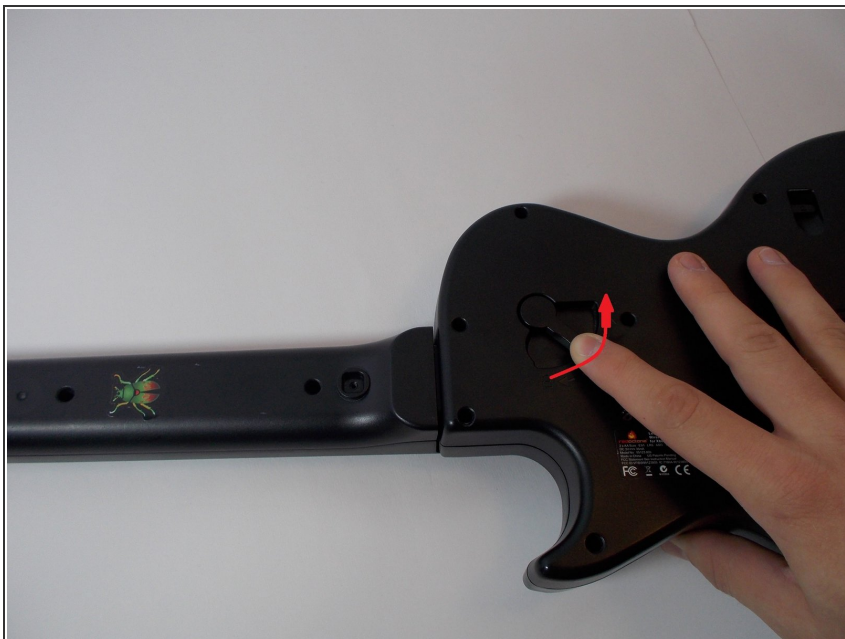


- Pull the Lock on the back of the body to detach the neck from the body.

Step 2

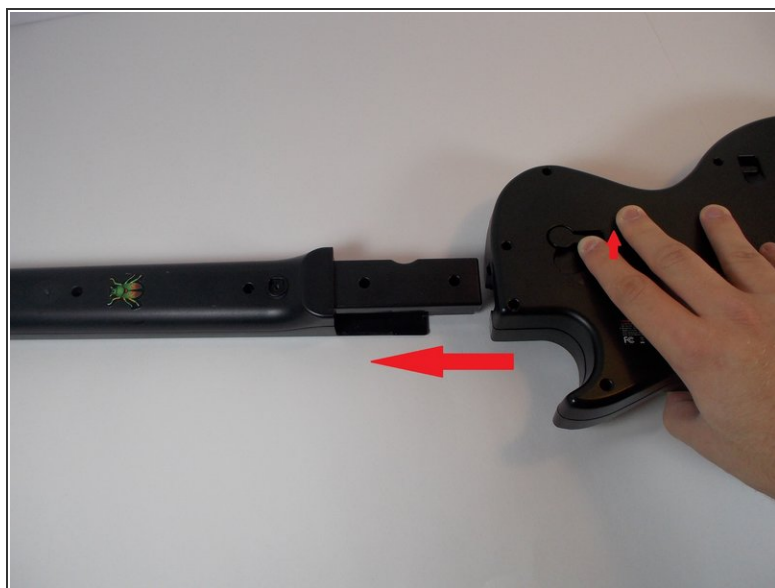


- Remove the 10 screws (each are 1 cm long) on the back of the neck using a T-10 Torx security screwdriver.
- Remove the back of the neck.

Step 3

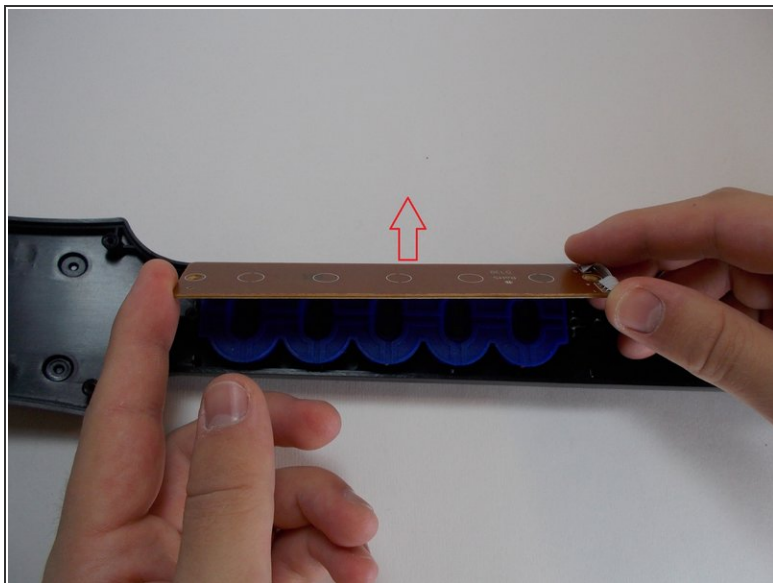


- Unscrew the two screws on the fret PCB using a PH1 Phillips head screwdriver. Each screw is 0.8 cm.
- Remove the fret PCB
 - ⚠ The fret PCB is in very tight. Be careful not to break it.
 - ⓘ The connector from the neck to the body can easily slide out of place. Make sure it is in position before closing the neck

Step 4

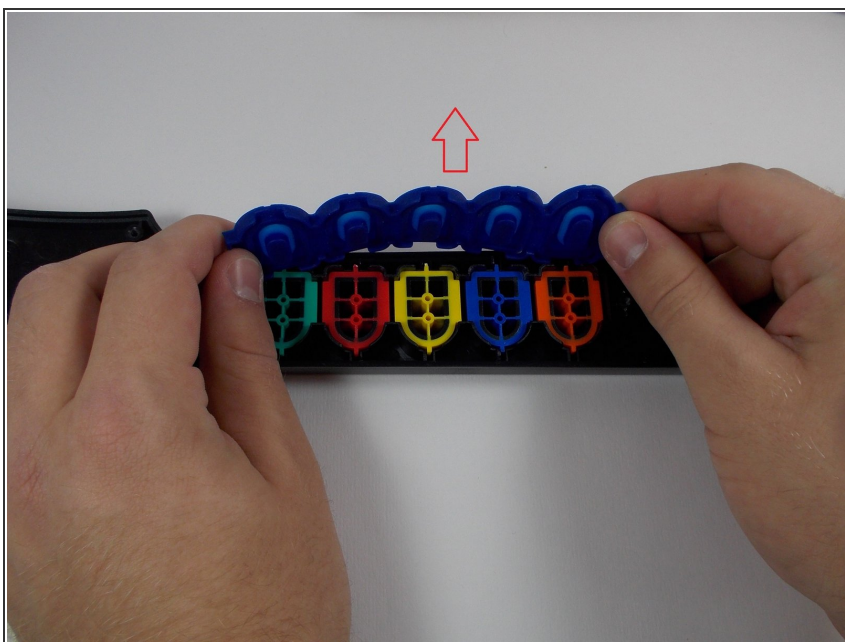

- Remove the blue fret button pad.
- ⓘ This pad should not be attached in any way

Step 5

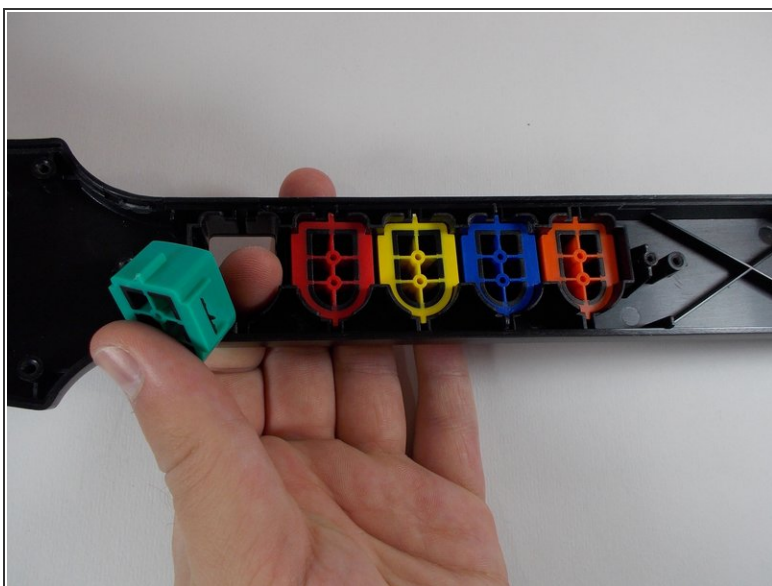

- The fret buttons should now easily slide out.

To reassemble your device, follow these instructions in reverse order.