



# LG CF360 Back Cover Replacement

The back case of the phone holds the...

Written By: Kathrine Muirhead



# INTRODUCTION

The back case of the phone holds the motherboard and back speaker. You need to disassemble the back to replace these items.

---

## TOOLS:

[Tweezers](#) (1)

[Phillips #000 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

---

## Step 1 — Battery




- On the back of the phone, place your thumb on the three raised bumps and slide the back cover upward.

## Step 2



- Lift and remove the battery.

## Step 3 — Back Cover

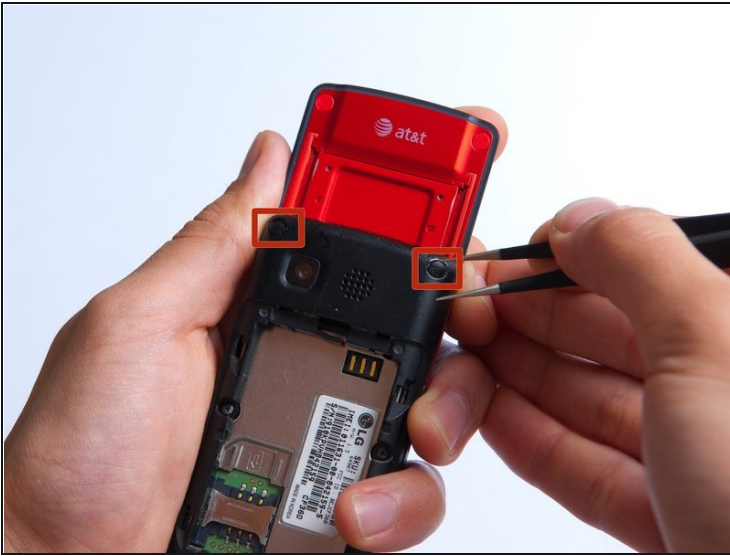

- Remove the two screw covers at the top of phone with [tweezers](#).




## Step 4




- Remove the six Phillips #000 (3mm) screws.

## Step 5

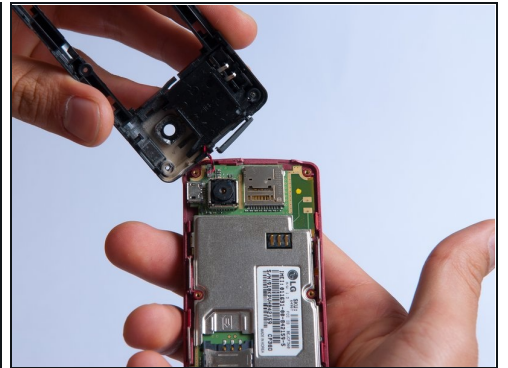

- Use the plastic opening tool to pry the back cover off. Insert the tool between the back cover and red mid section and go around the entire phone.
- ① The plastic side buttons fall out when you take the back cover off.
- ① The back cover is connected to the speaker by red and black wires.

## Step 6

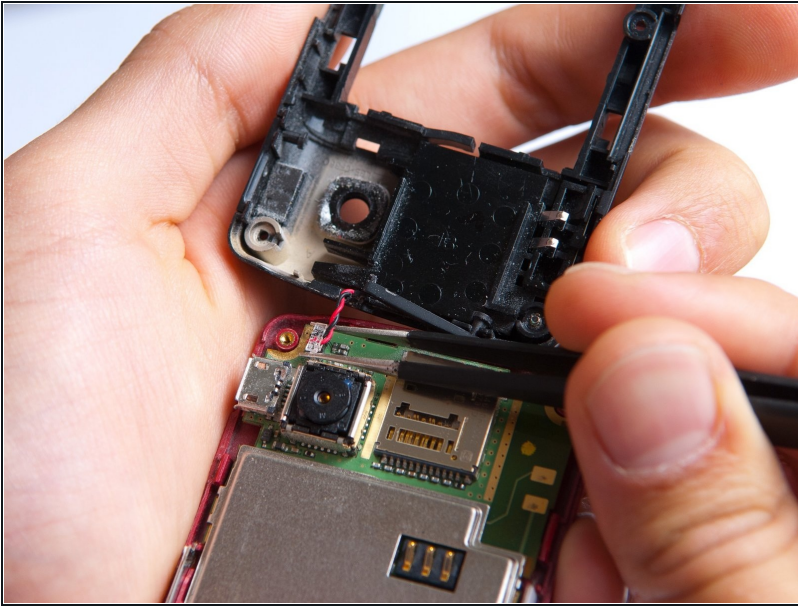

- Use the tweezers to remove the red and black wires connecting the speaker to the green motherboard by pinching the sides of the plastic base near the motherboard.
- Set the back cover with the speaker aside.

---

To reassemble your device, follow these instructions in reverse order.