



Samsung TFT Color YP-T7J Front Cover Button Replacement

The objective of this guide is to demonstrate how to replace the button on the front of the MP3 player.

Written By: Jason Farr





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — The Back Cover



- Remove the 2 screws on the back cover using a Phillips head #0 screwdriver.

Step 2




- Remove the screw on each side of the device using a Phillips head screwdriver.

Step 3





- Using the plastic opening kit, place the prying end of the kit into the opening created by removing the screws.
- Gently pry open the back cover. Insert the plastic opening tool in between the cover joints.

Step 4 — The Battery

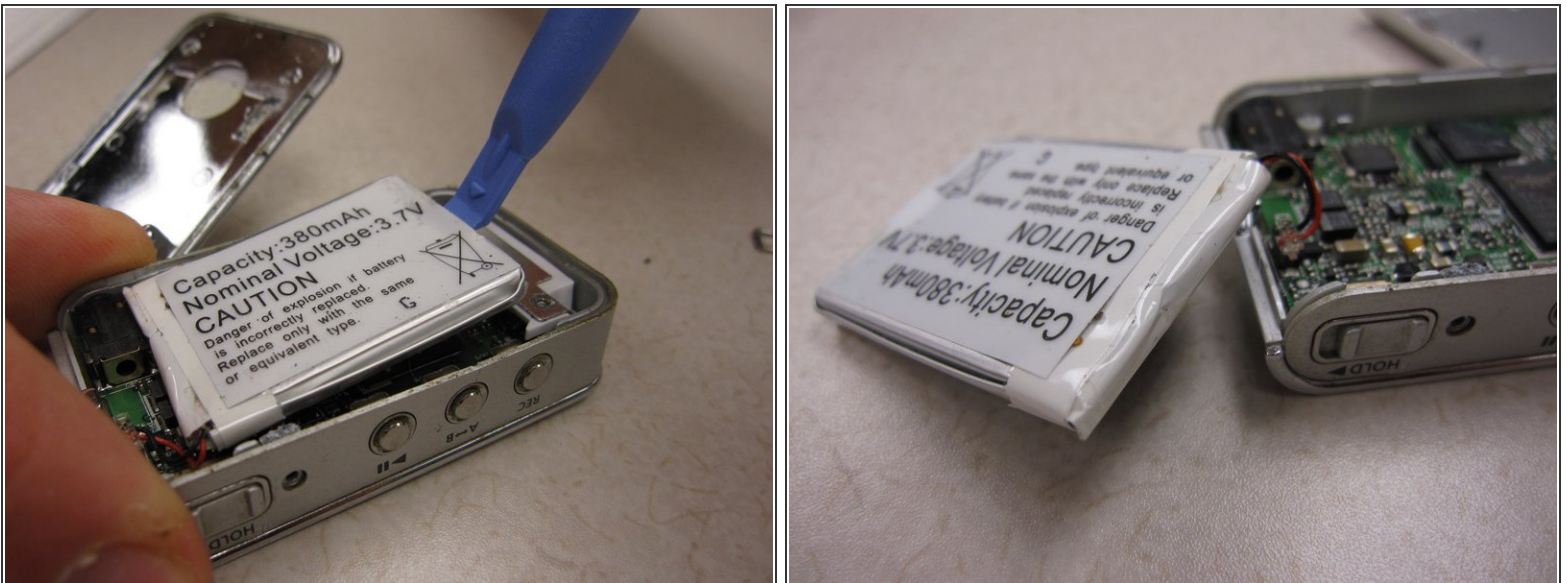

- Once the back cover has been removed the battery will be visible.
- Pry the battery from the device.
- ⓘ NOTE: The battery should still be connected to the device




Step 5

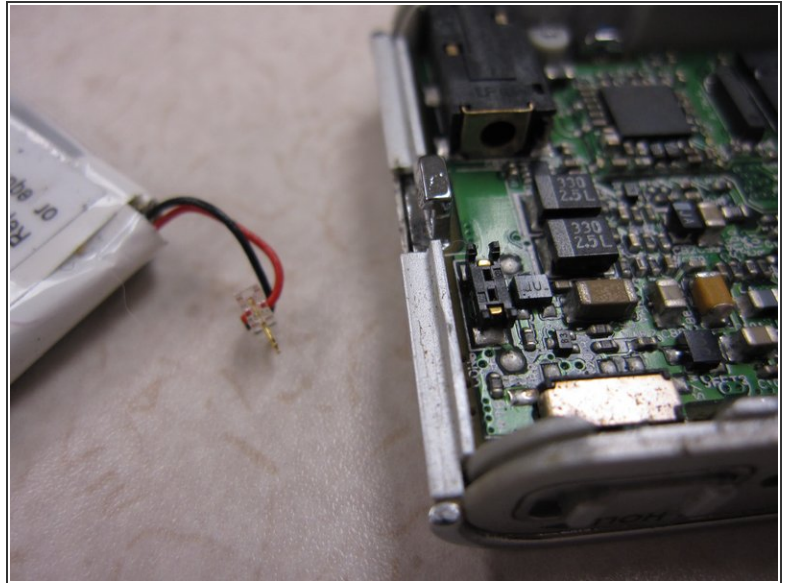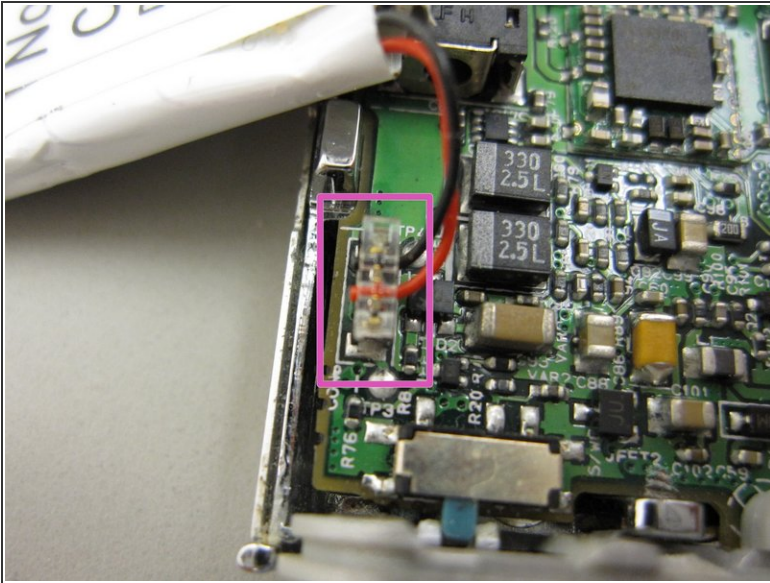

- Unplug the battery connecting cables.


ⓘ NOTE: The battery now should be free from all connections to the device.

Step 6 — Disassembling Samsung TFT Color YP-T7J USB Connector Dock

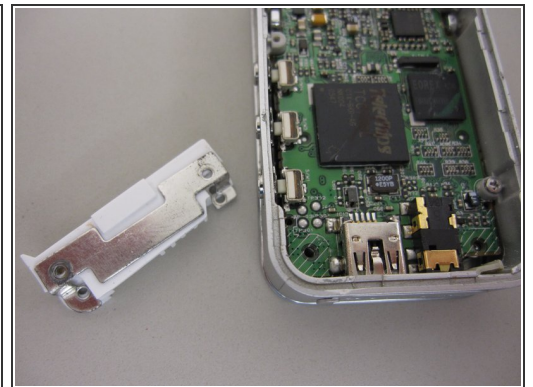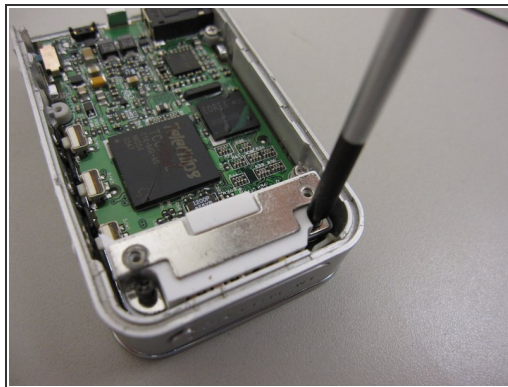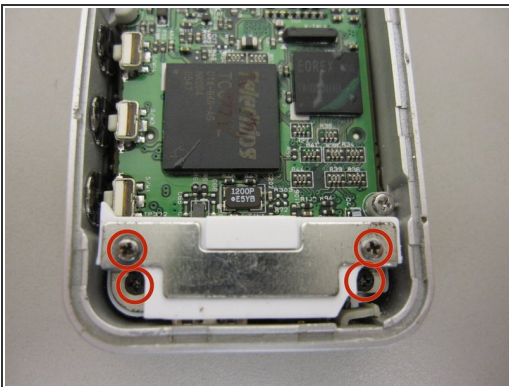

- Once the battery has been removed you can see the motherboard.
- Unscrew 4 screws on the metal dock using a Phillips head screw driver.
- The USB connector can now be taken off of the device.

Step 7 — The Front Cover

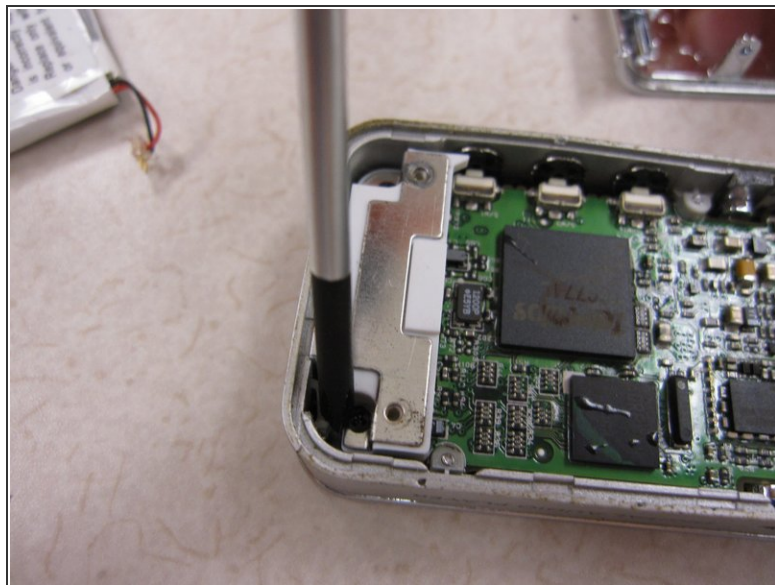


- Using the philips screwdriver, remove the two screws on the mother board.

Step 8




- Place the pry tool in-between the front cover and mother board.
- Gently separate the front cover.

Step 9

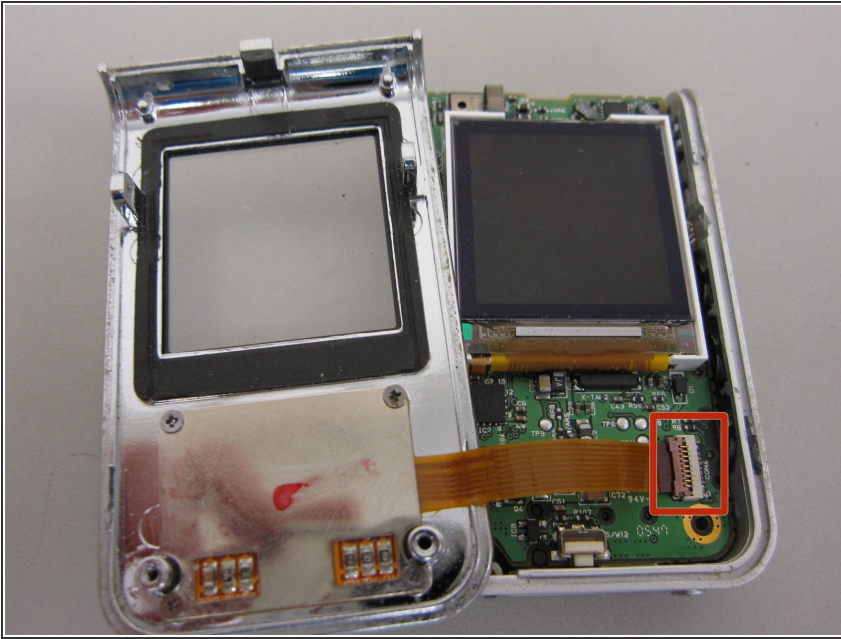

- After opening the front cover you will see and electric ribbon connecting the buttons to the motherboard.



Step 10

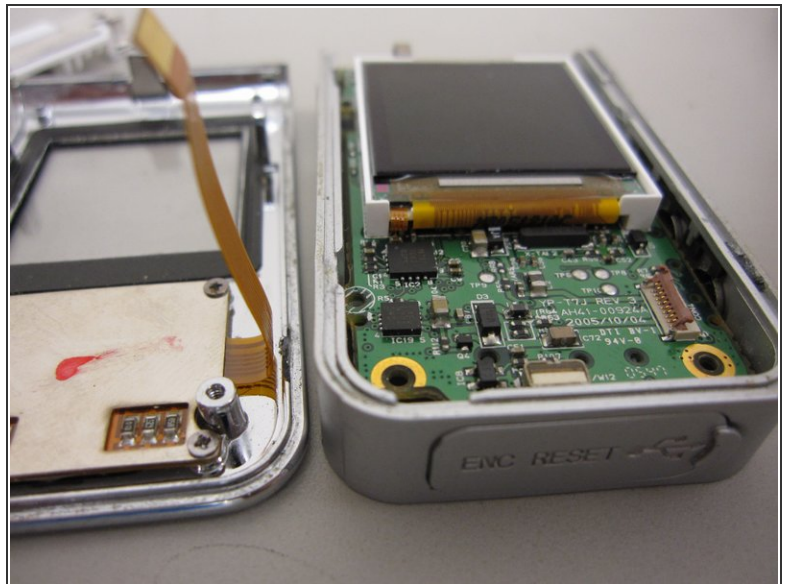

⚠ CAUTION: Do not rip the electric ribbon from the motherboard.


- Carefully flip up the plastic lip that holds the electric ribbon to the board.

Step 11 — Front Cover Button

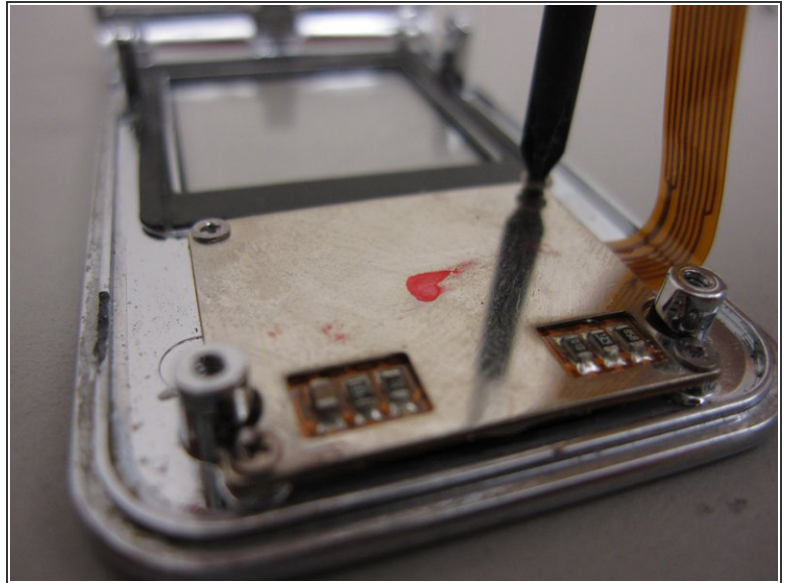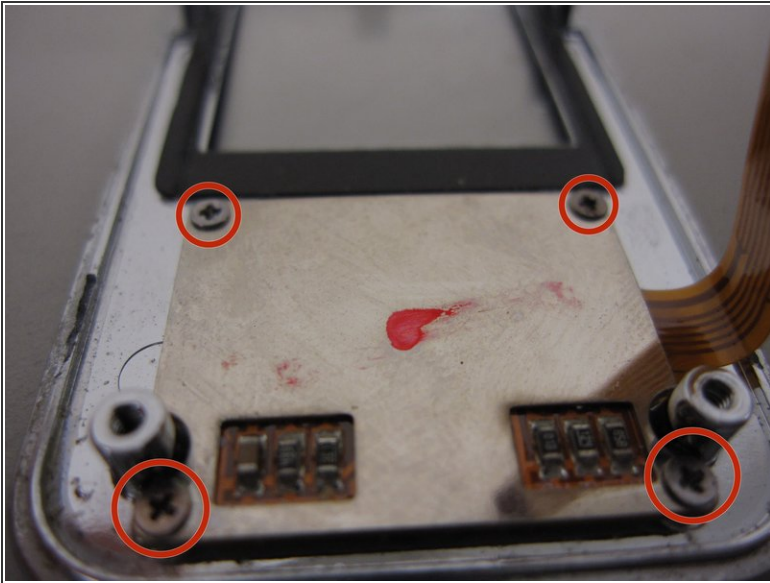

- Once the front cover is separated from the device, locate the four screws in the metal plate.
- Using the small phillips screw driver, remove the four screws.
- Remove the metal cover.

Step 12

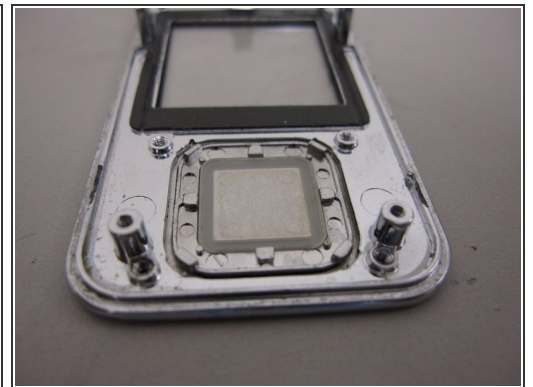

- Remove the rubber button pad.

To reassemble your device, follow these instructions in reverse order.