



Eureka 1660SP Roller Replacement

Written By: Jennifer Sheils



INTRODUCTION

Replace the small wheel or 'roller' on the bottom of the Eureka.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Roller



- Press the black separator switch and lightly pull the bottom half away from the top.

Step 2



- Remove the vacuum head from the lower half of the body.

Step 3



- Turn the vacuum head wheels up and remove all seven 13.9mm screws from the bottom using a #2 Phillips head screwdriver.
- Separate the top and bottom of the vacuum head. Set the top aside.

Step 4



- Turn the vacuum head's bottom over so that the inside of the head is facing up.
- Using a Phillips #00 screwdriver, press down on metal bar of the roller on one side until it releases from the housing.
- Turn the vacuum head's bottom over and pull at the roller and bar until they are completely out of the housing.

Step 5



- Press the new bar and roller into place.
- Replace the screws.