



LG Encore GT550 Audio Jack Replacement

How to replace the LG Encore GT550 Audio Jack

Written By: Lindsey Harding



INTRODUCTION

If you need to replace the audio jack in your LG Encore GT550, follow this guide.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Audio Jack



- Turn the device over so the backside is facing up.
- Use your fingers or an opening tool to remove the back cover in order to expose the battery.

Step 2




- Use your fingers or a spudger to remove the battery. Lift it from the side opposite of the camera.

Step 3



- Use a Phillips #0 screwdriver to remove six screws around the perimeter of the phone.

Step 4

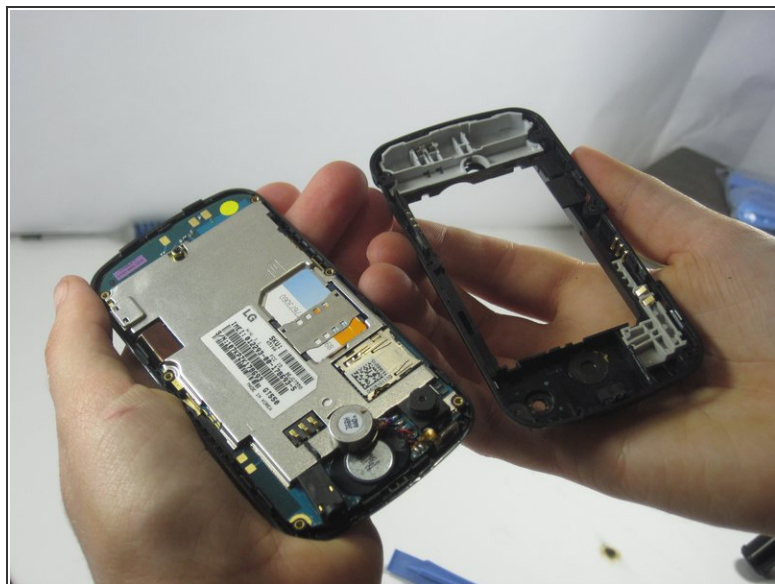

- Place the opening tool in the seam of the device and pry around the perimeter to separate the top case from the bottom case.

Step 5



- Place the opening tool on the top on the device between the phone casing and motherboard.
- Separate the screen and the motherboard.

Step 6



- Push the audio jack out and replace it.

To reassemble your device, follow these instructions in reverse order.