



Keurig Mini B-31 K-cup Holder Replacement

This guide will show you how to remove and replace your K-cup holder.

Written By: Andrew Adriance



INTRODUCTION

Regular usage of this device may cause the K-cup holder to clog or accidentally crack. This guide will show you how to remove a K-cup holder for either cleaning or replacement for your Keurig Mini B-31.

TOOLS:



- [Fingers](#) (1)

Step 1 — K-cup holder




- Lift up the handle of the Keurig Mini.

Step 2

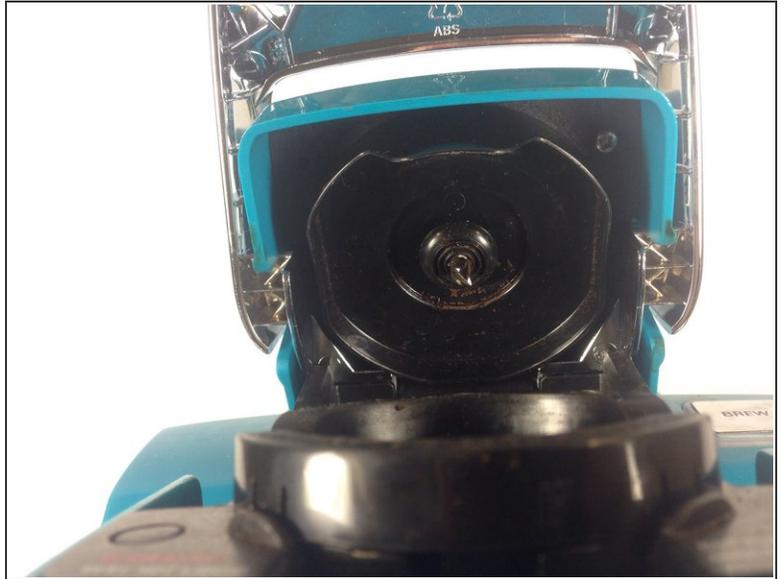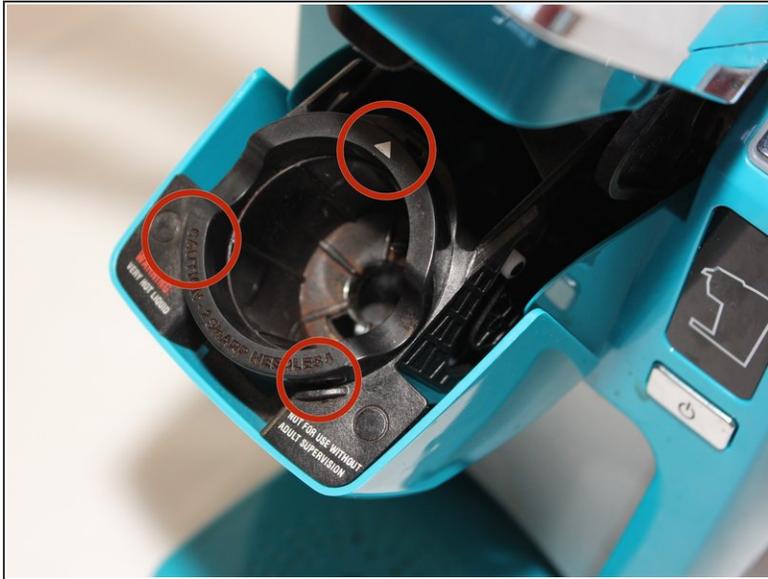

- ⚠** Make sure to avoid the needles above and inside the K-cup because they may puncture your hand
- Firmly place a finger on each one of the three tabs that hold the K-cup holder into place, pushing in lightly. The tabs are difficult to see, but they are there and will make the removal easier. The top tab is located in the same location as the white triangle and the bottom two are located under the plastic bumps highlighted in the picture.

Step 3

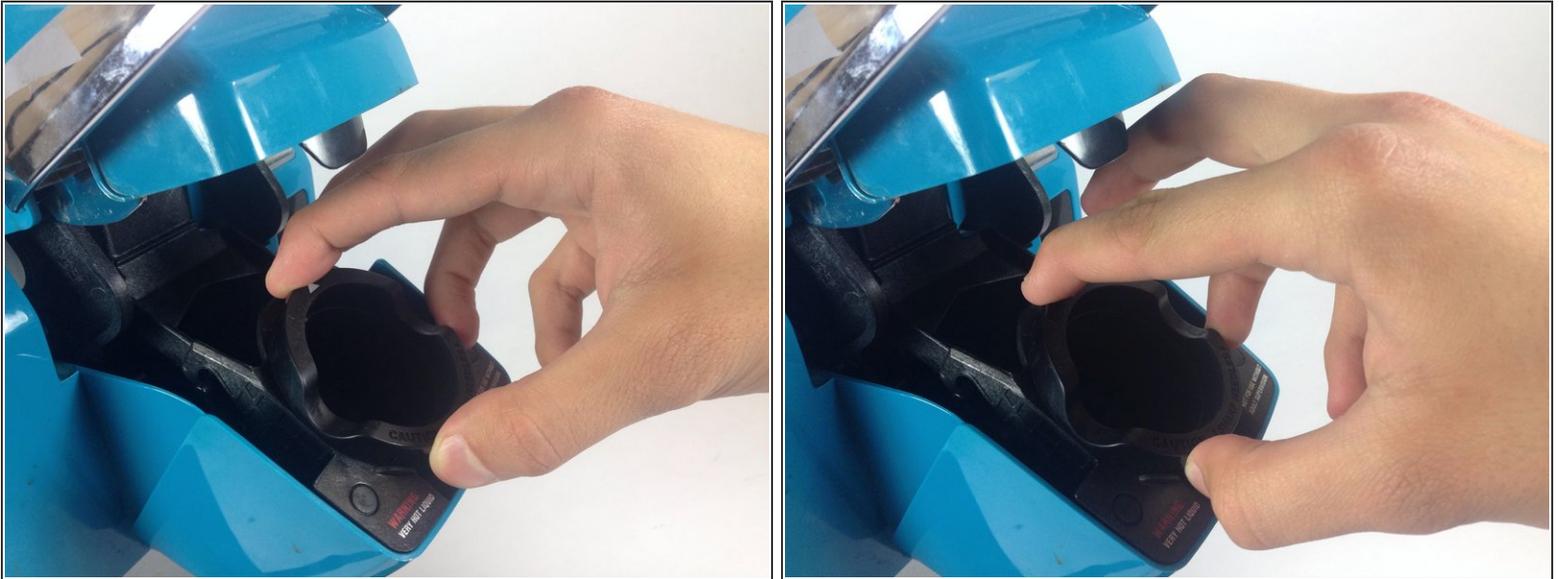

- Firmly rock the K-cup holder from side to side, loosening the K-cup holder from its seat.

Step 4



- Pull the K-cup holder straight out.

To reassemble your device, follow these instructions in reverse order.