



Disassembling Kodak Easyshare C813 Back Cover

This tutorial demonstrates how to remove the...

Written By: Susan Marano



INTRODUCTION

This tutorial demonstrates how to remove the back cover from the camera

TOOLS:

Phillips #00 Screwdriver (1)


iFixit Opening Tool (1)

Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera near the selector dial.

Step 2

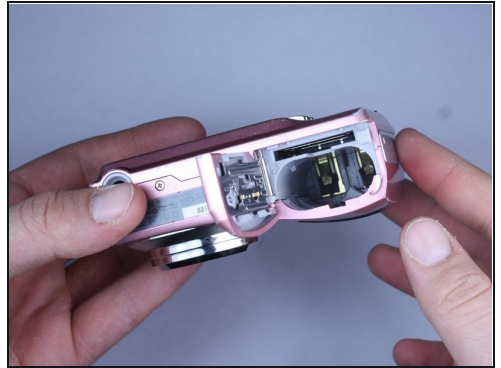

- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.

Step 3 — Back Cover




- Before removing back cover, it is advisable to use an [anti-static wrist strap](#) to prevent damage to electronics.

Step 4



- Turn the camera off by firmly pressing the power button located on top of the camera.

Step 5

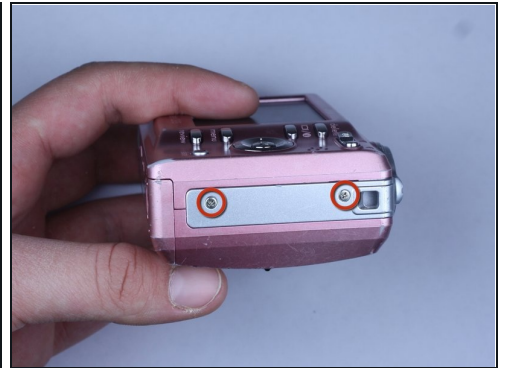

- Locate the 7 screws holding the back cover on.
- Three screws are located on the bottom of the camera.
- Two screws are located on the side shown in the photograph.
- Two final screws are located on the opposite side shown in the photograph.

Step 6




- Remove all 7 screws:
 - Hold the camera firmly with one hand so that you can still see a screw.
 - Place the Philips 00([Found here](#))screwdriver into the screw.
 - Turn the screwdriver to the left until it is free.
 - Repeat for the remaining screws.

Step 7



- Use plastic opening tools to slightly open the side of the case.
- Insert a plastic opening tool and apply pressure to the internal three tabs at the top.
 - The first two are near the words "3X Optical Zoom".
 - The third is near the shutter button.

Step 8

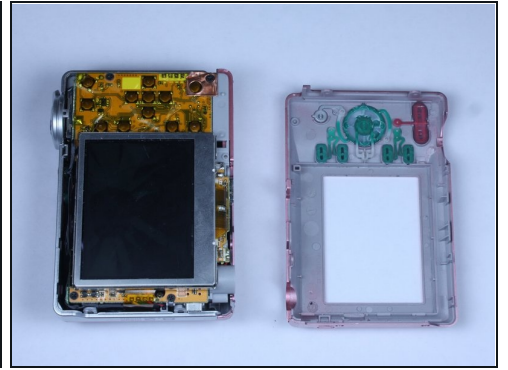

- Gently pull apart the back cover from the rest of the camera.
 - Make sure there are no more screws or tabs keeping the cover on.
 - Use the plastic opening tool to separate any sides still closely connected.
-