



Anker 2.4G Wireless Mouse Battery Replacement

If your Anker 2.4G Wireless Mouse is not...

Written By: Vincent Lee



INTRODUCTION

If your Anker 2.4G Wireless Mouse is not working properly or at all, a new battery may be needed. This guide will provide assistance on how to replace the battery.

The battery provides power for the mouse. If the battery is close to being dead, the mouse may not work properly. Additionally, if the battery is fully dead, the mouse will not work at all.

In preparation for replacing the Anker 2.4G Wireless Mouse battery, one working AA battery is required.

Note:

When removing the plastic cover in step 1 and the battery in step 2, do not use metal tools for assistance. It is a hazard risk for the metal tools to touch the battery. Instead, use plastic opening tools and spudgers (nylon) for additional assistance.

If the mouse is still not working properly after battery replacement, check to see if the battery was placed in the correct direction so the "+" and "-" symbols line up. If battery direction is not the problem, then visit the [troubleshooting page](#) for additional tips.

PARTS:

[AA Battery](#) (1)

Step 1 — Battery



- Remove the battery cover with a plastic opening tool, nylon spudger, or a fingernail.

Step 2



- Remove the battery with a finger nail or a nonmetal tool.

To reassemble your device, follow these instructions in reverse order.

