


Brother PT-D200 Circuit Board Replacement


Written By: Jeston Mitchell



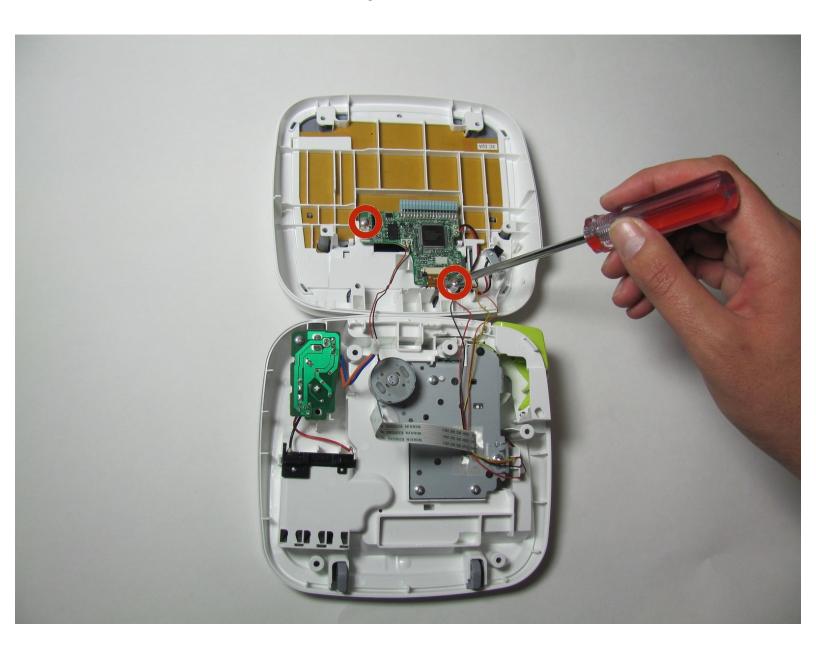


Phillips #2 Screwdriver (1)

Step 1 — Circuit Board Cables

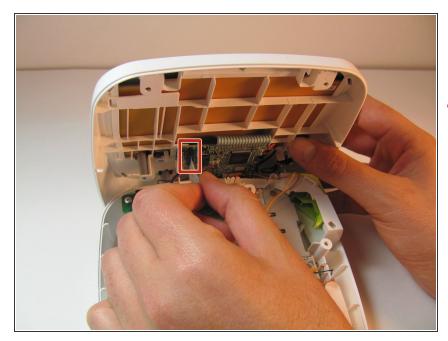


- Gently pull out the ribbon cable from the circuit board.
- ↑ The ribbon cable is very fragile.


Step 2

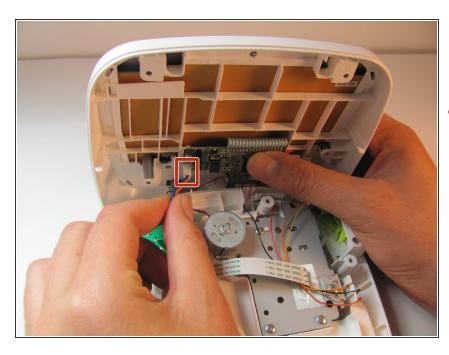

- Remove two-pin plastic connector from the circuit board.
- Gently pull the two-pin connector from the circuit board to avoid damaging the board.


Step 3 — Circuit Board

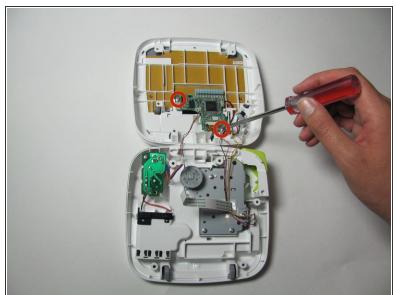

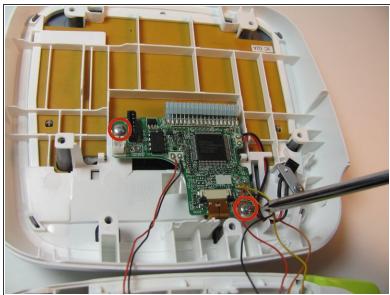


• Remove the two 3/16" screws from the circuit board using the Helping Hand 1/4" screwdriver.

Step 4

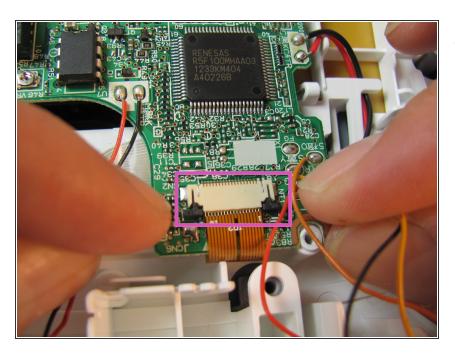

 Release the two black clips that hold the LCD cable ribbon in place. To release, pull the clips towards the ribbon.

Step 5

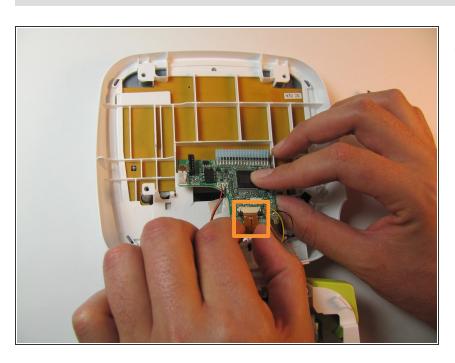

 Disconnect the LCD ribbon cable from the circuit board.

To reassemble your device, follow these instructions in reverse order.