



# Disassembling of HP 625 Laptop Teardown Guide

Repair is Noble, With Hp 625 Teardown.

Written By: samuel



---

## INTRODUCTION

On This Segment of Hp 625 Teardown, You Will Learn How To Disassemble and Build More Skills Towards Your Endeavour.



### TOOLS:

- [Anti-Static Wrist Strap](#) (1)
-

## Step 1 — Teardown Guide



- Overview of Hp 625.


## Step 2



- Front View of Hp 625.



## Step 3

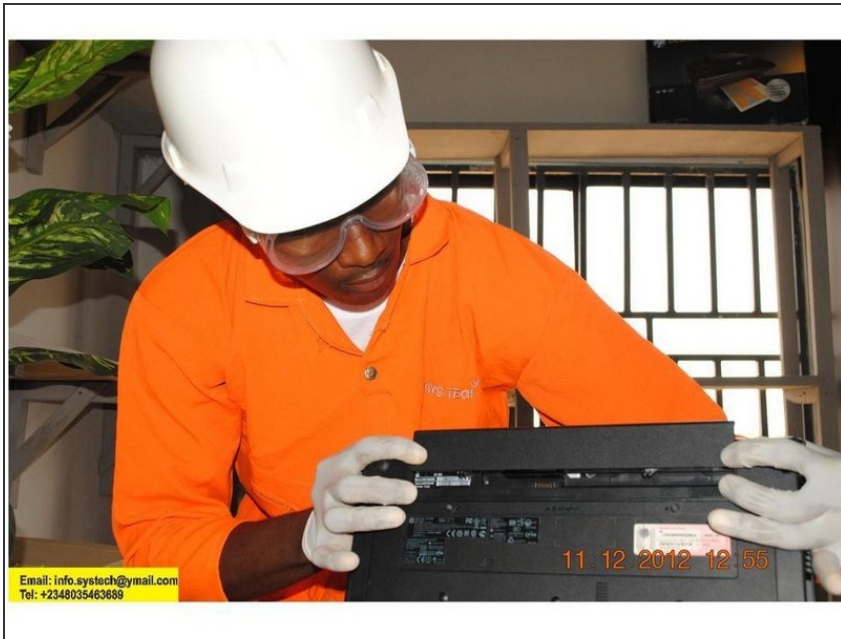

- Removal of Hp 625 Battery.

## Step 4



- Removing of Hp 625 Battery.

## Step 5



- **Hp 625 Battery Removed.**

## Step 6



- **Unscrewing Hp 625 Service Door (4 Screws).**

## Step 7



- Removing Hp 625 Service Door.


## Step 8



- Hp 625 Service Door Removed.



## Step 9

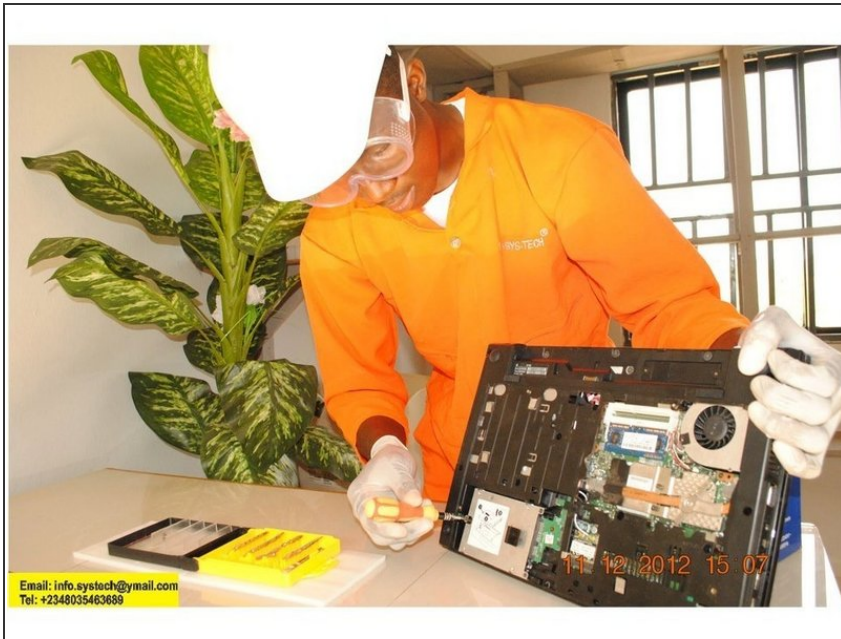

- **Unscrewing Hp 625 HDD, (3 Screws).**

## Step 10



- **Removing of Hp 625 HDD, (Gently Slide).**

## Step 11



- **Hp 625 HDD Removed.**

## Step 12



- **Unscrewing of Hp 625 DVD Drive, (1 Screw)**



## Step 13



- **Removing of Hp 625 DVD Drive, (Carefully Slid).**

## Step 14



- **Hp 625 DVD Drive Removed.**

## Step 15



- **Removing of Hp 625 DDR3 RAM, (Together With Two Hands Expand The Clips a little).**

## Step 16



- **Hp 625 DDR3 RAM Removed, ( Be sure not to Touch The Gold Plated Pinouts).**



## Step 17



- **Unscrewing of Hp 625 Keyboard, (6 Screws Noted By Keyboard icon).**

## Step 18



- **Removing of Hp 625 Keyboard Flex Cable, (Gently Release The Locking Mechanism).**



## Step 19



- **Hp 625 Keyboard Removed.**

## Step 20



- **Disconnecting of Hp 625 Power Flex Cable From Connector, ( Fairly Unlock The Locking Mechanism).**

## Step 21



- **Hp 625 Power Flex Cable Disconnected.**

## Step 22



- **Unlocking of Hp 625 Palm Rest, Through The HDD Bay.**

## Step 23



- **Disconnecting Touch Pad Flex Cable and Removing of Hp 625 Palm Rest.**


## Step 24



- **Hp 625 Palm Rest Removed.**



## Step 25

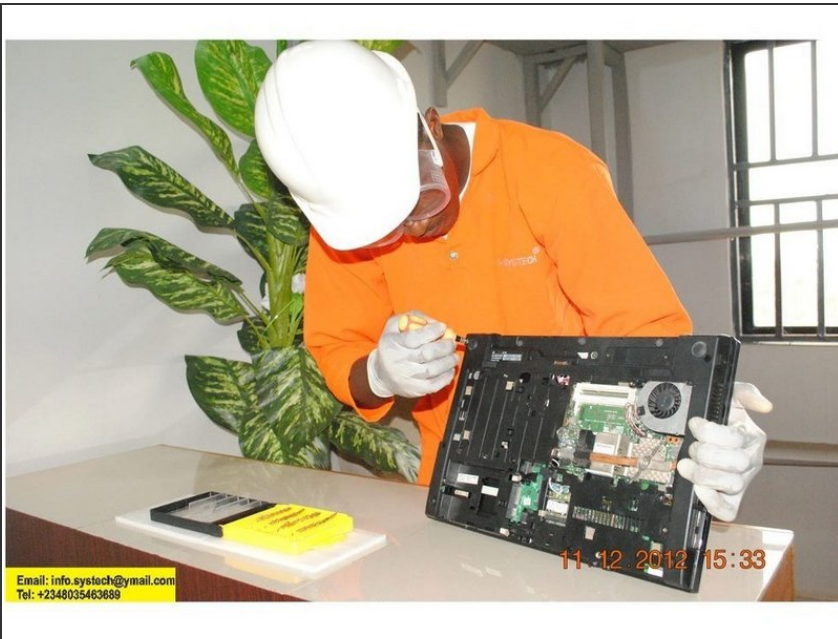

- **Unscrewing of Hp 625 System Casein, (16 or More Additional Screws Verify Very Well For Additional Screws Needed To Be Unscrewed Before Removing The Casein).**

## Step 26



- **Removing of Hp 625 Front Casein, (Firmly Pry the Casein, Starting from Any Edge).**

## Step 27



- **Hp 625 Front Casein Removed.**

## Step 28



- **Unscrewing of Hp 625 Thermal Fan, (1 Screw).**

## Step 29



- **Hp 625 Thermal Fan Removed.**

## Step 30



- **Unscrewing of Hp 625 Thermal Conductive Heatsink, (6 Screws).**



## Step 31



- **Hp 625 Thermal Conductive Heatsink Removed.**

## Step 32



- **Unlocking of Hp 625 AMD Processor From Socket, (Anti-Clockwise).**

## Step 33



- **Hp 625 AMD Processor Removed.**

## Step 34



- **Disconnecting of Hp 625 Wi-Fi Cables From Wireless Card.**

## Step 35



- **Hp 625 Wi-Fi Cables Disconnected.**

## Step 36



- **Disconnecting of Hp 625 HDD Card From Motherboard.**



## Step 37




- **Disconnecting All Cables of Hp 625 Connected To Motherboard.**

## Step 38



- **Unscrewing Hp 625 Motherboard.**

## Step 39

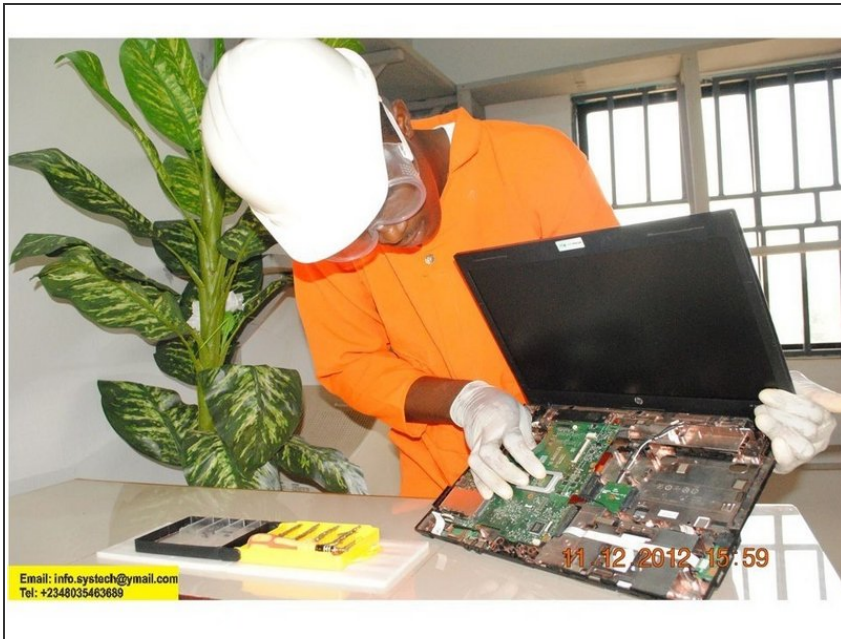


- Removing of Hp 625 Motherboard.

## Step 40




- Hp 625 Motherboard Removed.

## Step 41

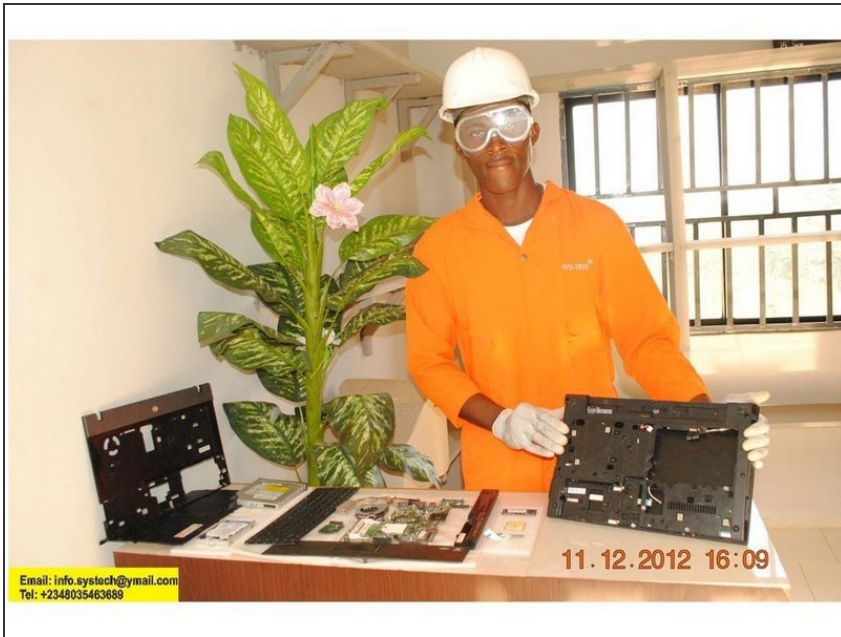

- **Complete Disassembled Parts and Components of Hp 625.**

## Step 42

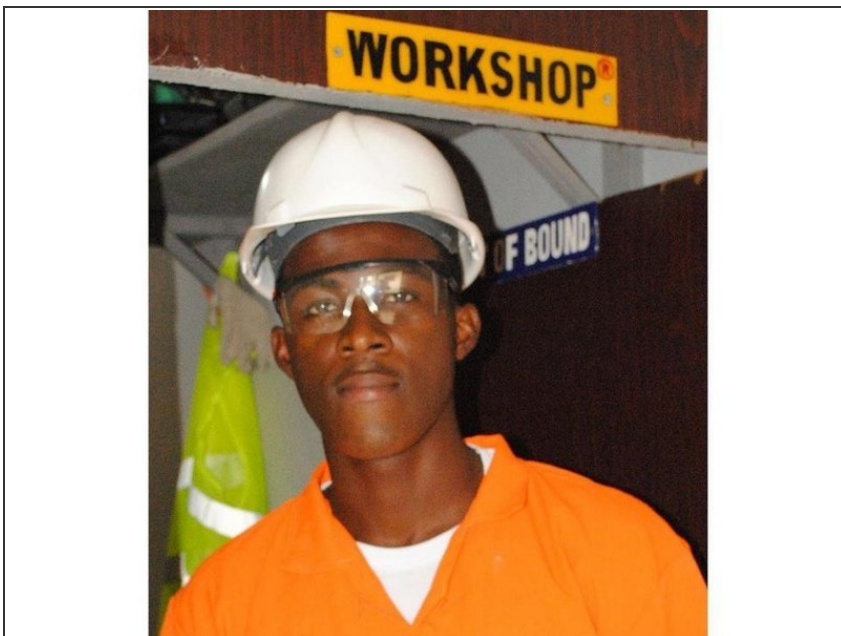

- **'Reparatur ist edel**

To reassemble your device, follow these instructions in reverse order.