



# Dell Latitude D620 Keyboard Replacement

Written By: Miguel Wong



---

# INTRODUCTION

Guide to removing the keyboard from the D620.



## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Keyboard



⚠ Power down the laptop and remove the battery.


- Open the laptop cover all of the way.

## Step 2



- Locate the notch under the cover at the top of the keyboard
- Using the spudger as a lever, lift the plastic covering
- Carefully remove the rest of the covering from right to left

## Step 3

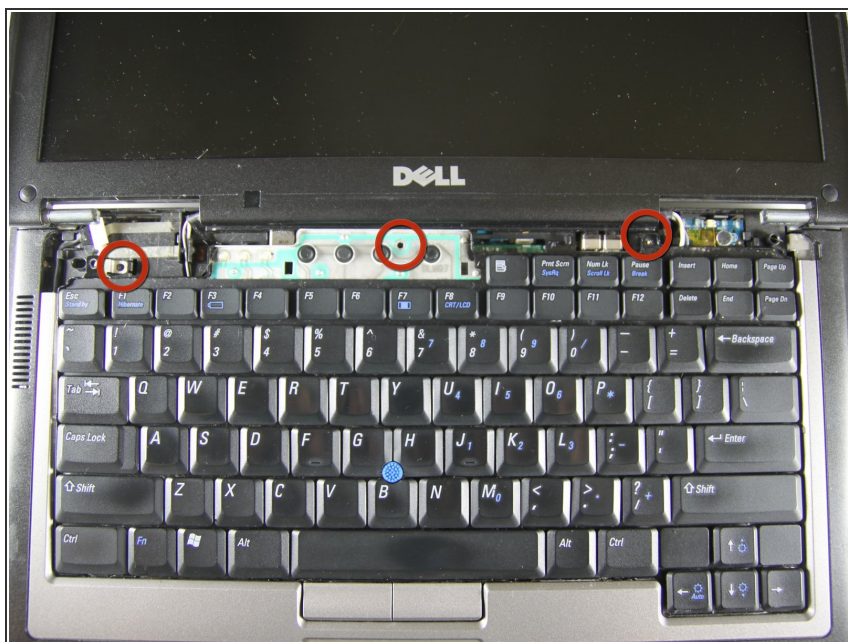

- Unscrew the top portion of the keyboard using a #00 screwdriver

## Step 4



- Hold keyboard from the top and gently pull towards the LCD screen to remove the keyboard from the case
- ⚠ Don't pull on the keyboard too forcefully because it is attached to the motherboard with a short, thin ribbon cable





## Step 5




- Once keyboard is out of the case, lay it face-down on the track pad

## Step 6

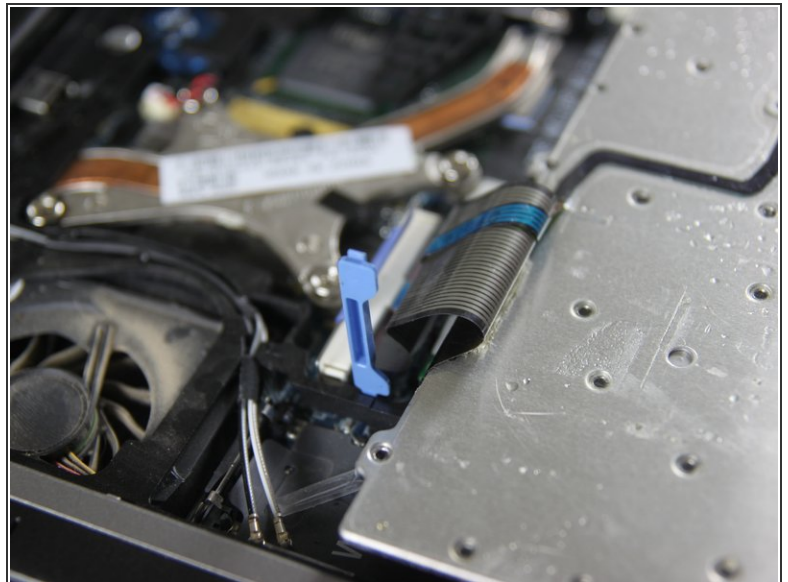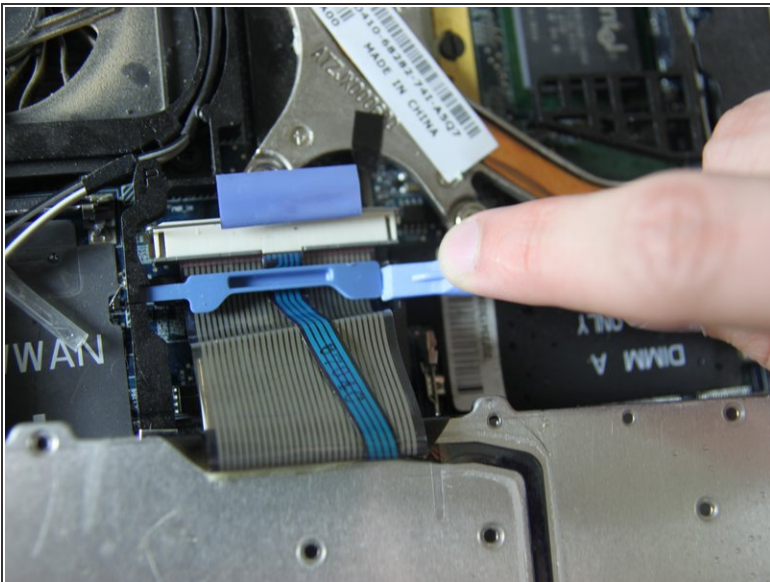

- Using a small spudger, pull back on the black bar to release the blue lever

## Step 7

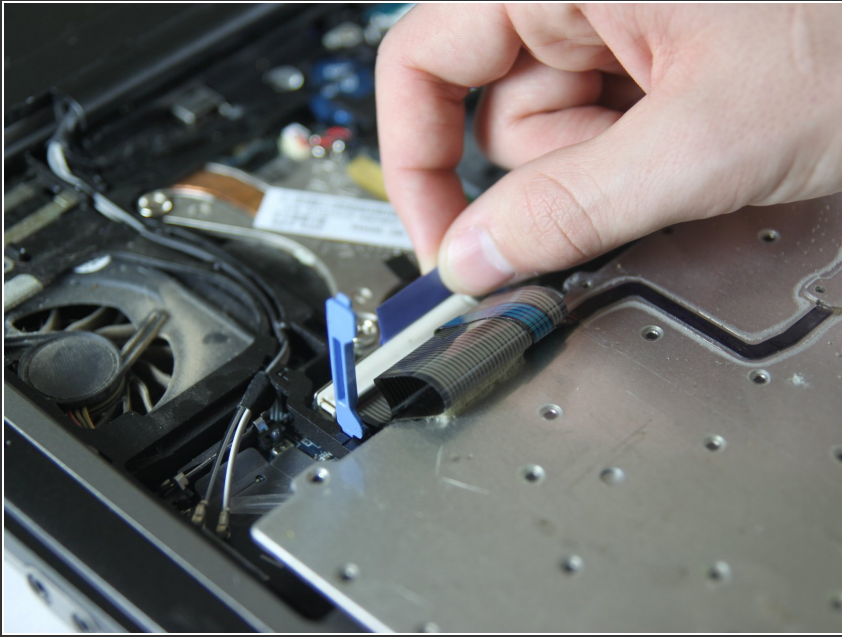

- Pull up on the metal bar connected to the socket to detach the ribbon cable

To reassemble your device, follow these instructions in reverse order.