



Canon PowerShot SX120 IS Screen Replacement

This guide will take you through the process of...

Written By: Romelia



INTRODUCTION

This guide will take you through the process of replacing a broken screen on a Canon PowerShot SX120 IS.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Turning the camera so the screen is facing you.
- Remove the two black 3.4 mm screws with a Phillips #00 screwdriver.

Step 2



- Put the camera with the lens facing up and turn it to the side so the DC IN A/V OUT DIGITAL is facing you.
- Remove the single black 3.4 mm screw with a Phillips #00 screwdriver.

Step 3



- Put the camera with the lens facing up, and turn it to the side where the battery cover is located.
- Remove the three black 3.4 mm screws with a Phillips #00 screwdriver.

Step 4



- Put the camera with the lens facing up, turn it to the side where the compartment of the battery (CR1220) for time/date is located.
- Remove the single black 3.4 mm screw with a Phillips #00 screwdriver.

Step 5



- Put the camera with the lens facing down, and turn it to the side where the DC IN A/V OUT DIGITAL cover and the silver lanyard attachment are located.
- Open the DC IN A/V OUT DIGITAL cover.
- Remove the single black 3.4 mm screw with a Phillips #00 screwdriver.

Step 6



- Turn the camera with the lens facing down.
- ⓘ Opening the camera can be challenging. Don't get discouraged if it takes you a few tries before the camera is opened.
- Use the iFixit opening tool to make leverage. Insert the opening tool in the seam where the front case and the back case assemble.
- Carefully put pressure on the opening tool so the cover can gradually open.
- Slowly slide the opening tool along the gap and around the edge of the camera.
- ⓘ When you are disassembling the back cover, the DC IN A/V OUT DIGITAL cover will also disassemble and fall off.

Step 7



- Remove the back cover and the DC IN A/V OUT DIGITAL cover from the camera.

Step 8 — Screen




- Remove the two screws that are attached directly below the screen with a #000 philips screw driver.

These screws secure the screen to the main frame of the camera.



- Remove the two 3.4 mm screws

Step 9

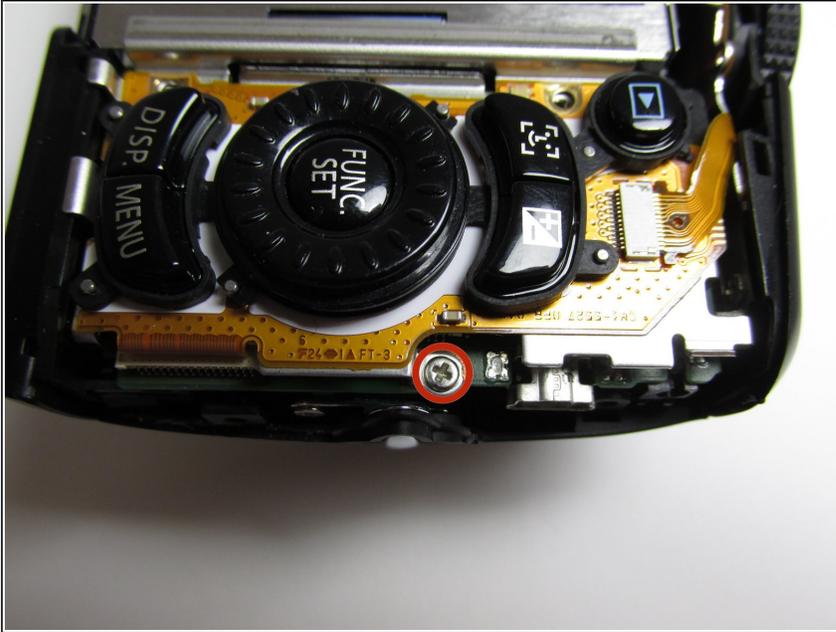

- Place the camera with the lens facing down. Find the screw that is located on the right side of the camera next to the function set button.
- Remove the 3.4mm screw with a #000 Phillips screwdriver.

Step 10

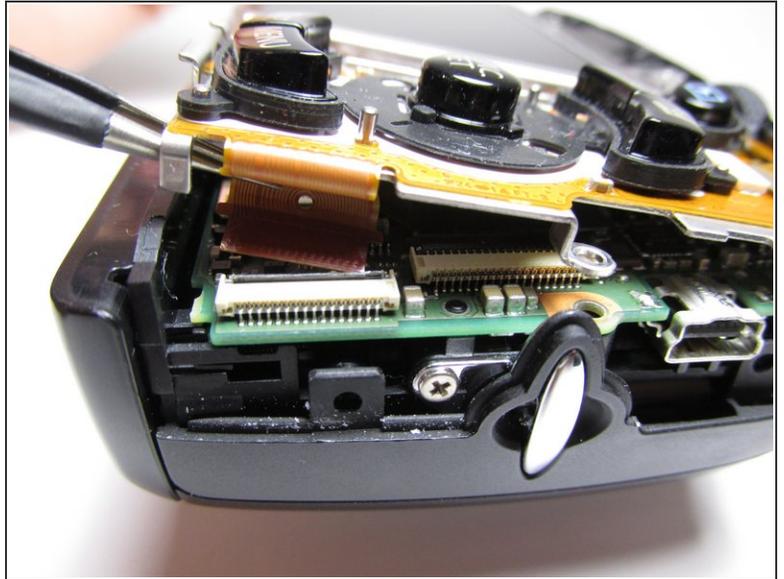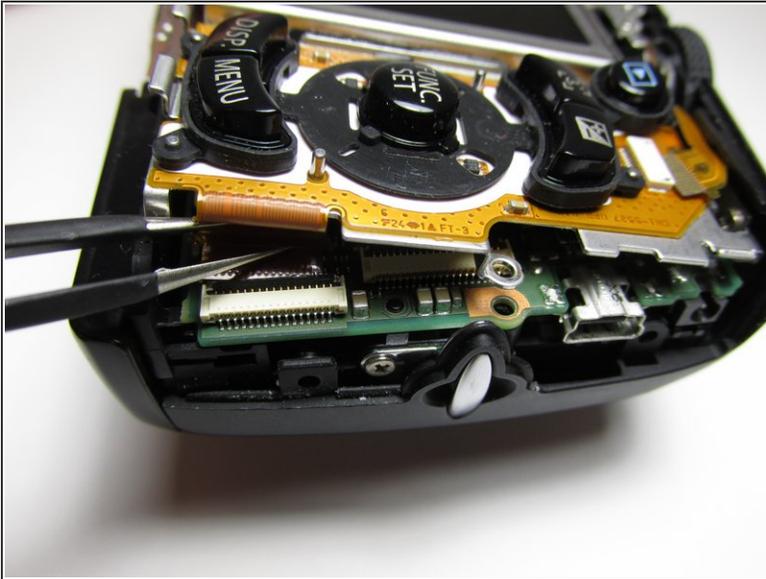

- Leave the camera facing down and locate the ribbon connector. The ribbon connector is placed below the main button panel on the bottom right side of the camera.
 - Lift the main button panel and gently hold the ribbon connector with the black tweezers.
- ⚠ While lifting and removing the ribbon connector with the tweezers make sure to not break the ribbon or the connection located on the bottom end of the ribbon. Remove the lower portion of the ribbon by using a spudger. You will be needing the ribbon connection to reassemble your device.**
- Once the ribbon has been entirely disconnected, lift the entire panel and place it above its original position. The panel will not be entirely removed only the lower half.

Step 11



- Place the camera with the lens facing down.
- Use the black tweezers to gently begin to lift the screen. Begin lifting the screen from the left side.
- Locate the ribbon connector that is attached to the screen and also the motherboard.
- Remove the ribbon from the motherboard connection by flipping up the small black clamp on the connector with a spudger.

To reassemble your device, follow these instructions in reverse order.