



Olympus Stylus 410 Slider Replacement

If the front slider on the camera is cracked or...

Written By: Jared Ruekberg



Step 2



- Gently pull on the bottom of the slider until it comes off the lower track.
- There is a little piece that connects the slider to the track. Be sure not to lose this as it is needed to put the slider back on.

Step 3



- Lift the slider up until it comes off the upper track.

Step 4



- The slider should now be free from the body of the camera.

To reassemble your device, follow these instructions in reverse order.