



# Disassembling KDDI Kyocera A5521K SD Card Slot

Written By: Dominic Grisafe



---

## INTRODUCTION

These instructions will demonstrate how to remove the SD card slot from the KDDI Kyocera A5521K.

---

### TOOLS:

- [Tri-point Y0 Screwdriver](#) (1)
-

## Step 1 — Disassembling KDDI Kyocera A5521K Battery



- Turn the phone over to expose the battery cover.
- Apply pressure to the back of the battery cover to slide it down.
- The battery cover is now separate from the phone.

## Step 2



- Remove the battery by pushing it up and out from the bottom.
- The battery, cover, and phone should now be separated.



## Step 5



- Rotate the phone 180 degrees.
- Carefully separate the back plate from the remainder of the phone.
- The back plate should now be detached from the rest of the phone.

## Step 6 — SD Card Slot



- Rotate the phone approximately 45 degrees to the right.
- Gently pry up the SD card slot with a spudger.

To reassemble your device, follow these instructions in reverse order.