



# Canon EOS Rebel T4i LCD Replacement

In this guide, users will learn how to repair the LCD screen in their camera.

Written By: Jordan Rabold



---

## INTRODUCTION

Using these instructions, we'll make it easy and simple for you to replace the LCD in your Canon camera.



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery



- Locate the battery cover at the bottom of the camera.
- Pull down on the black tab to open the cover.

## Step 2




- Push the grey tab on the right side of the battery.
- Remove the battery from the slot.

## Step 3 — LCD



- Remove the six screws on the housing of the LCD.
  - Four 3.1mm Phillips screws on the side with the hinge.
  - Two 2.7mm Phillips screws



## Step 4

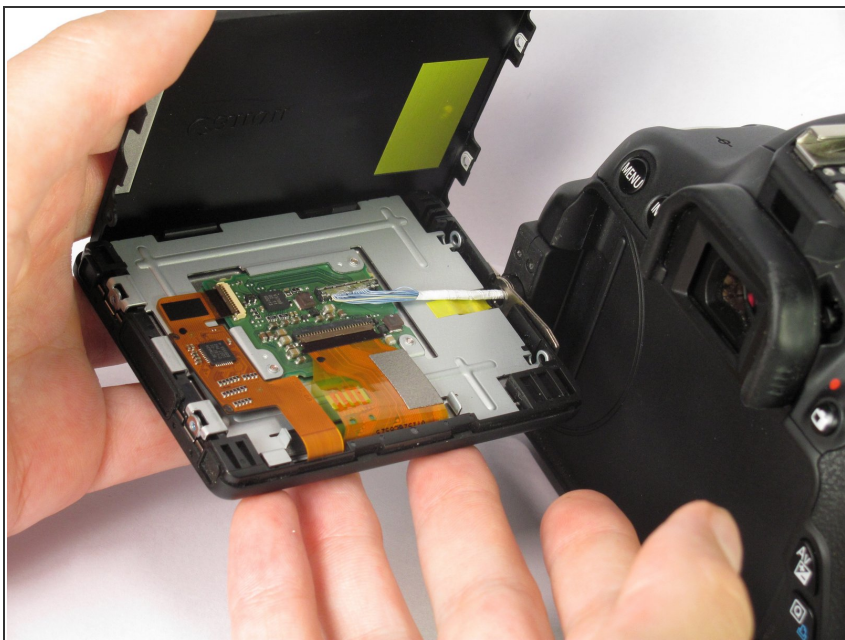

- Remove the plastic back of the LCD.



## Step 5

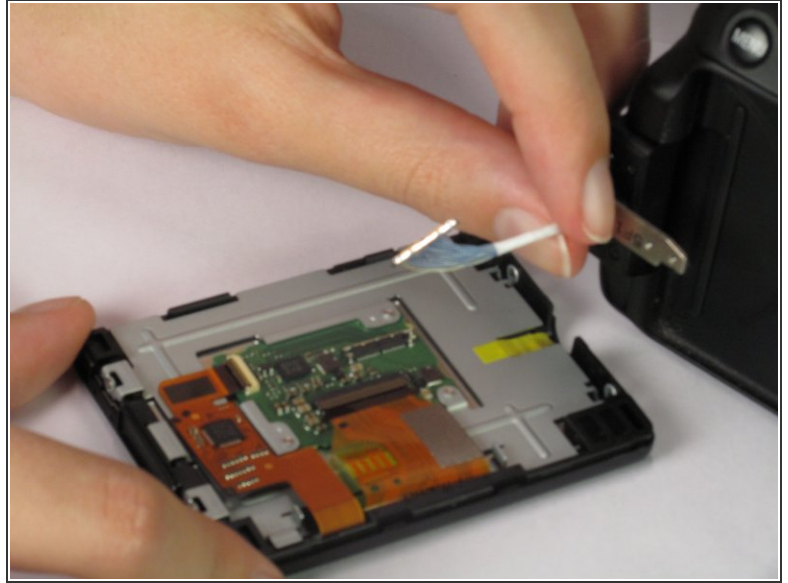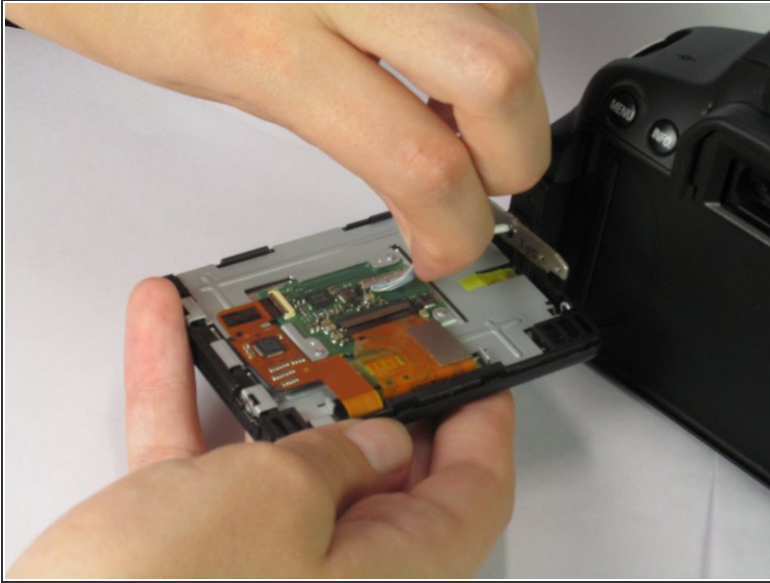

- Unplug the blue cable attached to the back of the LCD.

To reassemble your device, follow these instructions in reverse order.