




HP dv5-1125nr Disk Drive Replacement

This drive will show you how to replace your optical disk drive.

Written By: Nick Loey

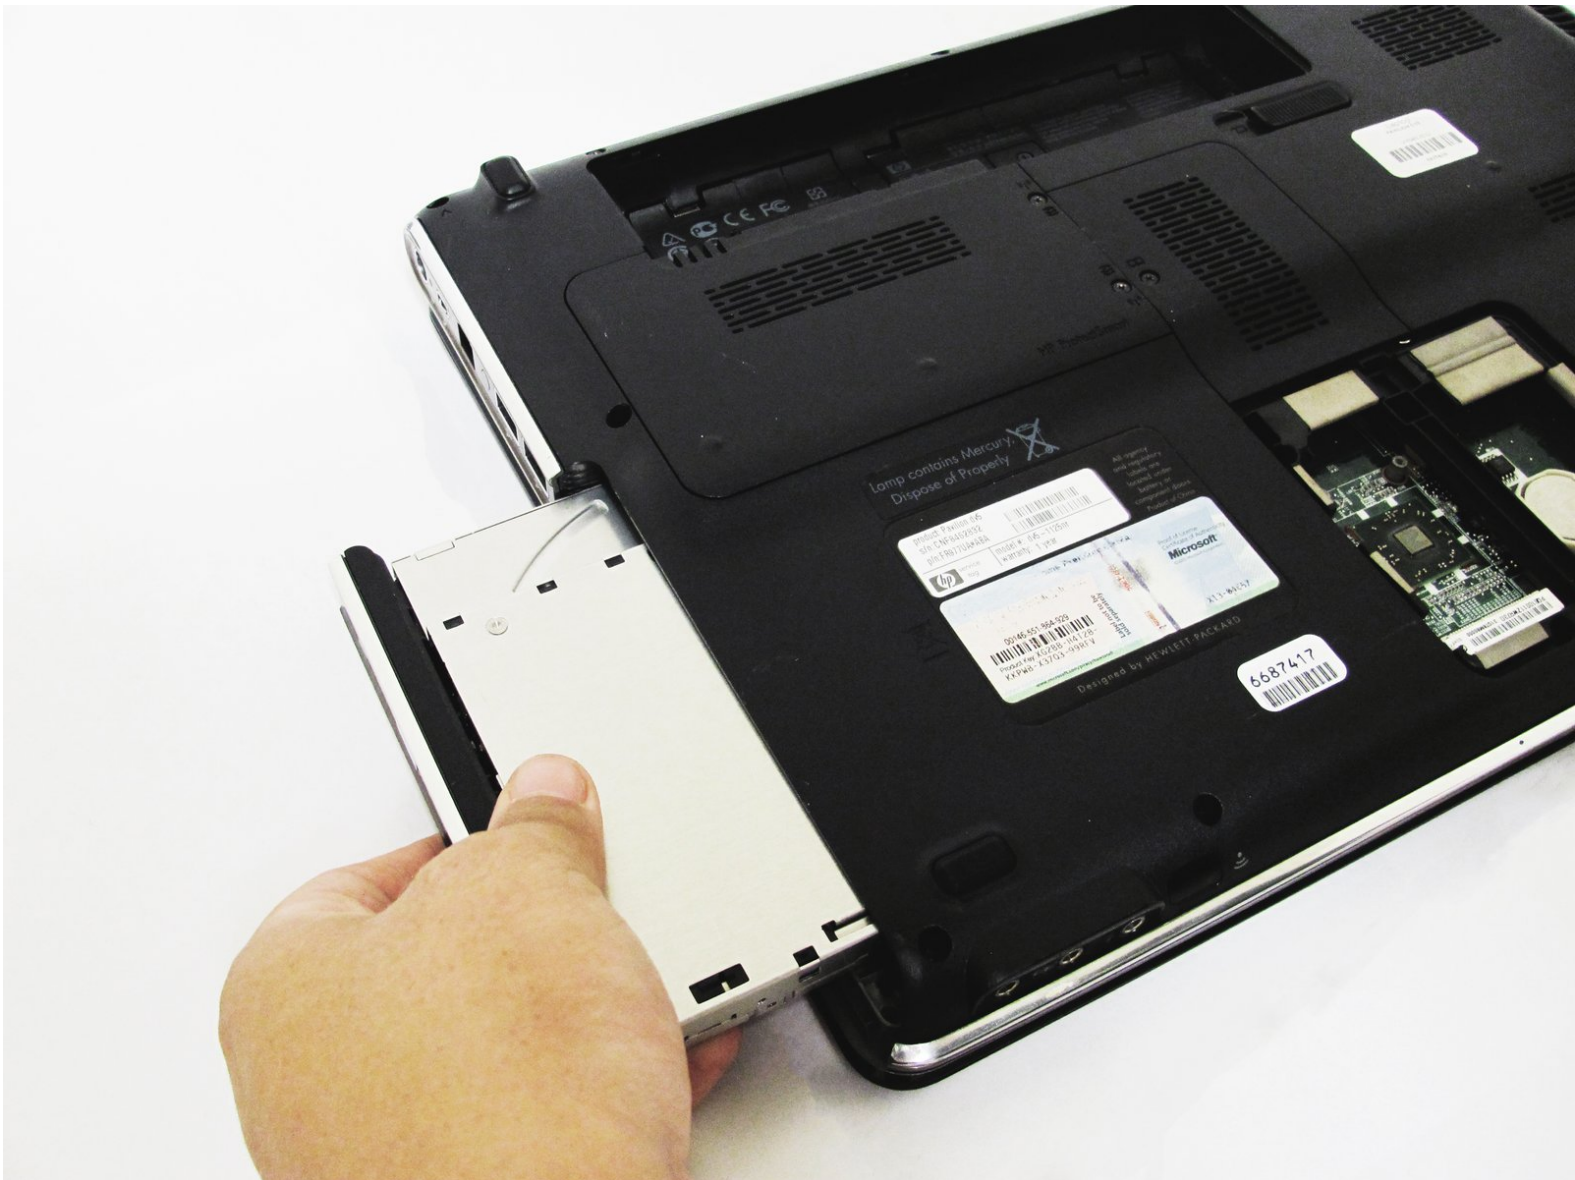

INTRODUCTION


Replacing your optical drive is not a complex process. Follow this guide to learn how!



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

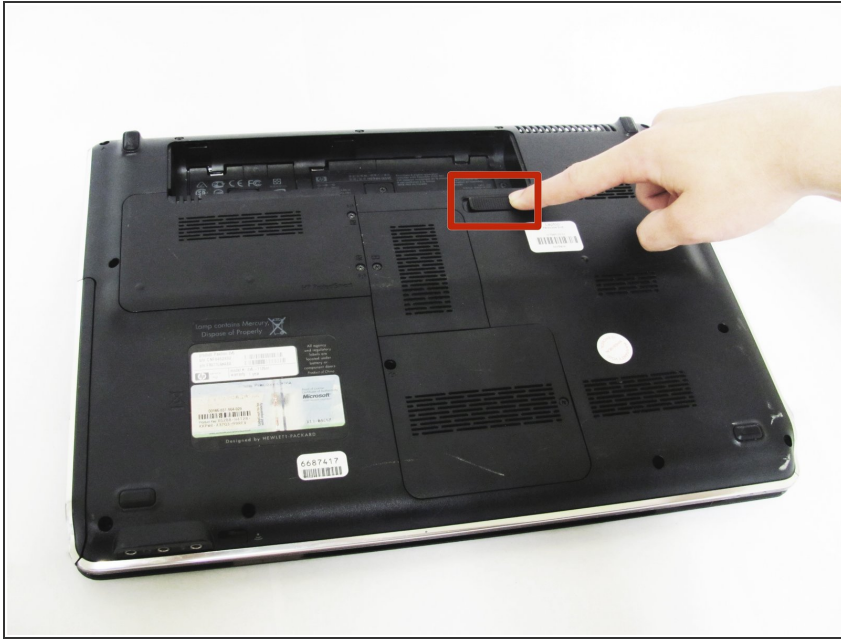

- ❗ Ensure your computer is shut down. Removing the battery while the laptop is still on may corrupt your files. Remove any power adapters and cords connected to the laptop body.
- Slide the switch to the left until the release clicks.

Step 2

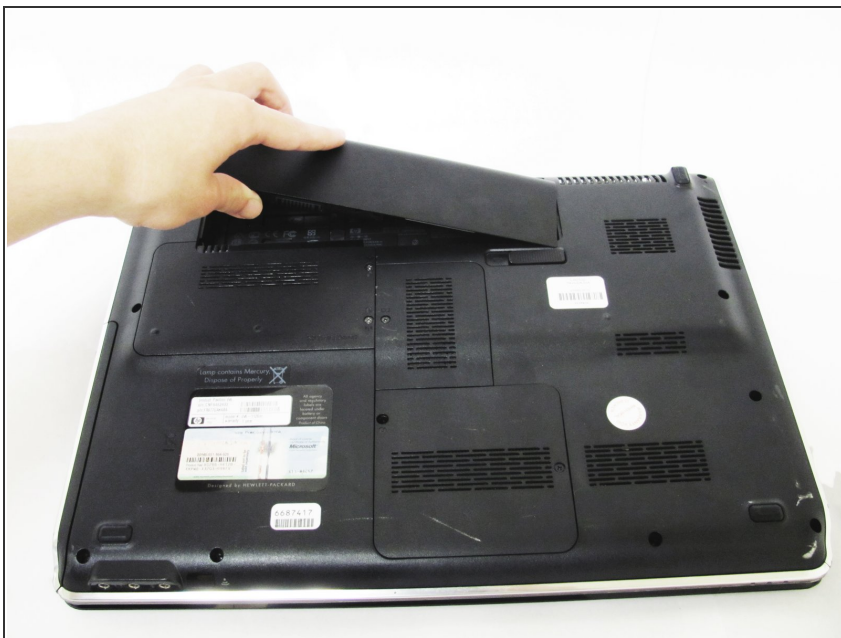



- Remove the battery.
- ❗ The release switch may need to be held down while removing the battery.

Step 3 — Disk Drive



- Locate two 3mm Phillips screws on the CMOS panel cover and remove them with a Phillips #00 screwdriver.
- Remove the CMOS panel cover.

Step 4

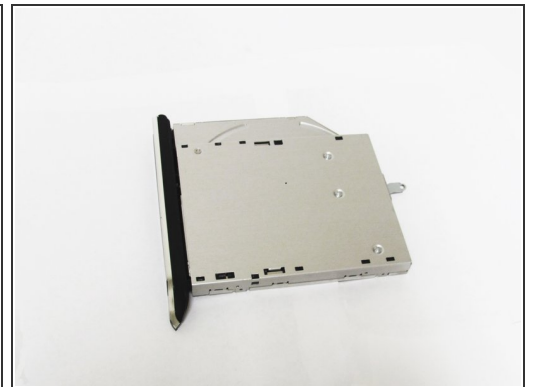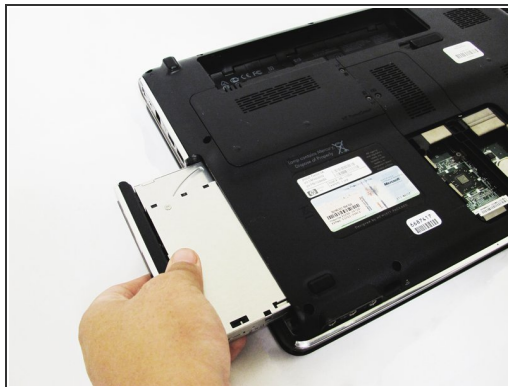

- The optical drive is now ready for removal. Using a plastic removal tool, lift the optical drive away from your computer.
- Using your hands, slide the remainder of the drive out of the computer.

To reassemble your device, follow these instructions in reverse order.