



Asus F6A-X2 Hard Drive Replacement

A step-by-step guide for replacing the laptop's hard drive.

Written By: Jonathan



INTRODUCTION

The hard drive (HD) is where all your files are stored. Be sure you have a compatible hard drive when replacing it. Be very gentle when handling the hard drive, because any damage to the exterior may result in ruined data.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Phillips #3 Screwdriver](#) (1)
-

Step 1 — Battery



⚠ Remove any power cords and turn the laptop off. Attempting to replace part of the laptop while power is running through it may cause electrocution or damage to the device.

- Flip laptop face down and rotate so the battery is facing toward you.
- i** The battery is not shown in this picture.
- To remove the battery, place one finger on each of the two black slide tabs. Push each tab toward the center of the laptop to release the lock.
- Slide the battery toward you and lift it out of the laptop.

Step 2 — Back Access Panel



- With the laptop facing down, rotate it so the battery pack is facing away from you.
- Remove the six 1.5 mm Phillips #1 screws on the back panel of the laptop.

Step 3



- Insert a finger into one of the slots on the bottom panel.
- Gently lift the upwards, and the back panel of the laptop will come off easily.

Step 4 — Hard Drive



- Rotate the laptop 90 degrees towards you so that you are looking at the empty battery compartment.

Step 5



- Remove the 2.0 mm Phillips #3 screw located beneath the battery compartment.

Step 6



- Lay the laptop flat on its back.
- Gently pull left on the black tab, located on the left side of the hard drive, until it pops out.
- Slowly lift the tab up and pull the hard drive out of the laptop.

To reassemble your device, follow these instructions in reverse order.